

Replacing heating cable in cold room door

- Make sure power to the heating wire is cut off!
- Metal is very sharp so wear glove.

1) Cut gasket in top of corner, where heating cable box is.



2) Disconnect heating cable from the box and remove it from gasket.





- 3) Cut bottom gasket on the corner.



Remove heating cable from bottom gasket



- 4) After heating cable removal, insert new cable. Connect it to the box. Glue cut parts of gasket.