

AIR CONDITIONER

refrigerant **R32** INVERTER

Wall mounted type

# **SERVICE MANUAL**

## For Cold Climate Region



Fuji Furukawa Engineering & Construction Co.Ltd.

#### Notices:

- Product specifications and design are subject to change without notice for future improvement.
- For further details, please check with our authorized dealer.

#### Trademarks

"AIRSTAGE Mobile" is a trademark of FUJITSU GENERAL LIMITED.

Android and Google Play are trademarks of Google LLC.

App Store is a service mark of Apple Inc., registered in the U.S. and other countries.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

CONTENTS

**1. GENERAL INFORMATION** 

**2. TECHNICAL DATA AND PARTS LIST** 

**3. TROUBLESHOOTING** 

**4. CONTROL AND FUNCTIONS** 

**5. FILED WORKING** 



### **1. GENERAL INFORMATION**

#### CONTENTS

## **1. GENERAL INFORMATION**

1. Specifications	01-1
- 1-1. Indoor unit	01-1
1-2. Outdoor unit	01-3
2. Dimensions	01-4
2-1. Indoor unit	01-4
2-2 Outdoor unit	

#### 1. Specifications

## 1-1. Indoor unit

Turne				Wall mounted			
туре						Inverter, Heat pump	
Model name					RSGORKMCEN	RSG12KMCEN	RSG14KMCEN
Rower oupply					KOOUSKWOLN	220 \/- 50 H7	K3014KMCEN
Power supply	Power supply					230 V~ 50 Hz	
Available voltage rang	e					198—264 V	
				kW	2.5	3.4	4.2
		Casling	Rated	Btu/h	8,500	11,600	14,300
		Cooling	Min Max	kW	1.00—3.80	1.00-4.20	1.20-4.65
Canacity			IVIIII.—IVIAX.	Btu/h	3,400—13,000	3,400—14,300	4,100—15,900
oupdoity			Rated	kW	3.2	4.0	5.4
		Heating		Btu/h	10,900	13,600	18,400
		-	Min.—Max.	KVV Btu/b	0.9-5.7	3 100 - 20 100	0.9-0.4
			Rated	Diu/II	0.54	0.80	1 10
		Cooling	Min.—Max.		0.21-1.08	0.21-1.25	0.26-1.25
Input power			Rated	kW -	0.72	0.96	1.40
		Heating	Min.—Max.	1 1	0.180-2.350	0.180—1.800	0.185—1.900
Current		Cooling	Rated	Δ	2.5	3.6	4.9
ounone		Heating	Tuiou	~	3.3	4.3	6.2
Energy efficiency class		Cooling				A++	
Linergy enterency ender		Heating (Average)				A++	
Pdesian		Cooling		kW	2.5	3.4	4.2
0550		Heating (Average)			2.5	3.6	4.2
SCOP		Heating (Average)	1	kWh/kWh	C.0	1.5 1.6	1.3
			,		135	159	201
Annual energy consun	nption	QHE (Average)		kWh/a	761	1,096	1,278
EER		Cooling		100000	4.63	4.25	3.82
COP		Heating		KVV/KVV	4.44	4.17	3.86
Sensible capacity		Cooling		kW	2.37	2.74	3.26
Power factor		Cooling		%	94	96	97
		Heating		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	95	97	98
Moisture removal		Casting		L/h (pints/h)	1.3 (2.3)	1.8 (3.2)	2.1 (3.7)
Maximum operating cu	ırrent * <sup>1</sup>	Looling		A	0.0	7.0	8.5
		Tieaung	НІСН		670	690	770
		Cooling	MED		530	560	600
			LOW	1 1	410	450	450
	Airflow roto		QUIET		280	280	280
Ean	Almow rate	Heating	HIGH	— m³/h	750	780	820
			MED		620	630	650
			LOW		510	520	520
	T OI		QUIET		290	290	340
	Type × Qty			10/		Crossflow fan × 1	
			нісн	VV	40	42	43
			MED		36	37	40
		Cooling	LOW	1 1	30	32	33
	2		QUIET		20	20	20
Sound pressure level			HIGH		42	43	44
		Heating	MED		38	39	40
		lioung	LOW		33	35	35
		Cooling	QUIET		55	56	58
Sound power level		Heating	HIGH	dB (A)	57	58	60
		liouang				Main 1: 210 × 670 × 26.6	
		Dimensions (H × V	V × D)	mm	Main 2: 112 × 670 × 20.0 Sub 1: 84 × 670 × 13.3 Man 1: 1.2		
Lis et eucleen nen		Fin pitch				Main 2: 1.1	
Heat exchanger						Sub 1: 1.4 Main 1: 2 x 10	
		Rows × Stages				Main 1.2 × 10 Main 2.2 × 7	
		literio a clugeo				Sub 1: 1 × 4	
		Pipe type			Copper tube		
		Fin type				Aluminum	
		Material				Polystyrene	
Enclosure		Color			White		
		Not			A	Approximate color of Munsell N9.2	5/
(H × W × D)		Gross		mm		27U × 034 × 215 277 × 014 × 222	
		Net				10.0	
Weight		Gross		kg		13.0	
		Sizo	Liquid	man (in)		Ø6.35 (Ø1/4)	
Connection pipe		SIZE	Gas	(in) (in)		Ø9.52 (Ø3/8)	
		Method				Flare	
Drain hose		Material				PP+HDPE	`
		I ip diameter		mm	(	013.8 (I.D.), 015.8 to 016.7 (O.D	.)
Operation range		Cooling				18 to 32	
operation range		Heating		°C.		16 to 30	
Remote controller					Wireless (Or	tion: Wired, Mobile ann*3 [AIRST	AGE Mobile1)

GENERAL INFORMATION GENERAL INFORMATION

Turne	Wall mounted			
туре				
Model name	RSG09KMCEN	RSG12KMCEN	RSG14KMCEN	
NOTES:				
<ul> <li>Specifications are based on the following conditions:</li> </ul>				

- Cooling: Indoor temperature of 27°CDB/19°CWB, and outdoor temperature of 35°CDB/24°CWB.
   Heating: Indoor temperature of 20°CDB/15°CWB, and outdoor temperature of 7°CDB/6°CWB.
- Pipe length: 5.0 m, Height difference: 0 m. (Between outdoor unit and indoor unit.)
   Protective function might work when using it outside the operation range.
- \*1: Maximum operating current is the total current of the indoor unit and the outdoor unit.
- \*2: Sound pressure level:
- Measured values in manufacturer's anechoic chamber. \_
- Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.
   \*<sup>3</sup>: Available on Google Play<sup>™</sup> store or on App Store<sup>®</sup>.
   This data is based on EN 14511 standard.

#### 1-2. Outdoor unit

Fan

Туре					Inverter, Heat pump	
Model name	lodel name			ROG09KMCEN	ROG12KMCEN	ROG14KMCEN
Power supply					230 V~ 50 Hz	
Power supply intake					Outdoor unit	
Available voltage ran	ge				198—264 V	
Starting current	-		A	3.3	4.3	6.2
	A := 0 + -	Cooling	3.0	1,770	2,210	2,450
	Airtiow rate	Heating	m³/n	1,313	1,335	2,330
-an	Type × Qty				Propeller fan × 1	
	Motor output		W	23	4	9
	+	Cooling		48	4	9
sound pressure leve	-	Heating	dB (А)	4	3	49
Cound notice lovel		Cooling		5	i9	61
Sound power level		Heating	шь (A)	5	i6	59
		Dimensions		Main 1: 504 × 881 × 18.19	Main 1: 588 × 881 × 18.19	Main 1: 672 × 881 × 18.19
		$(H \times W \times D)$	mm	Main 2: 504 × 851 × 18.19	Main 2: 588 × 851 × 18.19	Main 2: 672 × 851 × 18.19
liet evelopment in a		Fin pitch	7		1.3	
		Pows x Stages	Rows x Stages		Main 1: 1 × 28	Main 1: 1 × 32
ieat exchanger type		Nows ~ Stages	Nows ~ Stages		Main 2: 1 × 28	Main 2: 1 × 32
		Pipe type	Pipe type		Copper	
		Fin type	Type (Material)	Aluminum		
		Тптурс	Surface treatment	PC fin		
Compressor	Туре				DC twin rotary	
Joinpiessoi	Motor output		W	810	900	1,060
Refrigerant		Type (Global warmi	ng potential)		R32 (675)	
tonigorant		Charge	g	850	940	1,120
Pefrigerant oil		Туре		FW	68S	RmM68AF
temgerant on		Amount	cm <sup>3</sup>	3	50	400
		Material			Steel sheet	
Enclosure		Color		Beige		
		COIOI		Appro	ximate color of Munsell 10YR	7.5/1.0
Dimensions	Net		mm	542 × 799 × 290	632 × 799 × 290	716 × 820 × 315
H × W × D)	Gross			602 × 940 × 375	692 × 940 × 375	776 × 961 × 450
Neight	Net		ka	33	36	42
a cigili	Gross		ку	37	41	47
	Size	Liquid	mm (in)		Ø6.35 (Ø1/4)	
	0.20	Gas			Ø9.52 (Ø3/8)	
	Method			Flare		

15

20

15

20

-10 to 43

-25 to 24

#### Operation range

Connection pipe

NOTES:

Pre-charge length

Additional charge

Max. height difference

Max. length

Specifications are based on the following conditions:
 Cooling: Indoor temperature of 27°CDB/19°CWB, and outdoor temperature of 35°CDB/24°CWB.
 Heating: Indoor temperature of 20°CDB/15°CWB, and outdoor temperature of 7°CDB/6°CWB.
 Pipe length: 5 m, Height difference: 0 m.
 Protective function might work when using it outside the operation range.

Cooling

Heating

• \*: Sound pressure level

- Measured values in manufacturer's anechoic chamber.

- Because of the surrounding sound environment, the sound levels measured in actual installation conditions might be higher than the specified values here.

m

g/m

°C

#### 2. Dimensions

#### 2-1. Indoor unit

#### Models: RSG09KMCEN, RSG12KMCEN, and RSG14KMCEN

Unit: mm



#### Installation space requirement

Provide sufficient installation space for product safety.

Unit: mm

IATION





## 2-2. Outdoor unit Model: ROG09KMCEN

Unit: mm











290

68

16

Side view

Front view







Bottom view



Side view (Valve part)

#### Model: ROG12KMCEN







Side view

Front view



30

184



Bottom view

Side view (Valve part)

#### Model: ROG14KMCEN

ALERAL MATION







Bottom view

Side view (Valve part)

184



#### CONTENTS

1. Precautions	02-1
2. Indoor unit parts list	02-2
2-1. Models: RSG09KMCEN, RSG12KMCEN, and RSG14KMCEN	
3. Outdoor unit parts list	02-6
3-1. Model: ROG09KMCEN	
3-2. Model: ROG12KMCEN	02-10
3-3. Model: ROG14KMCEN	02-14
4. Accessories	02-18
4-1. Indoor unit	02-18
4-2. Outdoor unit	02-18
5. Optional parts	02-19
5-1. Indoor unit	02-19
6. Refrigerant system diagrams	02-21
6-1. Models: ROG09KMCEN and ROG12KMCEN	02-21
6-2. Model: ROG14KMCEN	
7. Wiring diagrams	
7-1. Indoor unit	
7-2. Outdoor unit	02-24
8. PC board diagrams	
8-1. Models: RSG09KMCEN, RSG12KMCEN, and RSG14KMCEN	02-26
8-2. Models: ROG09KMCEN and ROG12KMCEN	
8-3. Model: ROG14KMCEN	02-28

#### 1. Precautions

When you start servicing, pay attention to the following points. For detailed precautions, refer to the installation manual of the products.

#### 

- Service personnel
  - Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification.
  - Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.
  - Servicing shall be performed only as recommended by the manufacturer.
- Work
  - Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. When repairing the refrigerant system, refer to the precautions written in the installation manual of the products before you start servicing.
  - Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.
  - All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out.
  - Work in confined spaces shall be avoided.
  - The area around the workspace shall be sectioned off.
  - Ensure that the conditions within the area have been made safe by control of flammable material.
  - Electric shock may occur. After turning off the power, always wait 5 minutes before touching electrical components.
  - Do not touch the fins of the heat exchanger. Touching the heat exchanger fins could result in damage to the fins or personal injury such as skin rupture.
  - Do not place any other electrical products or household belongings under the product.
  - Condensation dripping from the product might get them wet, and may cause damage or malfunction to the property.
- Checking for presence of refrigerant
  - The area shall be checked with an appropriate refrigerant leak detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres.
  - Ensure that the leak detector being used is suitable for use with flammable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.
- Service parts information and design are subject to change without notice for product improvement.
- For the latest information of the service parts, refer to our Service Portal. https://fujitsu-general.force.com/portal/
- Precise figure of the service parts listed in this manual may differ from the actual service parts.

#### 2. Indoor unit parts list

#### 2-1. Models: RSG09KMCEN, RSG12KMCEN, and RSG14KMCEN



AL DATA TS LIST

ltem no.	Part no.	Part name	Service part
1	9388142029	Bracket panel	•
2	9333951003	Louver spring	•
3	9333608006	Bush	•
4	9387714067	Stepping motor holder assy	•
5	9901011092	Stepping motor	•
6	9387590258	Drain pan total assy	•
7	9387476002	Screw cover	•
8	9387479041	Horizontal louver assy	•
9	9387597066	Wire cover assy	•
10	9387478068	Under cover R	•
11	9384977076	Front panel total assy	•
12	9333704005	Grille clamper R	•
13	9323694026	Intake grille assy	•
14	9333719009	Grille clamper L	•
15	9387473018	Air filter	•
16	9387477061	Under cover L	•
17	9316177017	Drain cap	•
18	9316904002	Drain hose assy	•
19	9318912005	Remote controller holder	•
20	9383712098	Remote controller	•
а	_	Stepping motor holder	

Fuji Furukawa Engineering & Construction Co.Ltd.

#### Base, evaporator, and control



ltem no.	Part no.	Part name	Service part
50	9387587227	Base assy	•
51	9388139012	Pipe bracket A	•
52	9334143001	Under cover C	•
53	9334137000	Screw cover	•
54	9383765032	WLAN adapter holder assy	•
	9711141972	Main PCB (09 model)	•
55	9711141989	Main PCB (12 model)	•
	9711141996	Main PCB (14 model)	•
56	9901013010	Terminal	•
57	9383729041	Wire cover assy	•
58	9711146021	Display assy	•
59	9711147028	Indicator PCB	•
60	9603688028	DC fan motor (09 model)	•
00	9603492021	DC fan motor (12—14 model)	•
61	9387589047	Motor case assy	•
62	9317250009	Air clean filter assy	•
63	9332911008	Electric filter holder	•
64	9387593297	Evaporator total assy	•
65	9901147043	Thermistor assy	•
66	9387467017	Room thermistor holder	•
67	9333628004	Bearing D assy	•
68	9333606033	Crossflow fan assy	•
_	9901010019	Wire with connector	•
		(CN6 on Main PCB—WLAN adapter)	
a		Box shield	
D			
c	—	PCB holder A	
d	—	Control cover	
e	—	Display case assy	
t		Motor case	
g	I —	Motor cover	I —

#### 3. Outdoor unit parts list



ltem no.	Part no.	Part name	Service part
1	9322556028	Top panel assy	•
2	9377840011	Protective net assy	•
3	9322553287	Motor bracket assy	•
4	9322552020	Cabinet right assy	•
5	9322570000	Switch cover assy	•
6	9322138002	Thermistor holder	•
7	9709688298	Main PCB (Service)	•
8	9900850012	Thermistor (Outdoor temp.)	•
9	9900935047	Thermistor assy	•
10	9323550032	Base assy	•
11	9384265012	Fan guard	•
12	9322555311	Front panel assy	•
13	0700103070	Nut	•
14	9322136008	Propeller fan	•
15	9603553005	DC fan motor	•
16	9323834019	Heat exchanger unit	•
а	_	Hair pin cushion	—

Fuji Furukawa Engineering & Construction Co.Ltd.

ζ

R

Ą



e

 $(\mathbb{C}$ 

50

\*A





ltem no.	Part no.	Part name	Service part
50	9322431004	Compressor assy	•
51	9322445018	4-way valve assy	•
52	9970194023	Solenoid	•
53	9970095122	Expansion valve coil	•
54	9322463005	Pulse motor valve assy	•
55	9322474001	2-way valve assy	•
56	9322475008	3-way valve assy	•
57	9324024006	Sound insulator B	•
58	9322537003	Sound insulator H	•
59	9323045002	Sound insulator V	•
60	9322536006	Sound insulator F	•
61	9322386007	Cushion rubber	•
62	9313437008	Nut special assy	•
	9901059049	Base pan heater	•
	9900934040	Wire with connector (Fuse holder)	•
а	—	Valve bracket	—
b	_	Muffler	—

#### 3-2. Model: ROG12KMCEN

#### Exterior parts and Chassis



ltem no.	Part no.	Part name	Service part
1	9322556066	Top panel assy	•
2	9377854025	Protective net assy	•
3	9322327000	Thermistor holder	•
4	9322552099	Cabinet right assy	•
5	9322570024	Switch cover assy	•
6	9323550032	Base assy	•
7	9709688304	Main PCB (Service)	•
8	9900850012	Thermistor (Outdoor temp.)	•
9	9900935054	Thermistor assy	•
10	9384273017	Fan guard	•
11	9384851000	Front panel assy	•
12	0700103070	Nut	•
13	9322150004	Propeller fan	•
14	9603601003	DC fan motor	•
15	9322553331	Motor bracket assy	•
16	9323834026	Heat exchanger unit	•
а	_	Hair pin cushion	—

Fuji Furukawa Engineering & Construction Co.Ltd.

#### Compressor



AL DATA TS LIST

AND

ltem no.	Part no.	Part name	Service part
50	9322433008	Compressor assy	•
51	9322445018	4-way valve assy	•
52	9970194023	Solenoid	•
53	9970095122	Expansion valve coil	•
54	9322463005	Pulse motor valve assy	•
55	9322474001	2-way valve assy	•
56	9322475008	3-way valve assy	•
57	9323045002	Sound insulator V	•
58	9322537003	Sound insulator H	•
59	9324024006	Sound insulator B	•
60	9322847003	Sound insulator F	•
61	9322386007	Cushion rubber	•
62	9313437008	Nut special assy	•
	9901059025	Base pan heater	•
	9900934040	Wire with connector (Fuse holder)	•
а	_	Valve bracket	—
b	_	Muffler	—

#### 3-3. Model: ROG14KMCEN





ltem no.	Part no.	Part name	Service part
1	9322556073	Top panel assy	•
2	9334053003	Protective net assy	•
3	9322327000	Thermistor holder	•
4	9322552082	Cabinet right assy	•
5	9322570031	Switch cover assy	•
6	9900850012	Main PCB (Service)	•
7	9900850012	Thermistor (Outdoor temp.)	•
8	9900935061	Thermistor assy	•
9	9900985011	Compressor thermistor	•
10	9323920002	Base assy	•
11	9810028006	Thermistor stopper	•
12	9384273017	Fan guard	•
13	9322555304	Front panel assy	•
14	0700103070	Nut	•
15	9322150004	Propeller fan	•
16	9603601003	DC fan motor	•
17	9322553218	Motor bracket assy	•
18	9323834118	Heat exchanger unit	•
а	_	Hair pin cushion	

#### Compressor



LIST

AND I

Item no.	Part no.	Part name	Service part
50	9810521002	Compressor	•
51	9970095122	Expansion valve coil	•
52	9322462008	Pulse motor valve assy	•
53	9970194023	Solenoid	•
54	9970205002	4-way valve	•
55	9322459008	Joint pipe (Condenser)	•
56	9322791009	Suction pipe assy	•
57	9383949036	Discharge pipe assy	•
58	9322474001	2-way valve assy	•
59	9322850010	3-way valve assy	•
60	9324014014	Sound insulator B	•
61	9322529008	Sound insulator F	•
62	9322501004	Sound insulator H	•
63	9323045002	Sound insulator V	•
64	9322824004	Sound insulator K	•
65	9322386007	Cushion rubber	•
66	9313437008	Nut special assy	•
	9900350017	Base pan heater	•
	9900934040	Wire with connector (Fuse holder)	•
	9900186029	Pressure switch	•
	9710542015	Wire assy (Pressure switch)	•
а	—	Valve bracket	—
b	—	Muffler	—
С	—	Joint pipe (3-way valve)	—

#### 4. Accessories

#### 4-1. Indoor unit

#### Models: RSG09KMCEN, RSG12KMCEN, and RSG14KMCEN

Part name	Exterior	Qty	Part name	Exterior	Qty
Operation manual		1	Tapping screw (large)	(C)	5
Installation manual		1	Tapping screw (small)	())))))>	2
Wall hook bracket		1	Cloth tape		1
Remote controller	<u>المجمرا</u>	1	Filter holder		2
Remote controller holder		1	Air cleaning filters		1
Battery		2			

#### 4-2. Outdoor unit

#### Models: ROG09KMCEN, ROG12KMCEN, and ROG14KMCEN

Part name	Exterior	Qty	Part name	Exterior	Qty
Installation manual		1			

#### 5. Optional parts

#### 5-1. Indoor unit

#### Controllers

Exterior	Part name	Model name	Summary
Office 21         For           Mode         Set Term.           Cod         26.0 °           Room Term. 26.0 °           Stat Term.           Stat	Wired Remote Controller	UTY-RNRXZ*	Easy finger touch operation with LCD panel. Backlit LCD enables easy operation in a dark room. Wire type: Non-polar 2-wire Optional Communication Kit is necessary for installation.
	Wired Remote Controller	UTY-RLRX	High visibility and easy operation. Room temperature can be accurately controlled using the thermo sensor. Wire type: Non-polar 2-wire Optional Communication Kit is necessary for installation.
	Compact Wired Remote Controller	UTY-RCRXZ1	Compact body and easy operation. Room temperature can be accurately controlled using the thermo sensor. Wire type: Non-polar 2-wire Optional Communication Kit is necessary for installation.
	Simple Remote Controller	UTY-RSRX	Compact remote controller concentrates on the basic functions such as Start/Stop, fan control, temperature setting, and operation mode. Wire type: Non-polar 2-wire Optional Communication Kit is necessary for installation.

#### NOTES:

- Available functions may differ by the remote controller. For details, refer to the operation manual.
- When using the group controlling system of the Wired Remote Controller, using WLAN Adapter is prohibited.

Exterior	Part name	Model name	Summary
	Air Cleaning Filter	UTR-FA16-5	Air Cleaning Filter can be mounted to the indoor unit.
	External Connect Kit	UTY-XWZXZ5	Required when external device is connected.
	Connoctrat		Connecting point: CN6 on Main PCB
	External Input and Output PCB	UTY-XCSXZ2	Use to connect with external devices and air conditioner PCB. Optional External Connect Kit is necessary for installation. Connecting point: CN6 on Main PCB
	Communication Kit	UTY-TWRXZ2	Use to connect Non-polar 2-core wired remote controller.
	Modbus Converter	UTY-VMSX	For connection between indoor unit with UART interface and a Modbus open network. Connecting point: CN6 on Main PCB
	KNX Convertor	UTY-VKSX	For connection between indoor unit with UART interface and a KNX open network. Connecting point: CN6 on Main PCB
	Network Converter	UTY-VTGX	This converter is required when connecting single split system to VRF network system. Connecting point: CN6 on Main PCB
	Network Converter (AC power supply)	UTY-VTGXV	This converter is required when connecting single split system to VRF network system. Connecting point: CN6 on Main PCB
	External Switch Controller	UTY-TERX	Air conditioner switching can be controlled by connecting other external sensor switches. Connecting point: CN6 on Main PCB

**NOTE:** Combined use of following optional parts and WLAN Adapter is not allowed.

- External Input and Output PCB
- Modbus Converter
- KNX Convertor
- Network Converter
- Network Converter (AC power supply)
- External Switch Controller

CAL DATA RTS LIST
### 6. Refrigerant system diagrams

### 6-1. Models: ROG09KMCEN and ROG12KMCEN



Thr :Thermistor (Room temp.)

#### 6-2. Model: ROG14KMCEN

ECHNICAL DATA ND PARTS LIST



The : Thermistor (Pipe temperature)

Thr : Thermistor (Room temperature)

#### 7. Wiring diagrams

#### 7-1. Indoor unit

TECHNICAL DATA

#### ■ Models: RSG09KMCEN, RSG12KMCEN, and RSG14KMCEN



7-1 Indoor unit



#### Model: ROG14KMCEN



#### 8. PC board diagrams

CONTROL UNIT

#### 8-1. Models: RSG09KMCEN, RSG12KMCEN, and RSG14KMCEN



1

3

4

2

CN1Thermistor Characteristics			
Temperature	0°C	20°C	30°C
Thermistor ( Pipe temp. )	176.03 kΩ	62.91 kΩ	39.57 kΩ
	1.10 V	2.21 V	2.79 V
Thermistor ( Room temp. )	33.62 kΩ	12.54 kΩ	8.04 kΩ
	1.15 V	2.22 V	2.77 V

#### 8-2. Models: ROG09KMCEN and ROG12KMCEN



#### 8-3. Model: ROG14KMCEN



CONTROL UNIT 14 model : EZ-02000HUE



#### CONTENTS

1. Error code	03-1
1-1. How to check the error memory	03-1
1-2. How to erase the error memory	03-1
1-3. Error code table (Indoor unit and wired remote controller)	03-2
1-4. Error code table (Wireless LAN indicator)	03-3
1-5. How to check the error code on Mobile app	03-4
1-6. Error code table (Mobile app)	03-5
1-7. Error message for wireless LAN control (Mobile app)	03-6
2. Troubleshooting with error code	03-19
2-1. E: 11. Serial communication error (Serial reverse transfer error) (Outdoor unit)	03-19
2-2. E: 11. Serial communication error (Serial forward transfer error) (Indoor unit)	03-21
2-3. E: 12. Wired remote controller communication error (Indoor unit)	03-23
2-4. E: 18. External communication error (Indoor unit)	03-24
2-5. E: 22. Indoor unit capacity error (Indoor unit)	03-25
2-6. E: 23. Combination error (Outdoor unit)	03-26
2-7. E: 32. Indoor unit main PCB error (Indoor unit)	03-27
2-8. E: 35. MANUAL AUTO button error (Indoor unit)	03-28
2-9. E: 41. Room temperature sensor error (Indoor unit)	03-29
2-10. E: 42. Indoor unit heat exchanger sensor error (Indoor unit)	03-30
2-11. E: 51. Indoor unit fan motor error (Indoor unit)	03-31
2-12. E: 62. Outdoor unit main PCB error (Outdoor unit)	03-32
2-13. E: 64. PFC circuit error (Outdoor unit)	03-33
2-14. E: 65. IPM error (Outdoor unit)	03-34
2-15. E: 71. Discharge thermistor error (Outdoor unit)	03-36
2-16. E: 73. Outdoor unit heat exchanger thermistor error (Outdoor unit)	03-37
2-17. E: 74. Outdoor temperature thermistor error (Outdoor unit)	03-38
2-18. E: 84. Current sensor error (Outdoor unit)	03-39
2-19. E: 94. Trip detection (Outdoor unit)	03-40
2-20. E: 95. Compressor motor control error (Outdoor unit)	03-41
2-21. E: 97. Outdoor unit fan motor error (Outdoor unit)	03-42
2-22. E: 99. 4-way valve error (Outdoor unit)	03-43
2-23. E: A1. Discharge temperature error (Outdoor unit)	03-45
2-24. E: A3. Compressor temperature error (Outdoor unit)	03-47
3. Troubleshooting without error code	03-49
3-1. Indoor unit—No power	03-49
3-2. Outdoor unit—No power	03-50
3-3. No operation (Power is on)	03-51
3-4. No cooling/No heating	03-52
3-5. Abnormal noise	03-54
3-6. Water leaking	03-55
4. Troubleshooting with error code (For wireless LAN adapter)	03-56

## **CONTENTS** (continued)

4.1 E. 18 External communication error between indoor unit and WI AN adapter 03.56
4-1. L. TO. External communication error between indoor unit and wEAN adapter
4-2. Where so LAIN adapter error05-57
4-3. Network communication error between wireless LAN router and WLAN adapter03-58
4-4. E: 18. Communication error03-60
4-5. E: 18. Wireless LAN adapter non-energized03-62
4-6. Wireless LAN adapter Sleep mode (Indoor unit)03-63
4-7. Mobile app setting method03-64
5. Service parts information03-66
5-1. Compressor03-66
5-2. Inverter compressor03-67
5-3. Outdoor unit Electronic Expansion Valve (EEV)03-68
5-4. Indoor unit fan motor03-70
5-5. Outdoor unit fan motor03-71
5-6. 4-way valve coil (solenoid coil)/4-way valve03-72
6. Thermistor resistance values03-73
6-1. Indoor unit03-73
6-2. Outdoor unit03-74

#### 1. Error code

**TROUBLESHOOTING** 

When a problem occurs in the system or the connected device, the error content is notified by displaying the code.

**NOTE:** This function is only available in a system with indoor or IR receiver units equipped with indicator lamps to show the error content.

Errors, once displayed, will be automatically stored in the PC board of the indoor unit. Even if the power is disconnected, the memory containing the error history will not be erased.

If another error occurs later, the stored error memory will be updated automatically and replaced with the new one. (Previous error will be erased.)

#### 1-1. How to check the error memory

When an error occurs, the operation lamp (Green) and the timer lamp (Orange) indicate the error content by blinking. To check the error memory, follow the procedures below.

- 1. Stop the operation of the air conditioner, and then disconnect the power supply.
- 2. Reconnect the power supply.
- 3. In one of the following two methods, the memorized error is only displayed during the "3 minutes ST"\* state period.
  - Start the operation and then press the TEST RUN button on the remote controller.
  - Press the MANUAL AUTO button on the indoor unit for 10 seconds or more.



\*: The "3 minutes ST" period lasts 2 minutes and 20 seconds after turning on the power supply.

#### 1-2. How to erase the error memory

The error memory can be erased in one of the following two methods.

- Manual erase: Pressing the MANUAL AUTO button on the indoor unit while the "Error memory display" is being shown. (Short beep emits for about 3 seconds.)
- Automatic erase: After continuing the normal operation of the air conditioner without error for 2 hours or longer after displaying the error memory as described in How to check the error memory. (Except FAN operation mode.)

#### 1-3. Error code table (Indoor unit and wired remote controller)

The operation, timer, and economy indicators operate according to the error contents. For confirmation of the error contents, refer the flashing pattern as follows.

	Indoor unit display			Wired
Error contents	Operation [ <b>I</b> ] (Green)	Timer [싄] (Orange)	Economy [ <sup>안</sup> ] (Green)	remote controller display
E: 11. Serial communication error (Serial reverse transfer error) (Outdoor unit)	1 times	1 times	Continuous	11
E: 11. Serial communication error (Serial forward transfer error) (Indoor unit)	1 times	1 times	Continuous	11
E: 12. Wired remote controller communication error (Indoor unit)	1 times	2 times	Continuous	12
E: 18. External communication error (Indoor unit)	1 times	8 times	Continuous	18
E: 22. Indoor unit capacity error (Indoor unit)	2 times	2 times	Continuous	22
E: 23. Combination error (Outdoor unit)	2 times	3 times	Continuous	23
E: 32. Indoor unit main PCB error (Indoor unit)	3 times	2 times	Continuous	32
E: 35. MANUAL AUTO button error (Indoor unit)	3 times	5 times	Continuous	35
E: 41. Room temperature sensor error (Indoor unit)	4 times	1 times	Continuous	41
E: 42. Indoor unit heat exchanger sensor error (Indoor unit)	4 times	2 times	Continuous	42
E: 51. Indoor unit fan motor error (Indoor unit)	5 times	1 times	Continuous	51
E: 62. Outdoor unit main PCB error (Outdoor unit)	6 times	2 times	Continuous	62
E: 64. PFC circuit error (Outdoor unit)	6 times	4 times	Continuous	64
E: 65. IPM error (Outdoor unit)	6 times	5 times	Continuous	65
E: 71. Discharge thermistor error (Outdoor unit)	7 times	1 times	Continuous	71
E: 73. Outdoor unit heat exchanger thermistor error (Outdoor unit)	7 times	3 times	Continuous	73
E: 74. Outdoor temperature thermistor error (Outdoor unit)	7 times	4 times	Continuous	74
E: 84. Current sensor error (Outdoor unit)	8 times	4 times	Continuous	84
E: 94. Trip detection (Outdoor unit)	9 times	4 times	Continuous	94
E: 95. Compressor motor control error (Outdoor unit)	9 times	5 times	Continuous	95
E: 97. Outdoor unit fan motor error (Outdoor unit)	9 times	7 times	Continuous	97
E: 99. 4-way valve error (Outdoor unit)	9 times	9 times	Continuous	99
E: A1. Discharge temperature error (Outdoor unit)	10 times	1 times	Continuous	A1
E: A3. Compressor temperature error (Outdoor unit)	10 times	3 times	Continuous	A3

#### **1-4. Error code table (Wireless LAN indicator)**

Wireless LAN control system diagram example



ROUBLESHOOTING

• Wireless LAN indicator lamps

For confirmation of the error contents, refer to the following flashing patterns. Wireless LAN indicator lamp (orange) on the indoor unit operate according to the error contents.

Error contents	Wireless LAN LED (orange)	Error code
E: 18. External communication error	On: Connection information with router is available	18
between indoor unit and WLAN adapter	Off: Connection information with router is unavailable	10
Wireless LAN adapter error	Flashing slow	No error
Network communication error between wireless LAN router and WLAN adapter	On	No error
E: 18. Communication error	Flashing slow	18
E: 18. Wireless LAN adapter non- energized	Off	18
Wireless LAN adapter Sleep mode (Indoor unit)	Off	No error

Flashing slowly: Repeating 7 seconds on/2 seconds off

•

#### 1-5. How to check the error code on Mobile app

If there is an abnormality on the air conditioning, refer to  $\mathbf{A}$  as follows.

When the 🔺 (error button) on the home screen is tapped, error code and error name is displayed.







### 1-6. Error code table (Mobile app)

Error message	Error contents	Error code
Serial reverse transmission error at start-up	E. 11. Social communication error (Social	11.1
Serial reverse transmission error during	E: 11. Senal communication error (Senal reverse transfer error) (Outdoor unit)	11.2
operation		11.2
Serial forward transmission error at start-up	E: 11. Serial communication error (Serial	11.3
Serial forward transmission error during operation	forward transfer error) (Indoor unit)	11.4
Wired remote controller communication error		12.1
Wired remote controller signal error	E: 12 Wired remete controller	12.2
Excess number of devices in wired remote controller system	communication error (Indoor unit)	12.3
Wired remote controller system start-up error		12.4
External communication 1 error	E: 18. External communication error (Indoor unit)	18.1
Indoor unit capacity error	E: 22. Indoor unit capacity error (Indoor unit)	22.1
Connection forbidden (series error)	E. 22. Combination owner (Outdoor unit)	23.1
Unit combination error	E: 23. Combination error (Outdoor unit)	23.2
Indoor unit PCB model information error	E: 32. Indoor unit main PCB error (Indoor unit)	32.1
Indoor unit manual auto switch error	E: 35. MANUAL AUTO button error (Indoor unit)	35.1
Indoor unit suction air temp. thermistor error	E: 41. Room temperature sensor error (Indoor unit)	41.1
Indoor unit heat ex. middle temp. thermistor error	E: 42. Indoor unit heat exchanger sensor error (Indoor unit)	42.2
Indoor unit fan motor 1 lock error	E: 51. Indoor unit fan motor error (Indoor	51.1
Indoor unit fan motor 1 rotation speed error	unit)	51.2
Outdoor unit PCB model information error	E: 62 Outdoor upit main BCB arror (Outdoor	62.1
Outdoor unit PCB microcomputer communication error	unit)	62.2
Outdoor unit abnormal voltage error (permanent stop)		64.1
Outdoor unit abnormal voltage error (automatic restore)	E: 64. PFC circuit error (Outdoor unit)	64.3
Outdoor unit over current error (permanent stop)		64.4
Outdoor unit PFC hardware error		64.8
Outdoor unit trip terminal L error	E: 65. IPM error (Outdoor unit)	65.3
Outdoor unit discharge temp. thermistor 1 error	E: 71. Discharge thermistor error (Outdoor unit)	71.1
Outdoor unit heat ex. liquid temp. thermistor error	E: 73. Outdoor unit heat exchanger thermistor error (Outdoor unit)	73.3
Outside air temp. thermistor error	E: 74. Outdoor temperature thermistor error (Outdoor unit)	74.1
Outdoor unit current sensor 1 error (permanent stop)	E: 84. Current sensor error (Outdoor unit)	84.1
Outdoor unit trip detection	E: 94. Trip detection (Outdoor unit)	94.1
Outdoor unit compressor rotor position	E: 95. Compressor motor control error	05.4
detection error (permanent stop)	(Outdoor unit)	95.1
Outdoor unit fan motor 1 power source duty error	E: 97. Outdoor unit fan motor error (Outdoor unit)	97.3
Outdoor unit 4-way valve error	E: 99. 4-way valve error (Outdoor unit)	99.1
Outdoor unit discharge temperature 1 error (permanent stop)	E: A1. Discharge temperature error (Outdoor unit)	A1.1
Outdoor unit compressor 1 temperature error	E: A3. Compressor temperature error (Outdoor unit)	A3.1

TROUBLESHOOTING

#### 1-7. Error message for wireless LAN control (Mobile app)

### Error display

**TROUBLESHOOTING** 

If there is an abnormality on the wireless control system, refer to error messages as follows.



## Error message list

#### Registration error

Error mossago	Cause	
Endimessage	Solution	
Communication failed. After checking the	Communication with the air conditioner failed.	
following contents, please try again after a while.	Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again	
turned on.	When not lighting	
	<ul> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> </ul>	
	<ul> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul>	
	When lighting	
	Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.	
	• When blinking Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.	
Cannot connect to your air conditioner. Check if the WiFi setting of the mobile	Failed because the smartphone could not connect to the air conditioner.	
device is turned on.	Check the following contents depending on the status of indoor	
When problems are not resolved, there	unit wireless LAN indicator lamp or WLAN Adapter LED 2 and	
may be other causes. Tap the link below	operate again.	
to check other solutions.	When not lighting	
	<ol> <li>Check that the 2D barcode is for the air conditioner to be registered.</li> </ol>	
	2. Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.	
	<ol> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ol>	
	<ol> <li>Retry the connection step procedure for the air conditioner registration displayed in the application to set the lamp to the blinking state.</li> </ol>	
	When lighting or blinking	
	<ol> <li>Check that the 2D barcode is for the air conditioner to be registered.</li> </ol>	
	<ol> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> </ol>	

Error moscore	Cause	
Error message	Solution	
WLAN adapter password is wrong. Enter it again.	Failed because the smartphone could not connect to the air conditioner.	
When problems are not resolved, there may be other causes. Tap the link below to check other solutions.	<ul> <li>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</li> <li>When not lighting <ol> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> </ol> </li> </ul>	
	<ol> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> <li>Retry the connection step procedure for the air conditioner registration displayed in the application to set the lamp to the blinking state.</li> </ol>	
	<ul> <li>When lighting or blinking</li> <li>1. Check that the entered SSID and PIN numbers of WLAN Adapter are correct.</li> <li>2. Check that the wireless LAN setting of smartphone is set to ON.</li> </ul>	
Failed to connect to wireless router. Check if the WiFi setting of the mobile device is turned on.	<ul> <li>Registration failed because the smartphone cannot connect to the network.</li> <li>Connection to the WLAN Adapter was disconnected during processing.</li> </ul>	
may be other causes. Tap the link below to check other solutions.	<ol> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> <li>Check that the smartphone is connected to the Internet.</li> </ol>	
Wi-Fi router password is wrong. Tap "From the beginning" to enter it again. When problems are not resolved, there may be other causes. Tap the link below to check other solutions.	<ul> <li>The wireless router password is not correct.</li> <li>The air conditioner is not connected to the same wireless router as the smartphone.</li> </ul>	
	<ol> <li>Check the following contents and operate again.</li> <li>Check that the wireless router password is correct.</li> <li>Check that the smartphone and the air conditioner are connected to the same wireless router.</li> <li>The wireless router encryption method WPA3 is not supported. Check if SSID other than WPA3 is selected.</li> <li>Check that the local network setting of the smartphone is "Enabled". (Only for smartphones with iOS14 or later)</li> </ol>	
Failed to register the air conditioner. Make sure the wireless router is connected to	Registration failed because the air conditioner cannot connect to the Internet.	
the Internet, and then tap "Re-register" to perform the registration process again. When problems are not resolved, there may be other causes. Tap the link below to check other solutions.	<ol> <li>Check the following contents and operate again.</li> <li>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet.</li> <li>If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</li> <li>Check that the MAC address filter and privacy separator settings are not "enabled" on the wireless router.</li> </ol>	

Cause

<b>ESHOOTING</b>
TROUBL

Error message	Solution	
Air conditioner registration failed. Tap "Re-register" and conduct the registration processing again. If not successful after multiple attempts, tap "From the beginning" and then initialize the WLAN and start over from the beginning.	<ul> <li>The air conditioner you are trying to register is already registered to another account.</li> <li>Registration failed because the air conditioner cannot connect to the Internet.</li> <li>Immediately after turning on the power of the air conditioner, wait for about 5 minutes before registering it.</li> <li>Check the following contents and operate again.</li> <li>Tap "Re-register" and conduct the registration processing again.</li> <li>Delete from another account or initialize the WLAN Adapter.</li> <li>Check that the wireless router is turned on.</li> <li>Check that wireless router is connected to the Internet. If not connected, reboot the wireless router. When rebooting does not solve the problem, contact the manufacturer of the wireless router.</li> <li>Check that the MAC address filter and privacy separator settings are not "enabled" on the wireless router.</li> </ul>	
Registration failed because the air conditioner could not connect to the Internet. Perform the WPS connection procedure again and confirm that the WLAN lamp on the indoor unit or LED2 on the WLAN adapter is lit before registering. When problems are not resolved, there may be other causes. Tap the link below to check other solutions.	<ul> <li>Registration failed because the air conditioner cannot connect to the Internet.</li> <li>Registration failed because the air conditioner is not connected to the same wireless router as the smartphone.</li> <li>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</li> <li>When not lighting         <ol> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> <li>Check that the wireless router is turned on.</li> <li>Retry the connection step procedure for the air conditioner registration displayed in the application and complete WPS connection with wireless router to set the lamp to the blinking state.</li> </ol> </li> <li>When lighting         <ol> <li>Check that the air conditioner and the smartphone are connected to the same wireless router.</li> <li>Check that the local network setting of the smartphone are is "Enabled". (Only for smartphones with iOS14 or later)</li> </ol></li></ul>	
Your mobile device is not connected to WiFi. Connect to the target wireless router through the OS WiFI setting and restart	Registration failed because the air conditioner cannot connect to the Internet.	
<ol> <li>Open the Wi-Fi setting screen of your device.</li> <li>Connect your mobile device to the {ssid}.</li> <li>Return to the application screen and tap "Re-register".</li> <li>When problems are not resolved, there may be other causes. Tap the link below to check other solutions.</li> </ol>	<ol> <li>Check the following contents and operate again.</li> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> <li>Check that the smartphone is connected to the Internet.</li> <li>Set the connection setting with the wireless router to Auto Connection in the smartphone settings.</li> <li>Check that the wireless router is turned on.</li> </ol>	
Communication failed.	communication with the server (cloud). Wait for a while and then operate again.	
the Direct control.	Operate the air conditioner with Cloud Control.	

Error mocoogo	Cause	
Error message	Solution	
Already reached the max number of air conditioners per user.	The number of air conditioners that can be registered on AIRSTAGE Mobile has reached the maximum limit. Check the number of air conditioners registered on AIRSTAGE Mobile (Maximum number of registered units; 50 units for	
	Cloud Control, 50 units for Direct Control)	
	Delete the unused air conditioners on the "Air conditioner editing" screen before registration.	
The number of air conditioners registered	The number of sub users that can be registered has reached the maximum limit.	
by the entered user has reached the	Check the number of registered sub users. (Maximum number of registered sub users: 4 sub users)	
	Delete the unused sub users on the "Sub User Registration" screen.	
The specified air conditioner is already	The specified air conditioner was already registered.	
registered. To Reregister, delete the air conditioner	Check that the specified air conditioner is displayed on the air conditioner list screen.	
screen and initialize the wireless LAN adapter with the remote control.	To register again, delete the air conditioner on the air conditioner editing screen.	
The wireless router to which the mobile device and the wireless LAN adapter are	The air conditioner and the smartphone are not connected to the same wireless router network.	
connected must be the same. Follow the steps below.	Check the following contents and operate again.	
1. Please open the Wi-Fi setting screen of the mobile device.	1. Check that the wireless LAN setting of smartphone is set to ON.	
2. Connect your mobile device to the wireless router that you pressed the	<ol> <li>Check that the smartphone is connected to the Internet.</li> <li>Check that the wireless router is turned on.</li> </ol>	
<ul><li>automatic connection button.</li><li>3. Return to the app screen and tap "OK".</li></ul>	4. Check that the air conditioner and the smartphone are connected to the same wireless router.	

#### • Sign in error

<b>F</b>	Cause	
Error message	Solution	
Communication failed. After checking the	Various settings could not be completed because communication with the server (cloud) failed.	
following contents, please try again after a	Check the following contents and operate again.	
While.	1. Check that the wireless LAN setting of smartphone is set to	
• Ensure that your mobile device is connected to the internet.	ON. 2 Check that the smartphone is connected to the Internet	
	<ol> <li>Check that the wireless router is turned on.</li> </ol>	
The account you are currently signed in to may have been deleted.	Token has been disabled because the signed-in account has been deleted or certain amount of time has elapsed.	
If necessary, please create the account	Restart the application and check that you can sign in.If you	
again.	cannot sign in, create the account again.	
The session has expired. Please sign in	loken has been disabled because the signed-in account has been deleted or certain amount of time has elapsed.	
again to continue.	Restart the application and check that you can sign in.	
Vour ecceier has evaluated Disease sign in	If you cannot sign in, create the account again.	
again.	been deleted or certain amount of time has elapsed.	
*If you cannot sign in, your account may	Restart the application and check that you can sign in.	
create an account again.	If you cannot sign in, create the account again.	
	Communication with the server (cloud) failed at sign in.	
	<ul> <li>Registration process of Account registration procedure verification email has not been completed.</li> </ul>	
Failed to connect to the server. Some	Check the following contents and sign in again.	
functions can be used with Direct Control.	1. Check that the wireless LAN setting of smartphone is set to	
Do you want to switch to direct control?	ON.	
	<ol> <li>Check that the sinarchible is connected to the internet.</li> <li>Check that the wireless router is turned on.</li> </ol>	
	4. Tap the link of Account registration procedure verification	
	email and check that registration process has completed.	
	Air conditioner information could not be obtained because communication with the server (cloud) failed after sign in.	
Failed to read the device. Since some	Check the following contents and sign in again.	
switch to Direct control.	<ol> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> </ol>	
	2. Check that the smartphone is connected to the Internet.	
	3. Check that the wireless router is turned on.	
	<ol> <li>Communication with the server (cloud) failed at sign in.</li> <li>Registration process of Account registration procedure</li> </ol>	
	verification email has not been completed.	
	Check the following contents and sign in again.	
Failed to connect to the server. Some	1. Check that the wireless LAN setting of smartphone is set to	
functions are limited.	ON.	
	<ol> <li>Check that the sinarchione is connected to the internet.</li> <li>Check that the wireless router is turned on.</li> </ol>	
	4. Tap the link of Account registration procedure verification	
	email and check that registration process has completed.	
Failed to connect to the server. Would	Air conditioner information could not be obtained because	
	Check the following contents and sign in again	
you like to sign in again?	1. Check that the wireless LAN setting of smartphone is set to	
res: Sign in again	ON.	
INO: RETURN TO THE SIGN-IN SCREEN	<ol> <li>Check that the smartphone is connected to the Internet.</li> <li>Check that the wireless router is turned on.</li> </ol>	

Error mossago	Cause		
Endimessage	Solution		
<ul> <li>Loading of user information failed. Check the following contents.</li> <li>Check that your mobile device is connected to the internet.</li> </ul>	<ul> <li>User information or temperature unit information could not be obtained because communication with the server (cloud) failed.</li> <li>Check the following contents and operate again.</li> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> <li>Check that the amertphone is connected to the Internet.</li> </ul>		
	<ol> <li>Check that the smarphone is connected to the internet.</li> <li>Check that the wireless router is turned on.</li> </ol>		
Password update failed. Please check if	Password update failed because the entered password was not correct.		
the entered current password is correct.	Check that the entered "Current password" is correct and operate again.		
<ul> <li>Loading of time zone failed. Check the following contents.</li> <li>Check that your mobile device is connected to the internet.</li> </ul>	Time zone information could not be obtained because communication with server (cloud) failed.		
	<ol> <li>Check the following contents and operate again.</li> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> <li>Check that the smartphone is connected to the Internet.</li> <li>Check that the wireless router is turned on.</li> </ol>		

#### General error

Error moooge	Cause		
Error message	Solution		
Communication failed. After checking the following contents, please try again after a while. • Ensure that the air conditioner is turned on.	<ul> <li>Communication with the air conditioner failed.</li> <li>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</li> <li>When not lighting <ul> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li>When lighting <ul> <li>When lighting</li> <li>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router</li> </ul> </li> </ul>		
<ul> <li>Communication failed. After checking the following contents, please try again after a while.</li> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	<ul> <li>Various settings could not be completed because communication with the server (cloud) failed.</li> <li>Air conditioner information could not be obtained because communication with server (cloud) failed.</li> <li>Check the following contents and operate again.</li> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> <li>Check that the smartphone is connected to the Internet.</li> <li>Check that the wireless router is turned on.</li> </ul>		
Loading of weekly timer failed. Check the following contents. • Ensure that your mobile device is connected to the internet.	<ul> <li>Various settings could not be completed because communication with the server (cloud) failed.</li> <li>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</li> <li>When not lighting <ul> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li>When lighting <ul> <li>When lighting</li> <li>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router of the wireless router.</li> </ul> </li> <li>When blinking <ul> <li>Wait for a while until the lamp lights and then operate again. If the lamp is still blinking after waiting for a while, check that the wireless router is turned on.</li> </ul> </li> </ul>		

Cause

Solution The error history information could not be obtained because

communication with the server (cloud) failed.

	Error message
TROUBLESHOOTING	Loading of error history failed following contents. • Ensure that your mobile connected to the internet

Loading of error history failed. Check the following contents. • Ensure that your mobile device is connected to the internet.	Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.		
	When not lighting		
	<ul> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> </ul>		
	<ul> <li>Or check that the power plug of the air conditioner main unit is plugged in.</li> </ul>		
	• When lighting Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.		
	• When blinking Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.		
	Air conditioner group setting has not been completed because communication with air conditioner failed.		
	Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.		
	When not lighting		
	<ul> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> </ul>		
Communication failure prevented the group movement processing from being	<ul> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul>		
<ul> <li>conducted. After checking the following contents, please try again after a while.</li> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	• When lighting Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.		
	• When blinking Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on		

Error mooogo	Cause		
Enormessage	Solution		
	Air conditioner group setting has not been completed because communication with air conditioner failed.		
Communication failure prevented the group creation processing from being conducted. After checking the following contents, please try again after a while. • Ensure that your mobile device is connected to the internet.	<ul> <li>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</li> <li>When not lighting <ul> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li>When lighting <ul> <li>When lighting</li> <li>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</li> </ul> </li> <li>When blinking <ul> <li>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</li> </ul> </li> </ul>		
	Air conditioner group setting has not been completed because communication with air conditioner failed.		
	Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.		
<ul> <li>Communication failure prevented the group name change processing from being conducted. After checking the following contents, please try again after a while.</li> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	<ul> <li>When not lighting         <ul> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li>When lighting         <ul> <li>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</li> </ul> </li> <li>When blinking         <ul> <li>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</li> </ul> </li> </ul>		

Error mooogo	Cause		
Enormessage	Solution		
	Air conditioner group setting has not been completed because communication with air conditioner failed.		
Communication failure prevented the group deletion processing from being conducted. After checking the following contents, please try again after a while. • Ensure that your mobile device is connected to the internet.	<ul> <li>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</li> <li>When not lighting <ul> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li>When lighting <ul> <li>When lighting</li> <li>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</li> </ul> </li> <li>When blinking <ul> <li>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</li> </ul> </li> </ul>		
	Air conditioner group setting has not been completed because communication with air conditioner failed.		
<ul> <li>The room temperature display indoor unit setting could not be made due to a communication failure. After checking the following contents, please try again after a while.</li> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	<ul> <li>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</li> <li>When not lighting <ul> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li>When lighting <ul> <li>When lighting</li> <li>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</li> <li>When blinking</li> <li>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</li> </ul> </li> </ul>		

Error message

Cause

<b>N</b>
DI
P
ES
ВГ
D
TR

LITOI message	Solution			
	Air conditioner group setting has not been completed because communication with air conditioner failed.			
Some device group move processing could not be conducted due to communication failure. After checking the following contents, please try again after a while. • Ensure that your mobile device is connected to the internet.	<ul> <li>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</li> <li>When not lighting <ul> <li>Check that the Electrical panel (Switch breaker) to the</li> </ul> </li> </ul>			
	<ul> <li>air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul>			
	<ul> <li>When lighting         Use a smartphone to check that the wireless router to         which the air conditioner is connected is connected to the         Internet. If the smartphone cannot connect to the Internet,         reboot the wireless router. When rebooting the wireless         router does not solve the problem, contact the         manufacturer of the wireless router.     </li> </ul>			
	<ul> <li>When blinking Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</li> </ul>			
Loading of air conditioner information	Air conditioner information could not be obtained because communication with server (cloud) failed.			
<ul><li>failed. Check the following contents.</li><li>Ensure that your mobile device is connected to the internet.</li></ul>	<ol> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> <li>Check that the smartphone is connected to the Internet.</li> <li>Check that the wireless router is turned on.</li> </ol>			
	Firmware update failed.			
New firmware update failed.	<ol> <li>Check the following contents and operate again.</li> <li>Check that the wireless LAN setting of smartphone is set to ON.</li> <li>Check that the smartphone is connected to the Internet.</li> <li>Check that the wireless router is turned on.</li> <li>Refer to the operation manual of air conditioner and check the indicator lamp state of air conditioner indoor unit.</li> </ol>			
Failed to get the air conditioner	Failed to obtain air conditioner information by Direct Control.			
Information.	Sign in again.			
Failed to add the air conditioner.	<ul> <li>Check the following contents and operate again.</li> <li>1. When 2D barcode label is used, scan 2D barcode label again.</li> <li>2. When 2D barcode label is not used, check that the entered SSID or PIN code is correct.</li> </ul>			
Device disconnection failed.After checking the following contents, please try again after a while. • Ensure that your mobile device is	Failed to disconnect the connection with air conditioner by Direct Control.			
	<ol> <li>Check the following contents and operate again.</li> <li>Check that the smartphone is connected with the air conditioner.</li> <li>Check that the Electrical panel (Switch breaker) to the air</li> </ol>			
connected to the internet.	<ul><li>conditioner is turned on.</li><li>3. Check that the power plug of the air conditioner main unit is plugged in.</li></ul>			

Error mooogo	Cause		
Error message	Solution		
<ul> <li>Failed to update the screen. After checking the following contents, please try again after a while.</li> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	<ul> <li>Various settings could not be completed because communication with the server (cloud) failed.</li> <li>Check the following contents and operate again.</li> <li>1. Check that the wireless LAN setting of smartphone is set to ON.</li> <li>2. Check that the smartphone is connected to the Internet.</li> <li>3. Check that the wireless router is turned on.</li> </ul>		
Communication failed. Check the following contents. <ul> <li>Ensure that your mobile device is connected to the internet.</li> </ul>	<ul> <li>Various settings could not be completed because communication with the server (cloud) failed.</li> <li>Check the following contents and operate again.</li> <li>1. Check that the wireless LAN setting of smartphone is set to ON.</li> <li>2. Check that the smartphone is connected to the Internet.</li> <li>3. Check that the wireless router is turned on.</li> </ul>		
Loading of outdoor low noise timer failed. Check the following contents. • Ensure that your mobile device is connected to the internet.	<ul> <li>The outdoor unit low noise timer information could not be obtained because communication with the server (cloud) failed.</li> <li>Check the following contents depending on the status of indoor unit wireless LAN indicator lamp or WLAN Adapter LED 2 and operate again.</li> <li>When not lighting <ul> <li>Check that the Electrical panel (Switch breaker) to the air conditioner is turned on.</li> <li>Check that the power plug of the air conditioner main unit is plugged in.</li> </ul> </li> <li>When lighting <ul> <li>When lighting</li> <li>Use a smartphone to check that the wireless router to which the air conditioner is connected is connected to the Internet. If the smartphone cannot connect to the Internet, reboot the wireless router. When rebooting the wireless router does not solve the problem, contact the manufacturer of the wireless router.</li> </ul> </li> <li>When blinking <ul> <li>Wait for a while until the indicator lamp lights and then operate again. If the indicator lamp is still blinking after waiting for a while, check that the wireless router is turned on.</li> </ul> </li> </ul>		

#### 2. Troubleshooting with error code

# 2-1. E: 11. Serial communication error (Serial reverse transfer error) (Outdoor unit)

Indiactor	Indoor unit	Operation indicator	1 time flash
		Timer indicator	1 time flash
Indicator		Economy indicator	Continuous flash
		Error code	E: 11
Detective actuator Outdoor unit	Main PCB	When the indoor unit cannot receive the serial signal	
	Outdoor unit	Fan motor	from outdoor unit more than 2 minutes after power on, or the indoor unit cannot receive the serial signal more
			than 15 seconds during normal operation.
Forecast of cause			Connection failure
			External cause
			Main PCB failure
			Outdoor unit fan motor failure

#### Check point 1. Reset the power and operate

Does error indication show again?

 $\rightarrow$  If no, go to "Check point 1-2".

Check point 2. Check connection

Check any loose or removed connection line of indoor unit and outdoor unit.

 $\downarrow$ 

Check connection condition is control unit. (If there is loose connector, open cable or mis-wiring.)  $\rightarrow$  If there is an abnormal condition, correct it by referring to the installation manual or the "DESIGN & TECHNICAL MANUAL".

 $\downarrow$ 

Check point 3. Check the voltage of power supply

Check the voltage of power supply Check if AC 207 (AC 230 V -10%) to AC 253 V (AC 230 V +10%) appears at outdoor unit terminal L—N.



Ţ

#### Check point 4. Check serial signal (Reverse transfer signal)

Check serial signal (Reverse transfer signal)



- Check if indicated value swings between AC 90 V and AC 270 V at the outdoor unit terminal 1 —3.
- If it is abnormal, check the parts below.

**TROUBLESHOOTING** 

- Outdoor unit fan motor in "Service parts information" on page 03-66
- If outdoor fan motor is abnormal, replace outdoor unit fan motor and main PCB.
- If the checked parts are normal, replace the main PCB.

End

↓

#### Check point 1-2. Check external cause such as noise

- Check the complete insulation of the grounding.
- Check if there is any equipment that causes harmonic wave near the power cable (Neon light bulb or any electronic equipment which causes harmonic wave).

 $\downarrow$ 

End

#### 2-2. E: 11. Serial communication error (Serial forward transfer error) (Indoor unit)

Indicator Indoc	Indoor unit	Operation indicator	1 time flash
		Timer indicator	1 time flash
		Economy indicator	Continuous flash
		Error code	E: 11
Detective actuator Outdo	Indoor unit	Main PCB	When the outdoor unit cannot properly receive the serial signal from indoor unit for 10 seconds or more
		Fan motor	
	Outdoor unit	Main PCB	
Forecast of cause			Connection failure
			External cause
			Main PCB failure

Does error indication show again?

 $\rightarrow$  If no, go to "Check point 1-2".

Check point 2. Check connection

Check any loose or removed connection line of indoor unit and outdoor unit.

→ If there is an abnormal condition, correct it by referring to the installation manual or the "DESIGN & TECHNICAL MANUAL".

- (03-21) -

Check connection condition is control unit. (If there is loose connector, open cable or mis-wiring.)

Check point 3. Check the voltage of power supply

Check the voltage of power supply Check if AC 207 (AC 230 V -10%) to AC 253 V (AC 230 V +10%) appears at outdoor unit terminal L-N.

↓

2-2. E: 11. Serial communication error (Serial forward transfer error) (Indoor unit)

↓

↓

Check point 1. Reset the power and operate



Check point 1-2. Check external cause such as noise

• Check if the ground connection is proper.

**TROUBLESHOOTING** 

• Check if there is any equipment that causes harmonic wave near the power cable (Neon light bulb or any electronic equipment which causes harmonic wave).

 $\downarrow$ 

End

# 2-3. E: 12. Wired remote controller communication error (Indoor unit)

Indicator	Indoor unit	Operation indicator	1 time flash
		Timer indicator	2 time flash
		Economy indicator	Continuous flash
		Error code	E: 12
	Indoor unit		When the indoor unit cannot receive the signal from
Detective actuator	Wired remote c	ontrol	Wired remote controller more than 1 minute during
Whed remote control		ontion	normal operation.
Forecast of cause			Terminal connection abnormal
			Wired remote control failure
			Main PCB failure

#### Check point 1. Check the connection of terminal

After turning off the power, check & correct the followings.

• Check the connection of terminal between remote controller and indoor unit, and check if there is a disconnection of the cable.

↓

Check point 2. Check connection

Check voltage at CNC01 (terminal 1— 3) of UTY-TWBXF (Communication Kit). (Power supply to the remote controller)



Upon correcting the removed connector or mis-wiring, reset the power.

 $\downarrow$ 

End

If it is DC 12 V, remote controller is failure. (Main PCB is normal) SOUBLESHOOTING

- Replace Remote Control
- If it is DC 0 V, main PCB is failure. (Check remote controller once again)
  - Replace main PCB

.

#### 2-4. E: 18. External communication error (Indoor unit)

Indicator	Indoor unit	Operation indicator	1 time flash
		Timer indicator	8 time flash
		Economy indicator	Continuous flash
		Error code	E: 18
Detective actuator	Indoor unit	External	After receiving a signal from the external input and
		communication	output PCB, the same signal has not been received for
		error	15 seconds.
Forecast of cause			Connection failure
			WLAN adapter failure
			Main PCB

Check point 1. Check the connection

- Check any loose or removed connection between the main PCB to the WLAN adapter.
   -> If there is an abnormal condition, correct it by refer to the installation manual or the "DESIGN & TECHNICAL MANUAL".
- Check the connection condition on the WLAN adapter and the main PCB (If there is loose connector, open cable or mis-wiring.)

Check point 2. Replace the WLAN adapter

If check point 1 do not improve the symptom, change WLAN adapter.

 $\downarrow$ 

↓

Check point 3. Replace the main PCB

If check point 2 do not improve the symptom, replace the main PCB.

 $\downarrow$ 

End
## 2-5. E: 22. Indoor unit capacity error (Indoor unit)

Indicator	Indoor unit	Operation indicator	2 time flash
		Timer indicator	2 time flash
		Economy indicator	Continuous flash
		Error code	E: 22
Detective actuator	Indoor unit main PCB		When the total capacity of the indoor units does not match outdoor unit capacity while 3 minutes after power
			on.
Forecast of cause			Indoor unit selection is incorrect.
			Main PCB failure

Check point 1. Check the total capacity of indoor units

Check the total capacity of the indoor units.

 $\rightarrow$  If abnormal condition is found, correct it referring to the installation manual or DESIGN & TECHNICAL MANUAL.

 $\downarrow$ 

Check point 2. Replace the main PCB

If check point 1 does not improve the symptom, replace the main PCB.

 $\downarrow$ 

## 2-6. E: 23. Combination error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	2 time flash
		Timer indicator	3 time flash
		Economy indicator	Continuous flash
		Error code	E: 23
Detective actuator	Indoor unit		The outdoor unit receives the serial signal of applied
			refrigerant information from indoor unit.
Forecast of cause			Incorrect indoor unit is selected.

Check point 1. Check the type of indoor unit

- Check the type of the connected indoor unit.
   If there is an observed condition, correct it by refer to the instal
  - -> If there is an abnormal condition, correct it by refer to the installation manual or the "DESIGN & TECHNICAL MANAL".

Check point 2. Replace the main PCB

**TROUBLESHOOTING** 

If check point 1 do not improve the symptom, replace the main PCB of the outdoor unit.

 $\downarrow$ 

 $\downarrow$ 

## 2-7. E: 32. Indoor unit main PCB error (Indoor unit)

Indiaator	Indoor unit	Operation indicator	3 time flash
		Timer indicator	2 time flash
muicator		Economy indicator	Continuous flash
		Error code	E: 32
	Indoor unit	main PCB	When power is on and there is some below case.
Detective actuator			1. When model information of EEPROM is incorrect.
			2. When the access to EEPROM failed.
			External cause
Forecast of cause			Defective connection of electrical components
			Main PCB failure

Check point 1. Reset power supply and operate

Does error indication show again?

 $\rightarrow$  If no, go to "Check point 1-2".

 $\downarrow$ 

Check point 2. Check Indoor unit electrical components

- Check all connectors. (loose connector or incorrect wiring)
- Check any shortage or corrosion on PCB.

 $\downarrow$ 

Check point 3. Replace the main PCB

Replace the main PCB.

 $\downarrow$ 

End

Check point 1-2. Check external cause such as noise

- Check if the ground connection is proper.
- Check if there is any equipment that causes harmonic wave near the power cable (Neon light bulb or any electronic equipment which causes harmonic wave).

↓ End

### NOTE: EEPROM

EEPROM (Electronically Erasable and Programmable Read Only Memory) is a non-volatile memory which keeps memorized information even if the power is turned off. It can change the contents electronically. To change the contents, it uses higher voltage than normal, and it cannot change a partial contents. (Rewriting shall be done upon erasing the all contents.) There is a limit in a number of rewriting.

**ROUBLESHOOTING** 

## 2-8. E: 35. MANUAL AUTO button error (Indoor unit)

Indicator	Indoor unit	Operation indicator	3 time flash
		Timer indicator	5 time flash
muicator		Economy indicator	Continuous flash
		Error code	E: 35
Detective actuator	Indoor unit controller PCB		When the MANUAL AUTO button becomes on for
	Indicator PCB		
	Manual auto switch		
Forecast of cause			MANUAL AUTO button failure
			Controller PCB and indicator PCB failure

Check point 1. Check the MANUAL AUTO but-
ton

- Check if MANUAL AUTO button is Ω kept pressed.
  - 00
- Check ON/OFF switching opera-

If MANUAL AUTO button is disabled (ON/OFF switching), replace it.

**ROUBLESHOOTING** 

tion by using a meter.

↓

Check point 2. Replace the main PCB and indicator PCB

If Check Point 1 does not improve the symptom, replace the main PCB and indicator PCB.

## 2-9. E: 41. Room temperature sensor error (Indoor unit)

Indiaator	Indoor unit	Operation indicator	4 time flash
		Timer indicator	1 time flash
Indicator		Economy indicator	Continuous flash
		Error code	E: 41
Detective actuator	Indoor unit main PCB		Room temperature thermistor is open or short is
	Room temperature thermistor		detected always.
			Connector failure
Forecast of cause			Thermistor failure
			Main PCB failure

Check point 1. Check connection of connector

- Check if connector is loose or removed.
- Check erroneous connection.
- Check if thermistor cable is open
- -> Reset power when reinstalling due to removed connector or incorrect wiring.

Check point 2. Remove connector and check thermistor resistance value

• For the room thermistor resistance value, refer to "Thermistor resistance values" on page 03-73.

1

- If thermistor is either open or shorted, replace it and reset the power.
- Check point 3. Check voltage of main PCB

Make sure circuit diagram of each indoor unit and check terminal voltage at thermistor (DC 5.0 V).

- **NOTE:** For details of thermistor connector, refer to "Wiring diagrams" in Chapter 2. TECHNICAL DATA AND PARTS LIST on page 02-23.
  - (09-14 models: CN1)

If the voltage does not appear, replace main PCB.

 $\downarrow$ 

End





↓

## 2-10. E: 42. Indoor unit heat exchanger sensor error (Indoor unit)

Indicator	Indoor unit	Operation indicator	4 time flash
		Timer indicator	2 time flash
Indicator		Economy indicator	Continuous flash
		Error code	E: 42
Detective actuator	Indoor unit main PCB		When heat exchanger temperature thermistor open or short circuit is detected.
	Heat exchanger temperature thermistor		
			Connector connection failure
Forecast of cause			Thermistor failure
			Main PCB failure

Check point 1. Check connection of connector

- Check if connector is loose or removed.
- Check erroneous connection.

TROUBLESHOOTING

Check if thermistor cable is open

-> Reset power when reinstalling due to removed connector or incorrect wiring.

Check point 2. Remove connector and check thermistor resistance value

• For the heat exchanger thermistor resistance value, refer to "Thermistor resistance values" on page 03-73.

Ţ

• If thermistor is either open or shorted, replace it and reset the power.

Check point 3. Check voltage of main PCB

Make sure circuit diagram of each indoor unit and check terminal voltage at thermistor (DC 5.0 V).

Ţ

- **NOTE:** For details of thermistor connector, refer to "Wiring diagrams" in Chapter 2. TECHNICAL DATA AND PARTS LIST on page 02-23.
  - (09-14 models: CN1)

If the voltage does not appear, replace main PCB.

Ţ

## 2-11. E: 51. Indoor unit fan motor error (Indoor unit)

Indiactor	Indoor unit	Operation indicator	5 time flash
		Timer indicator	1 time flash
mulcator		Economy indicator	Continuous flash
		Error code	E: 51
	Indoor unit	main PCB	When the actual rotation number of the indoor unit fan
Detective actuator		Fan motor	motor is below 1/3 of the target rotation number
			continuously for more than 56 seconds.
			Fan rotation failure
			Fan motor winding open
Forecast of cause			Motor protection by surrounding temperature rise
			Control PCB failure
			Indoor unit fan motor failure

Check point 1. Check rotation of fan

Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor)  $\rightarrow$  If fan or bearing is abnormal, replace it.

 $\downarrow$ 

Check point 2. Check ambient temperature around motor

Check excessively high temperature around the motor. (If there is any surrounding equipment that causes heat)

 $\rightarrow$  Upon the temperature coming down, restart operation.

 $\downarrow$ 

Check point 3. Check indoor unit fan motor

Check Indoor unit fan motor. (Refer to indoor unit fan motor in "Service parts information" on page 03-66.)

 $\rightarrow$  If Indoor unit fan motor is abnormal, replace Indoor unit fan motor.

↓

Check point 4. Replace the main PCB

If Check Point 1 to 3 do not improve the symptom, replace the main PCB.

↓

End

ROUBLESHOOTING

## 2-12. E: 62. Outdoor unit main PCB error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	6 time flash
		Timer indicator	2 time flash
mulcator		Economy indicator	Continuous flash
		Error code	E: 62
Detective actuator	Outdoor unit	Main PCB	Access to EEPROM failed due to some cause after
			outdoor unit started.
Forecast of cause			External cause (Noise, temporary open, voltage drop)
			Main PCB failure

Check point 1. Reset power supply and operate
Does error indication show again?

↓

If no, go to "Check point 1-2".

Check point 2. Replace the main PCB	
Replace the main PCB.	

 $\downarrow$ 

End

Check point 1-2. Check external cause

- Check if temporary voltage drop was not generated.
- Check if momentary open was not generated.
- Check if ground is connection correctly or there are no related cables near the power line.

 $\downarrow$ 

## 2-13. E: 64. PFC circuit error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	6 time flash
		Timer indicator	4 time flash
indicator		Economy indicator	Continuous flash
		Error code	E: 64
Detective actuator	Outdoor unit	Main PCB	<ul> <li>When inverter input DC voltage is higher than 415 V for over 3 seconds, the compressor stops.</li> <li>If the same operation is repeated 5 times, the compressor stops permanently.</li> </ul>
Forecast of cause			External cause
			Connector connection failure
			Main PCB failure

Check point 1. Check external cause at indoor and outdoor (Voltage drop or Noise)

- Instant drop: Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure: Check if there is a defective contact or leak current in the power supply circuit.
- Noise: Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave) Check the complete insulation of grounding.

 $\downarrow$ 

Check point 2. Check connection of Connector

- Check if connector is removed.
- Check erroneous connection.
- Check if cable is open.
- $\rightarrow$  Upon correcting the removed connector or mis-wiring, reset the power.

 $\downarrow$ 

#### Check point 3. Replace the main PCB

If check point 1 to 2 do not improve the symptom, replace the main PCB.

 $\downarrow$ 

## 2-14. E: 65. IPM error (Outdoor unit)

		Operation indicator	6 time flash
Indicator	Indoor unit	Timer indicator	5 time flash
mulcator		Economy indicator	Continuous flash
		Error code	E: 65
		Main PCB	1. When more than normal operating current to IPM in
Detective actuator	Outdoor unit	Compressor	<ul> <li>main PCB flows, the compressor stops.</li> <li>After the compressor restarts, if the same operation is repeated within 40 seconds, the compressor stops again.</li> <li>If 1. and 2. repeats 5 times, the compressor stops permanently.</li> </ul>
Forecast of cause		•	Defective connection of electrical components
			Outdoor fan operation failure
			Outdoor heat exchanger clogged
			Compressor failure
			Main PCB failure

Check point 1. Check connections of outdoor unit electrical components

- Check if the terminal connection is loose.
- Check if connector is removed.
- Check erroneous connection.
- Check if cable is open.
- $\rightarrow$  Upon correcting the removed connector or mis-wiring, reset the power.

 $\downarrow$ 

Check point 2. Check outdoor fan and heat exchanger

- Is there anything obstructing the air distribution circuit?
- Is there any clogging of outdoor heat exchanger?
- Is the fan rotating by hand when operation is off?
- $\rightarrow$  If the fan motor is locked, replace it.

 $\downarrow$ 

Check point 3. Check outdoor fan

Check outdoor fan motor. (Refer to "E: 97. Outdoor unit fan motor error (Outdoor unit)" on page 03-42.)

 $\rightarrow$  If the fan motor is failure, replace it.

ROUBLESHOOTING

Check point 4. Check compressor

Check compressor. (Refer to inverter compressor in "Service parts information".)

 $\downarrow$ 

Check point 5. Replace main PCB

If Check point 1 to 4 do not improve the symptom, change main PCB.

 $\downarrow$ 

## 2-15. E: 71. Discharge thermistor error (Outdoor unit)

	Indoor unit	Operation indicator	7 time flash
Indiactor		Timer indicator	1 time flash
Indicator		Economy indicator	Continuous flash
		Error code	E: 71
	Outdoor unit m	ain PCB	When discharge pipe temperature thermistor open or
Detective actuator	Discharge pipe temperature		short circuit is detected at power on or while running the
	thermistor		compressor
			Connector failure
Forecast of cause			Thermistor failure
			Main PCB failure

#### Check point 1. Check connection of connector

- Check if connector is loose or removed.
- Check erroneous connection.

TROUBLESHOOTING

- Check if thermistor cable is open
- → Reset power when reinstalling due to removed connector or incorrect wiring.

 $\downarrow$ 

Check point 2. Remove connector and check thermistor resistance value

- For the discharge temperature thermistor resistance value, refer to "Thermistor resistance values" on page 03-73.
- If thermistor is either open or shorted, replace it and reset the power.

Check point 3. Check voltage of main PCB

Make sure circuit diagram of outdoor unit and check terminal voltage at thermistor (DC 5.0 V).

**NOTE:** For details of thermistor connector, refer to "Wiring diagrams" in Chapter 2. TECHNICAL DATA AND PARTS LIST on page 02-23.

↓

(09-14 models: P1)

If the voltage does not appear, replace main PCB.

Ļ

## 2-16. E: 73. Outdoor unit heat exchanger thermistor error (Outdoor unit)

	Indoor unit	Operation indicator	7 time flash
Indicator		Timer indicator	3 time flash
Indicator		Economy indicator	Continuous flash
		Error code	E: 73
	Outdoor unit m	ain PCB	When heat exchanger temperature thermistor open or
Detective actuator	Heat exchanger temperature		short circuit is detected at power on or while running the
	thermistor		compressor
			Connector failure
Forecast of cause			Thermistor failure
			Main PCB failure

Check point 1. Check connection of connector

- Check if connector is loose or removed. •
- Check erroneous connection. •

TROUBLESHOOTING

- Check if thermistor cable is open •
- $\rightarrow$  Reset power when reinstalling due to removed connector or incorrect wiring.

Check point 2. Remove connector and check thermistor resistance value

For the outdoor unit heat exchanger thermistor resistance value, refer to "Ther-• mistor resistance values" on page 03-73.

Ţ

If thermistor is either open or shorted, replace it and reset the power.

#### Check point 3. Check voltage of main PCB

Make sure circuit diagram of outdoor unit and check terminal voltage at thermistor (DC 5.0 V).

Ţ

**NOTE:** For details of thermistor connector, refer to "Wiring diagrams" in Chapter 2. TECHNICAL DATA AND PARTS LIST on page 02-23. If the voltage does not appear, replace main PCB.

↓

## 2-17. E: 74. Outdoor temperature thermistor error (Outdoor unit)

	Indoor unit	Operation indicator	7 time flash
Indiaator		Timer indicator	4 time flash
Indicator		Economy indicator	Continuous flash
		Error code	E: 74
	Outdoor unit ma	ain PCB	When outdoor temperature thermistor open or short
Detective actuator	Outdoor temperature thermistor		circuit is detected at power on or while running the
	Outdoor tempe		compressor
			Connector failure
Forecast of cause			Thermistor failure
			Main PCB failure

Check point 1. Check connection of connector

- Check if connector is loose or removed.
- Check erroneous connection.
- Check if thermistor cable is open
- -> Reset power when reinstalling due to removed connector or incorrect wiring.

Check point 2. Remove connector and check thermistor resistance value

• For the outdoor temperature thermistor resistance value, refer to "Thermistor resistance values" on page 03-73.

↓

↓

• If thermistor is either open or shorted, replace it and reset the power.

Check point 3. Check voltage of main PCB

Make sure circuit diagram of outdoor unit and check terminal voltage at thermistor (DC 5.0 V).

**NOTE:** For details of thermistor connector, refer to "Wiring diagrams" in Chapter 2. TECHNICAL DATA AND PARTS LIST on page 02-23.

(09-14 models: P5)

If the voltage does not appear, replace main PCB.

 $\downarrow$ 

End

ROUBLESHOOTIN

DC	
$\oslash$ ?	

## 2-18. E: 84. Current sensor error (Outdoor unit)

		Operation indicator	8 time flash
Indiactor	Indoor unit	Timer indicator	4 time flash
muicator		Economy indicator	Continuous flash
		Error code	E: 84
Detective actuator	Outdoor unit	main PCB	When input current sensor has detected 0 A, while inverter compressor is operating at higher than 56 rps, after 1 minute upon starting the compressor. (Except during the defrost operation)
			Defective connection of electrical components
Forecast of cause			External cause
			Main PCB failure

Check point 1. Reset power supply and operate	If pourse to "Check point 1.2"
Does error indication show again?	in no, go to check point 1-2 .
$\downarrow$	
Check point 2. Check connections of outdoor	

Upon correcting the removed connector or mis-

wiring, reset the power.

unit electrical components

- Check if the terminal connection is loose.
- Check if connector is removed.
- Check erroneous connection.
- Check if cable is open.

**TROUBLESHOOTING** 

 $\downarrow$ 

Check point 3. Replace the main PCB

If Check point 1, 2 do not improve the symptom, replace the main PCB.

↓

End

Check point 1-2. Check external cause at Indoor and Outdoor (Voltage drop or Noise)

- Instant drop: Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure: Check if there is a defective contact or leak current in the power supply circuit.
- Noise: Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave) Check the complete insulation of grounding.

 $\downarrow$ 

End

2-18. E: 84. Current sensor error (Outdoor unit)

## 2-19. E: 94. Trip detection (Outdoor unit)

		Operation indicator	9 time flash
Indicator	Indoor unit	Timer indicator	4 time flash
		Economy indicator	Continuous flash
		Error code	E: 94
		Main PCB	Protection stop by over-current generation after inverter
Detective actuator	Outdoor unit	Compressor	compressor start processing completed generated
			<b>NOTE:</b> The number of generations is reset when the compressor starts up.
Forecast of source			Outdoor unit fan operation defective, foreign matter on heat-exchanger, excessive rise of ambient temperature
rolecast of cause			Main PCB failure
			Inverter compressor failure (lock, winding short)

Check point 1. Check the outdoor unit fan operation, heat-exchanger, ambient temperature

- No obstructions in air passages?
- Heat exchange fins clogged
- Outdoor unit fan motor check
- Ambient temperature not raised by the effect of other heat sources?
- Discharged air not sucked in?

 $\downarrow$ 

Check point 2. Replace the main PCB

If Check point 1 do not improve the symptom, replace the main PCB.

 $\downarrow$ 

Check point 3. Replace compressor

If Check point 2 do not improve the symptom, change compressor.

 $\downarrow$ 

End

ROUBLESHOOTING

## 2-20. E: 95. Compressor motor control error (Outdoor unit)

		Operation indicator	9 time flash
Indicator	Indoor unit	Timer indicator	5 time flash
mulcator		Economy indicator	Continuous flash
		Error code	E: 95
		Main PCB	1. When running the compressor, if the detected rotor
Detective actuator	Outdoor unit	Compressor	<ul> <li>location is out of phase with actual rotor location more than 90°, the compressor stops.</li> <li>2. After the compressor restarts, if the same operation is repeated within 40 seconds, the compressor stops again.</li> <li>3. If 1. and 2. repeats 5 times, the compressor stops permanently.</li> </ul>
_			Defective connection of electrical components
Forecast of cause			Main PCB failure
			Compressor failure

Check point 1. Check Noise from Compressor
Turn on Power and check operation noise. $\rightarrow$ If an abnormal noise show, replace compres-
sor

 $\downarrow$ 

Check point 2. Check connection of around the compressor components

For compressor terminal, main PCB

- Check if connector is removed.
- Check erroneous connection.
- Check if cable is open. (Refer to inverter compressor in "Service parts information" on page 03-66.)

 $\rightarrow$  Upon correcting the removed connector or mis-wiring, reset the power.

↓

Check point 3. Replace the main PCB

If Check point 1, 2 do not improve the symptom, replace the main PCB.

 $\downarrow$ 

Check point 4. Replace compressor

If Check point 3 do not improve the symptom, change compressor.

 $\downarrow$ 

## 2-21. E: 97. Outdoor unit fan motor error (Outdoor unit)

		Operation indicator	9 time flash
Indiantar	Indoor unit	Timer indicator	7 time flash
mulcator		Economy indicator	Continuous flash
		Error code	E: 97
		Main PCB	1. When outdoor fan rotation speed is less than 100
Detective actuator	Outdoor unit	Fan motor	<ul> <li>rpm in 20 seconds after fan motor starts, fan motor stops.</li> <li>2. After fan motor restarts, if the same operation within 60 seconds is repeated 3 times in a row, compressor and fan motor stops.</li> <li>3. If 1. and 2. repeats 5 times in a row, compressor and fan motor stops permanently.</li> </ul>
Forecast of cause			Fan rotation failure Motor protection by surrounding temperature rise Main PCB failure
			Outdoor unit fan motor

#### Check point 1. Check rotation of fan

Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor)  $\rightarrow$  If fan or bearing is abnormal, replace it.

#### $\downarrow$

Check point 2. Check ambient temperature around motor

Check excessively high temperature around the motor. (If there is any surrounding equipment that causes heat)

 $\rightarrow$  Upon the temperature coming down, restart operation.

#### Check point 3. Check outdoor unit fan motor

↓

Check outdoor unit fan motor. (Refer to outdoor unit fan motor in "Service parts information" on page 03-66.)

 $\rightarrow$  If outdoor unit fan motor is abnormal, replace outdoor unit fan motor and main PCB.

 $\downarrow$ 

#### Check point 4. Check output voltage of main PCB

Check outdoor unit circuit diagram and the voltage. (Measure at main PCB side connector)

**NOTE:** For details of wiring diagram, refer to "Wiring diagrams" in Chapter 2. TECHNICAL DATA AND PARTS LIST on page 02-23.

	DC
$\left \right $	$\bigcirc \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$

Read wire	DC voltage
Red—Black	306—374 V
White—Black	15 ±1.5 V

-> If the voltage is not correct, replace Main PCB.

 $\downarrow$ 

## 2-22. E: 99. 4-way valve error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	9 time flash
		Timer indicator	9 time flash
		Economy indicator	Continuous flash
		Error code	E: 99
	Indoor unit	main PCB	When the indoor heat exchanger temperature is
	Heat exchanger temperature		compared with the room temperature, and either
	thermistor		following condition is detected continuously two times,
	Room temperature thermistor		the compressor stops.
Detective estuder	4-way valve		Indoor heat exchanger temp Room temp. > 10°C
Delective actuator			(Cooling or Dry operation)
			Indoor heat exchanger temp Room temp. < -10°C
			(Heating operation)
			If the same operation is repeated 5 times, the
			compressor stops permanently.
Forecast of cause			Connector connection failure
			Thermistor failure
			Coil failure
			4-way valve failure
			Main PCB failure

Check point 1. Check connection of connector

- Check if connector is removed.
- Check erroneous connection.
- Check if thermistor cable is open.
- $\rightarrow$  Upon correcting the removed connector or mis-wiring, reset the power.

 $\downarrow$ 

Check point 2. Check each thermistor

- Isn't it fallen off the holder?
- Is there a cable pinched?

Check characteristics of room thermistor and indoor unit heat exchanger thermistor. For the thermistor resistance value, refer to "Thermistor resistance values" on page 03-73.  $\rightarrow$  If defective, replace the thermistor.

 $\downarrow$ 

ROUBLESHOOTING

#### Check point 3. Check the solenoid coil and 4-way valve

NOTE: Refer solenoid coil and 4-way valve in "Service parts information" on page 03-66.

#### Solenoid coil

Remove P60 from PCB and check the resistance value of coil. Resistance value is 1.88 k $\Omega$  – 2.29 k $\Omega$  (at 20°C).

 $\rightarrow$  If it is open or abnormal resistance value, replace solenoid coil.

• 4-way valve

Check each piping temperature, and the location of the valve by the temperature difference. If the value location is not proper, replace 4-way valve.

#### Check point 4. Replace main PCB

If Check Point 1 to 3 do not improve the symptom, replace main PCB.

↓ End

 $\downarrow$ 

## 2-23. E: A1. Discharge temperature error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	10 time flash
		Timer indicator	1 time flash
		Economy indicator	Continuous flash
		Error code	E: A1
	Outdoor unit main PCB		Protection stop by discharge temperature ≥ 110°C
Detective actuator	Discharge temperature thermistor		during compressor operation generated 2 times within
			24 hours.
			3-way valve not opened
			EEV or capillary tube defective, strainer clogged
			Outdoor unit operation failure, foreign matter on heat
Forecast of cause			exchanger
			Discharge temperature thermistor failure
			Insufficient refrigerant
			Main PCB failure

Check point 1. Check if 3-way valve is open

If the 3-way valve is closed, open the 3-way valve and check operation.

- NOTE: For cooling operation, check gas side of the 3-way valve.
  - For heating operation, check liquid side of the 3-way valve.

 $\downarrow$ 

Check point 2. Check any of the electronic expansion valve (EEV), capillary tube, or strainer, or all

- Check if EEV open or there is a capillary tube defect. Refer to outdoor unit Electronic Expansion Valve (EEV) or Capillary tube in "Service parts information" on page 03-66.
- Check the strainer clogging.

 $\downarrow$ 

Check point 3. Check the outdoor unit fan and heat exchanger

- Check for foreign object at heat exchanger
- Check if fan can be rotated by hand.
- Check the motor. (Refer to outdoor unit fan motor in "Service parts information" on page 03-66.)

 $\downarrow$ 

Check point 4. Check the discharge thermistor

The discharge temperature thermistor characteristics check. (Check by disconnecting thermistor from PCB.)

**NOTE:** For the characteristics of the thermistor, refer to "Thermistor resistance values" on page 03-73.

#### Check point 5. Check the refrigerant amount

#### Check the refrigerant leakage.

 $\downarrow$ 

Check point 6. Replace the main PCB

If check point 1 to 5 do not improve the symptom, replace the main PCB.

 $\downarrow$ 

## 2-24. E: A3. Compressor temperature error (Outdoor unit)

Indicator	Indoor unit	Operation indicator	10 time flash
		Timer indicator	3 time flash
		Economy indicator	Continuous flash
		Error code	E: A3
	Outdoor unit main PCB		Protection stop by compressor temperature $\geq$ during
Detective actuator	Compressor temperature thermistor		compressor operation generated 2 times within 24
			hours.
			3-way valve not opened
			EEV defective, strainer clogged
			Outdoor unit operation failure, foreign matter on heat
Forecast of cause			exchanger
			Compressor temperature thermistor failure
			Insufficient refrigerant
			Main PCB failure

Check point 1. Check if 3-way valve is open

If the 3-way valve is closed, open the 3-way valve and check operation.

- NOTE: For cooling operation, check gas side of the 3-way valve.
  - For heating operation, check liquid side of the 3-way valve.

 $\downarrow$ 

Check point 2. Check the electronic expansion valve (EEV) and strainer

- Check if EEV open.
   Refer to outdoor unit Electronic Expansion Valve (EEV) in "Service parts information" on page 03-66.
- Check the strainer clogging.

 $\downarrow$ 

Check point 3. Check the outdoor unit fan and heat exchanger

- Check for foreign object at heat exchanger
- Check if fan can be rotated by hand.
- Check the motor. (Refer to outdoor unit fan motor in "Service parts information" on page 03-66.)

 $\downarrow$ 

Check point 4. Check the compressor thermistor

The compressor temperature thermistor characteristics check. (Check by disconnecting thermistor from PCB.)

**NOTE:** For the characteristics of the thermistor, refer to "Thermistor resistance values" on page 03-73.

#### Check point 5. Check the refrigerant amount

#### Check the refrigerant leakage.

 $\downarrow$ 

Check point 6. Replace the main PCB

If check point 1 to 5 do not improve the symptom, replace the main PCB.

 $\downarrow$ 

## 3. Troubleshooting without error code

## 3-1. Indoor unit—No power

	Power supply failure
Forecast of cause	External cause
	Electrical components defective

Check point 1. Check installation condition

• Isn't the breaker down?

**TROUBLESHOOTING** 

• Check loose or removed connection cable.

-> If abnormal condition is found, correct it by referring to the installation manual or the "DESIGN & TECHNICAL MANUAL".

Check point 2. Check external cause at indoor and outdoor (voltage drop or noise)

↓

- Instant drop: Check if there is a large load electric apparatus in the same circuit.
- Momentary power failure: Check if there is a defective contact or leak current in the power supply circuit.
- Noise: Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave) Check the complete insulation of grounding.

 $\downarrow$ 

Check point 3. Check electrical components

Check the voltage of power supply.

Check if AC 207 to 253 V appears at outdoor unit terminal L—N. -> If no, go to "Check point 1" and "Check point 2".

Check fuse in filter PCB. If fuse is open, check if the wiring between terminal and filter PCB is loose, and replace fuse.

↓

Check varistor in filter PCB.
 If varistor is defective, there is a possibility of an abnormal power supply.
 Check the correct power supply and replace varistor.
 Upon checking the normal power supply, replace varistor.

 $\downarrow$ 

## **3-2. Outdoor unit—No power**

	Power supply failure
Forecast of cause	External cause
	Electrical components defective

Check point 1. Check installation condition

- Is the circuit breaker on or off?
- Check loose or removed connection cable.

 $\rightarrow$  If abnormal condition is found, correct it by referring to the installation manual or the "DESIGN & TECHNICAL MANUAL".

Check point 2. Check external cause at indoor and outdoor (voltage drop or noise)

• Instant drop: Check if there is a large load electric apparatus in the same circuit.

↓

- Momentary power failure: Check if there is a defective contact or leak current in the power supply circuit.
- Noise: Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave) Check the complete insulation of grounding.

 $\downarrow$ 

Check point 3. Check electrical components

Check the voltage of power supply.

Check if AC 207 to 253 V appears at outdoor unit terminal L—N  $\rightarrow$  If no, go to "Check point 1" and "Check point 2".



**SOUBLESHOOTING** 

 $\downarrow$ 

I

• Check fuse in main PCB. If fuse is open, check if the wiring between terminal and main PCB is loose, and replace fuse.

$\checkmark$
Check point 4. Replace the main PCB
If check point 1 to 3 do not improve the symptom, replace the main PCB.

 $\downarrow$ 

## 3-3. No operation (Power is on)

	Setting/ Connection failure
Forecast of cause	External cause
	Electrical components defective

Check point 1. Check indoor and outdoor installation condition

• Indoor unit:

**TROUBLESHOOTING** 

- Check incorrect wiring between indoor unit and remote controller.
- Check if there is an open cable connection.
- Are these indoor unit, outdoor unit, and remote controller suitable model names to connect?

-> If there is some abnormal condition, correct it by referring to the installation manual and "DESIGN & TECHNICAL MANUAL".

Turn off the power and check correct followings.

• Is there loose or removed communication line of indoor unit and outdoor unit?

↓

#### Check point 2. Check external cause at indoor and outdoor (Voltage drop or Noise)

↓

• Instant drop: Check if there is a large load electric apparatus in the same circuit.

Ţ

- Momentary power failure: Check if there is a defective contact or leak current in the power supply circuit.
- Noise: Check if there is any equipment causing harmonic wave near electric line. (Neon bulb or electric equipment that may cause harmonic wave) Check the complete insulation of grounding.

Check point 3. Check wired remote controller and controller PCB

Check voltage at CNC01 (terminal 1—3) of main PCB. (Power supply to remote controller)

- If it is DC 13 V, remote controller is failure. (The controller PCB is normal)
   > Replace remote controller.
- If it is DC 0 V, controller PCB is failure. (Check the remote controller once again)
  - -> Replace controller PCB.

#### $\downarrow$

Check point 4. Replace main PCB

If check point 1 to 3 do not improve the symptom, change main PCB.

Ļ

## 3-4. No cooling/No heating

	Indoor unit error
	Outdoor unit error
Forecast of cause	Effect by surrounding environment
	Connection pipe/Connection wire failure
	Refrigeration cycle failure

- Does Indoor unit fan run in the HIGH mode?
- Is air filter dirty?

**TROUBLESHOOTING** 

- Is heat exchanger clogged?
- Check if energy save function is operated.

↓

↓

Ţ

Check point 2. Check outdoor unit operation

- Check if outdoor unit is operating.
- Check any objects that obstruct the air flow route.
- Check if heat exchanger is clogged.
- Is the valve open?

### Check point 3. Check site condition

- Is capacity of Indoor unit fitted to the room size?
- Any windows open or direct sunlight?

### Check point 4. Check indoor/outdoor installation condition

- Check connection pipe (specified pipe length and pipe diameter?)
- Check any loose or removed communication line.

 $\rightarrow$  If there is an abnormal condition, correct it by referring to the installation manual or the "DESIGN & TECHNICAL MANUAL".

#### Check point 5. Check Refrigeration cycle

- Check if strainer is clogged (Refer to the figure below).
- Measure gas pressure, and if there is a leakage, correct it.
- Check if EEV open or there is a capillary tube defect. Refer to outdoor unit Electronic Expansion Valve (EEV) or Capillary tube in "Service parts information" on page 03-66.

# Check compressor. Refer to compressor in "Service parts information" on page 03-66. Refer to inverter compressor in "Service parts information" on page 03-66.

**NOTE:** When recharging the refrigerant, make sure to perform vacuuming, and recharge the specified amount.

(MPa

MPa)



#### NOTES:

**TROUBLESHOOTING** 

• Strainer normally does not have temperature difference between inlet and outlet as shown below.



• If there is a difference like shown below, there is a possibility of inside clogged. In this case, replace the strainer.



## 3-5. Abnormal noise

	Abnormal installation (indoor unit/outdoor unit)		
Forecast of cause	Fan failure (indoor unit/outdoor unit)		
	Compressor failure (outdoor)		
Diagnosis method when a	abnormal noise is occurred		
Abnormal noise is coming from Indoor unit. (Check and correct followings)	Abnormal noise is coming from Outdoor unit. (Check and correct followings)		
$\downarrow$	$\downarrow$		
<ul> <li>Is main unit installed in stable condition?</li> <li>Is the installation of air suction grille and front panel normal?</li> </ul>	<ul> <li>Is main unit installed in stable condition?</li> <li>Is fan guard installed normally?</li> </ul>		
$\downarrow$	↓		
<ul> <li>Is fan broken or deformed?</li> <li>Is the screw of fan loose?</li> <li>Is there any object which obstruct the fan rotation?</li> </ul>	<ul> <li>Is fan broken or deformed?</li> <li>Is the screw of fan loose?</li> <li>Is there any object which obstruct the fan rotation?</li> </ul>		
$\downarrow$	$\downarrow$		
End	Check if vibration noise by loose bolt or contact noise of piping is happening.		
	$\downarrow$		
	<ul> <li>Is compressor locked?</li> <li>Check Compressor Refer to compressor and inverter com- pressor in "Service parts information" on page 03-66.</li> </ul>		
	$\downarrow$		

End

TROUBLESHOOTING

TROUBLESHOOTING

## 3-6. Water leaking

TROUBLESHOOTING

Forecast of cause	Erroneous installation	
	Drain hose failure	
Diagnosis method when water leak occurs	Diagnosis method when water is spitting out	
<ul> <li>Is main unit installed in stable condition?</li> <li>Is main unit broken or deformed at the time of transportation or maintenance?</li> </ul>	Is the filter clogged?	
$\downarrow$	$\downarrow$	
<ul><li>Is drain hose connection loose?</li><li>Is there a trap in drain hose?</li><li>Is drain hose clogged?</li></ul>	Check gas pressure and cor- rect it if there was a gas leak.	
$\downarrow$	$\downarrow$	
Is fan rotating?	End	
$\downarrow$		
End		

## 4. Troubleshooting with error code (For wireless LAN adapter)

## 4-1. E: 18. External communication error between indoor unit and WLAN adapter

	Indoor unit	Operation indicator	1 time flash
Indicator		Timer indicator	8 time flash
		Economy indicator	Continuous flash
		Error code	E: 18
	Wireless LAN	LED1 (green)	Flashing fast
	adapter	LED2 (orange)	On
	Wireless LAN adapter PCB		After receiving a signal from the wireless LAN adapter,
	Detective actuator Controller PCB		the same signal has not been received for 15 seconds.
			NG
Detective actuator			Outdoor unit Controller PCB Parts: WIRELESS LAN ADAPTER WIRELESS LAN Router Mobile device)
Forecast of cause			Connection between indoor unit and wireless LAN adapter failure
			Controllor DCP foilure

#### Check point 1. Check the connection

 Check any loose or removed connection of between the wireless LAN adapter PCB and controller PCB.
 If there is abaarmed condition, correct it

-> If there is abnormal condition, correct it.

Check the connection condition on the controller PCB.
 -> If there is loose connector, open cable or mis-wiring, correct it.

Check point 2. Replace wireless LAN adapter.

↓

If check point 1 do not improve the symptom, replace the wireless LAN adapter and cancel the registration of air conditioner on the mobile app.

After replacing the adapter, perform the pairing on the mobile app.

For the method of the mobile app, refer to "Mobile app setting method" on page 03-64.

 $\downarrow$ 

Check point 3. Replace controller PCB

If check point 1 to 2 do not improve the symptom, replace the controller PCB.

 $\downarrow$ 

## 4-2. Wireless LAN adapter error

Indicator	Indoor unit	Operation indicator	No indication
		Timer indicator	No indication
		Economy indicator	No indication
		Error code	_
	Wireless LAN adapter	LED1 (green)	Flashing fast
		LED2 (orange)	Flashing fast
Detective actuator	Wireless LAN adapter setting		When the setting button becomes on for consecutive 60
	button		seconds or more.
	Wireless LAN adapter PCB		Setting button
Forecast of cause			Wireless LAN adapter setting button failure
			Wireless LAN adapter PCB failure

Check point 1. Check the setting button

**TROUBLESHOOTING** 

Check if setting button is kept pressed.

-> If the setting button is held down by the foreign matter, remove the foreign matter or remove the cause of the button press.

 $\downarrow$ 

Check point 2. Replace wireless LAN adapter.

If check point 1 do not improve the symptom, replace the wireless LAN adapter and cancel the registration of air conditioner on the mobile app.

After replacing the adapter, perform the pairing on the mobile app.

For the method of the mobile app, refer to "Mobile app setting method" on page 03-64.

 $\downarrow$ 

Check point 3. Replace controller PCB

If check point 1 to 2 do not improve the symptom, replace the Wireless LAN adapter.

 $\downarrow$ 

## 4-3. Network communication error between wireless LAN router and WLAN adapter

Indicator	Indoor unit	Operation indicator	No indication
		Timer indicator	No indication
		Economy indicator	No indication
		Error code	—
	Wireless LAN adapter	LED1 (green)	On
		LED2 (orange)	Flashing fast
	Wireless LAN router		When the not connection between wireless LAN adapter
	Wireless LAN adapter PCB		and wireless LAN router.
Detective actuator			Outdoor unit Parts: WIRELESS LAN ADAPTER NG NG Internet WIRELESS LAN Router Mobile App (Mobile device)
Forecast of cause			Connection cable failure of wireless LAN router Connection between wireless LAN adapter and wireless LAN router failure Wireless LAN router failure
			Wireless LAN adapter PCB failure

Check point 1. Check the connection cable

Check the connection cable on the wireless LAN router.

-> If there is loose connector, open cable or mis-wiring, correct it.

Check point 2. Check the connection status.

↓

Check the connection status to the internet and wireless LAN router. -> If the wireless LAN router is not connected to the internet, check the transmission between wireless LAN products (ex. PC or game console, etc.) other than air conditioner and wireless LAN router.

If no, go to "Check point 2-2".

Check point 3. Turn on the power again of air conditioner.

↓

If check point 1 to 2 do not improve the symptom, turn on the power of the air conditioner again and wait for 60 seconds.

 $\downarrow$ 

#### Check point 4. Replace wireless LAN adapter.

If check point 3 do not improve the symptom, replace the wireless LAN adapter and cancel the registration of air conditioner on the mobile app.

After replacing the adapter, perform the pairing on the mobile app.

For the method of the mobile app, refer to "Mobile app setting method" on page 03-64.

 $\downarrow$ 

End

Check point 2-2. Check the transmission state

**TROUBLESHOOTING** 

Check the wireless transmission state pf the wireless LAN router (LED status). -> If the wireless transmission from the wireless LAN router has not been outgoing, inquire to the wireless LAN router maker.

 $\downarrow$ 

### 4-4. E: 18. Communication error

Indicator	Indoor unit	Operation indicator	1 time flash
		Timer indicator	8 time flash
		Economy indicator	Continuous flash
		Error code	E: 18
	Wireless LAN adapter	LED1 (green)	Flashing fast
		LED2 (orange)	Flashing fast
Detective actuator	Wireless LAN router		When the external communication error between indoor
	Wireless LAN adapter PCB		unit and WLAN adapter and network communication
	Indoor unit controller PCB		error between wireless LAN router and WLAN adapter
			has occurred simultaneously.
			NG NG NG
			Outdoor unit PCB Parts: WIRELESS LAN ADAPTER Router COUTOUR UNIRELESS LAN Router COUTOUR Server (Mobile App (Mobile device)
	1		Connection cable failure of wireless LAN router
			Wireless LAN router failure
			Connection between indoor unit and wireless LAN
Forecast of cause			adapter failure
			Connection between wireless LAN adapter and wireless LAN router failure
			Wireless LAN adapter PCB failure
			Controller PCB failure

Check point 1. Check the connection cable

↓

Check the connection cable on the wireless LAN router.

-> If there is loose connector, open cable or mis-wiring, correct it.

Check point 2. Check the connection status.and transmission state

Check the connection status to the internet and wireless LAN router.
 -> If the wireless LAN router is not connected to the internet, check the transmission between wireless LAN products (ex. PC or game console, etc.) other than air conditioner and wireless LAN router.
 If no, go to "Check point 4".

Check the wireless transmission state of wireless LAN router (LED status).
 -> If the wireless transmission from the wireless LAN router has not been outgoing, inquire to wireless LAN router maker.

If the display pattern is changed as follows, go to "Check point 3-2".

- LED 1 (green): flashing fast
- LED 2 (orange): on

If no, go to "Check point 3-1".

 $\downarrow$ 

ROUBLESHOOTIN
#### Check point 3-1. Turn on the power again of air conditioner.

If check point 1 to 2 do not improve the symptom, turn on the power of the air conditioner again and wait for 60 seconds.

- -> When the flashing pattern of the LED 2 (orange) is on, go to "Check point 3-2".
- -> When the flashing pattern of the LED 2 (orange) is flashing fast, go to "Check point 4".

Check point 3-2. Check the connection.

**TROUBLESHOOTING** 

- Check any loose or removed connection of between the wireless LAN adapter PCB and controller PCB.
  - -> If there is abnormal condition, correct it.

Ţ

Check the connection condition on the controller PCB.
 -> If there is loose connector, open cable or mis-wiring, correct it.

 $\downarrow$ 

Check point 4. Replace wireless LAN adapter.

If check point 2 to 3 do not improve the symptom, replace the wireless LAN adapter and cancel the registration of air conditioner on the mobile app. After replacing the adapter, perform the pairing on the mobile app.

For the method of the mobile app, refer to "Mobile app setting method" on page 03-64.

 $\downarrow$ 

Check point 5. Replace controller PCB

If check point 4 do not improve the symptom, replace the controller PCB.

 $\downarrow$ 

End

#### 4-5. E: 18. Wireless LAN adapter non-energized

		Operation indicator	1 time flash	
	Indoor unit	Timer indicator	8 time flash	
Indicator		Economy indicator	Continuous flash	
Indicator		Error code	E: 18	
	Wireless LAN adapter	LED1 (green)	Off	
		LED2 (orange)	Off	
Detective actuator	Indoor unit controller PCB		When the voltage (DC 12 V) does not output from the	
	Wireless LAN adapter PCB		controller PCB.	
			Indoor unit controller PCB failure	
Forecast of cause			Wireless LAN adapter PCB failure	
			Wiring connection failure	

Check point 1. Check the connection.

**TROUBLESHOOTING** 

• Check any loose or removed connection of between the wireless LAN adapter PCB and controller PCB.

-> If there is abnormal condition, correct it.

Check the connection condition on the controller PCB.
 -> If there is loose connector, open cable or mis-wiring, correct it.

Check point 2. Check the wireless LAN adapter PCB and the controller PCB

Ţ

Check voltage at CN6 (terminal 1—2) of main PCB. (Power supply to remote controller)

- If it is DC 0 V, controller PCB is failure. -> Replace controller PCB.
- If it is DC 12 V, wireless LAN adapter PCB is failure.
  -> Replace the wireless LAN adapter and cancel the registration of air conditioner on the mobile app.
  After replacing the adapter, perform the pairing on the mobile app.

For the method of the mobile app, refer to "Mobile app setting method" on page 03-64.

↓

End

#### 4-6. Wireless LAN adapter Sleep mode (Indoor unit)

		Operation indicator	No indication
	Indoor unit	Timer indicator	No indication
Indicator		Economy indicator	No indication
muicator		Error code	_
	Wireless LAN adapter	LED1 (green)	Off
		LED2 (orange)	Off
Detective actuator	Sleep mode		When the state in which fly a wireless(SSID) have
			passed 1 hour.
Forecast of cause			Sleep mode

Check point 1. Cheak the sleep mode

Press the Wireless LAN adapter setting button the 3 seconds or more. -> If the display pattern is changed as follows, refer to "Network communication error between wire-

less LAN router and WLAN adapter" on page 03-58.

- LED 1 (green): on
- LED 2 (orange): flashing fast

## 4-7. Mobile app setting method

When the wireless LAN adapter is replaced, delete of all air conditioner is necessary on the mobile app.

1. Launch the mobile app.

**TROUBLESHOOTING** 



2. Tap the icon to display the Setting screen.



3. Tap the "Air conditioner editing".



#### 4. Tap the air conditioner to be deleted.



5. Tap the Delete button.

**TROUBLESHOOTING** 



6. Tap the OK button.



7. Deletion of the air conditioner registered in the mobile app is completed.

## 5. Service parts information

#### 5-1. Compressor

TROUBLESHOOTING



#### 5-2. Inverter compressor



 $\downarrow$ 

Check point 3. Replace inverter PCB

If check point 1 to 2 do not improve the symptom, replace main PCB.

**SOUBLESHOOTING** 

## 5-3. Outdoor unit Electronic Expansion Valve (EEV)

Check point 1. Check connections

Check connection of connector. (Loose connector or open cable)

**NOTE:** For details of wiring diagram, refer to "Wiring diagrams" in Chapter 2. TECHNICAL DATA AND PARTS LIST on page 02-23.

Check point 2. Check coil of EEV

Remove connector, check each winding resistance of coil.

Read wire	Resistance value		
White - Red			
Yellow - Red	46 Ω ± 4 Ω	Ω	
Orange - Red	at 20°C	$\bigcirc$	
Blue - Red		$\sim$ 0	

 $\rightarrow$  If Resistance value is abnormal, replace EEV.

Check point 3. Check voltage from main PCB

Remove connector and check voltage (DC 12 V)  $\rightarrow$  If it does not appear, replace main PCB.

Check point 4. Check noise at start up

Turn on the power and check the operation noise.

 $\rightarrow$  If an abnormal noise does not show, replace main PCB.



#### Check point 6. Check strainer

• Strainer normally does not have temperature difference between inlet and outlet as shown below.



• If there is a difference like shown below, there is a possibility of inside clogged. In this case, replace the strainer.



#### 5-4. Indoor unit fan motor

Check point 1. Check rotation of fan

**TROUBLESHOOTING** 

Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor)  $\rightarrow$  If fan or bearing is abnormal, replace it.

Check point 2. Check resistance of indoor fan motor

Refer to below. Circuit-test "Vm" and "GND" terminal **NOTE:** Vm: DC voltage, GND: Earth terminal

 $\rightarrow$  If they are short-circuited (below 300 k $\Omega$ ), replace indoor fan motor and controller PCB.

Pin number (wire color)	Terminal function (symbol)		
1 (Red)	DC voltage (Vm)		
2	No function		
3	No function		
4 (Black)	Ground terminal (GND)		
5 (White)	Control voltage (Vcc)		
6 (Yellow)	Speed command (Vsp)		
7 (Blue)	Feed back (FG)		

#### 5-5. Outdoor unit fan motor

Check point 1. Check rotation of fan

**TROUBLESHOOTING** 

Rotate the fan by hand when operation is off. (Check if fan is caught, dropped off or locked motor)  $\rightarrow$  If fan or bearing is abnormal, replace it.

Check point 2. Check resistance of outdoor fan motor

Refer to below. Circuit-test "Vm" and "GND" terminal **NOTE:** Vm: DC voltage, GND: Earth terminal

 $\rightarrow$  If they are short-circuited (below 300 k $\Omega$ ), replace outdoor fan motor and controller PCB.

Pin number (wire color)	Terminal function (symbol)		
1 (Red)	DC voltage (Vm)		
2	No function		
3	No function		
4 (Black)	Ground terminal (GND)		
5 (White)	Control voltage (Vcc)		
6 (Yellow)	Speed command (Vsp)		
7 (Blue)	Feed back (FG)		

# 5-6. 4-way valve coil (solenoid coil)/4-way valve



# Check Point 4: Replace main PCB If none of Checks 1 to 3 apply, replace the main PCB.

**SOUBLESHOOTING** 

# 6. Thermistor resistance values

# 6-1. Indoor unit

**TROUBLESHOOTING** 

#### Room temperature thermistor

Temperature (°C)	Resistance (kΩ)	Voltage (V)
-10.0	58.25	0.73
-5.0	44.03	0.93
0.0	33.62	1.15
5.0	25.93	1.39
10.0	20.18	1.66
15.0	15.84	1.94
20.0	12.54	2.22
25.0	10.00	2.50
30.0	8.04	2.77
35.0	6.51	3.03
40.0	5.30	3.27
45.0	4.35	3.49

## Heat exchanger temperature thermistor

Temperature (°C)	Resistance (kΩ)	Voltage (V)	
-30.0	1,131.91	0.21	
-25.0	804.52	0.29	
-20.0	579.59	0.40	
-15.0	422.89	0.53	
-10.0	312.27	0.69	
-5.0	233.21	0.88	
0.0	176.03	1.10	
5.0	134.23	1.36	
10.0	103.34	1.63	
15.0	80.28	1.92	
20.0	62.91	2.21	
25.0	49.70	2.51	
30.0	39.57	2.79	
35.0	31.74	3.06	
40.0	25.64	3.30	
45.0	20.85	3.53	
50.0	17.06	3.73	
55.0	14.05	3.90	
60.0	11.64	4.02	
65.0	9.69	4.19	

# 6-2. Outdoor unit

**TROUBLESHOOTING** 

# Discharge temperature thermistor

Temperature (°C)	Resistance (kΩ)	Voltage (V)		
-30.0	984.49	0.03		
-25.0	709.67	0.05		
-20.0	518.22	0.06		
-15.0	383.06	0.09		
-10.0	286.42	0.11		
-5.0	216.49	0.15		
0.0	165.33	0.19		
5.0	127.48	0.25		
10.0	99.21	0.31		
15.0	77.88	0.39		
20.0	61.64	0.49		
25.0	49.17	0.60		
30.0	39.52	0.72		
35.0	31.99	0.86		
40.0	26.07	1.02		
45.0	21.38	1.19		
50.0	17.64	1.37		
55.0	14.65	1.56		
60.0	12.23	1.76		
65.0	10.26	1.97		
70.0	8.65	2.17		
75.0	7.34	2.38		
80.0	6.25	2.58		
85.0	5.34	2.77		
90.0	4.59	2.96		
95.0	3.96	3.13		
100.0	3.43	3.30		
105.0	2.98	3.45		
110.0	2.60	3.59		
115.0	2.28	3.72		
120.0	2.00	3.84		

#### Heat exchanger temperature thermistor

Temperature (°C)	Resistance (kΩ)	Voltage (V)
-30.0	95.57	0.24
-25.0	68.89	0.32
-20.0	50.31	0.43
-15.0	37.19	0.57
-10.0	27.81	0.73
-5.0	21.02	0.92
0.0	16.05	1.14
5.0	12.38	1.39
10.0	9.63	1.65
15.0	7.56	1.93
20.0	5.98	2.21
25.0	4.77	2.49
30.0	3.84	2.77
35.0	3.11	3.02
40.0	2.53	3.26
45.0	2.08	3.48
50.0	1.71	3.67
55.0	1.42	3.85
60.0	1.19	4.00
65.0	1.00	4.13
70.0	0.84	4.25
75.0	0.71	4.35
80.0	0.61	4.43

## Outdoor temperature thermistor

Temperature (°C)	Resistance (kΩ)	Voltage (V)
-30.0	224.33	0.73
-25.0	159.71	0.97
-20.0	115.24	1.25
-15.0	84.21	1.56
-10.0	62.28	1.90
-5.0	46.58	2.26
0.0	35.21	2.61
5.0	26.88	2.94
10.0	20.72	3.25
15.0	16.12	3.52
20.0	12.64	3.76
25.0	10.00	3.97
30.0	7.97	4.14
35.0	6.40	4.28
40.0	5.18	4.41
45.0	4.21	4.51
50.0	3.45	4.59
55.0	2.85	4.65

**TROUBLESHOOTING** 

TROUBLESHOOTING



# **4. CONTROL AND FUNCTIONS**

## CONTENTS

# **4. CONTROL AND FUNCTIONS**

4. Detation much an extend of a memory of a	04.4
1. Rotation number control of compressor	
1-1. Cooling operation	04-1
1-2. Heating operation	
1-3. Dry operation	
1-4. Rotation number of compressor at normal start-up	
1-5. Limitation of compressor rotation number by outdoor temperature	
2. Auto changeover operation	04-8
3. Fan control	04-10
3-1. Indoor fan control	04-10
3-2. Outdoor fan control	04-13
4. Louver control	04-16
4-1. Horizontal louver control	04-16
4-2. Adjust the horizontal louver	04-16
4-3. Swing operation	04-17
5. Timer operation control	
5-1 Wireless remote control	04-18
5-2 Wired remote control	04-20
6 Defrest operation control	04 22
6.1. Defrect exerction in besting exerction stenned	
7. Various control	04-25
7-1. Auto restart	04-25
7-2. MANUAL AUTO operation	04-25
7-3. Forced cooling operation	
7-4. 10 °C HEAT operation	
7-5. ECONOMY operation	
7-6. POWERFUL operation	
7-7. Fresh air control	
7-8. Compressor preneating	
7-9. Electronic expansion valve control	
7-10. Prevention to restart for 3 minutes (3 minutes st)	
7-11. 4-way valve control	
7-12. Outdoor unit low noise operation	
8. Various protections	04-29
8-1. Discharge gas temperature over-rise prevention control	04-29
8-2. Anti-freezing control (cooling and dry mode)	04-29
8-3. Current release control	04-30
8-4. Cooling pressure over-rise protection	04-31
8-5. Compressor temperature protection	04-31
8-6. High pressure protection	04-31
8-7. Low outdoor temperature protection	04-31

# **CONTENTS** (continued)

8-8.	High	temperature	and high	pressure	release	control		04-32
------	------	-------------	----------	----------	---------	---------	--	-------

#### 1. Rotation number control of compressor

## 1-1. Cooling operation

A sensor (room temperature thermistor) built in the indoor unit body will usually perceive difference or variation between a set temperature and present room temperature, and controls the operation rotation number of the compressor.

- If the room temperature is 6.0°C higher than a set temperature, the operation rotation number of compressor will attain to maximum performance.
- If the room temperature is 1.0°C lower than a set temperature, the compressor will be stopped.
- When the room temperature is within the range of +6.0°C to -1.0°C of the setting temperature, the rotation number of compressor is controlled within the range shown in the table below. However, the maximum rotation number is limited in the range shown in the figure below based on the indoor fan mode and the outdoor temperature.

#### Rotation number range of compressor

Unit: rps

Model name	Minimum rotation number	Maximum rotation number
RSG09KMCEN	Q	63
RSG12KMCEN	0	03
RSG14KMCEN	10	58

#### · Limit of maximum speed based on outdoor temperature



Unit: rps

**ROL AND** 

CTIONS

	Outdoor	Indoor unit fan mode			
Model name	temperature zone	HIGH	MED	LOW	QUIET
	A zone	63	34	24	18
	B zone	63	34	24	18
RECOOKMOEN	C zone	63	34	24	18
ROOUSKINGEN	D zone	46	34	24	20
	E zone	46	32	24	16
	F zone	42	32	24	16
	A zone	63	32	24	16
	B zone	63	32	24	16
	C zone	63	32	24	16
RSGIZNWICEN	D zone	42	30	20	12
	E zone	42	30	20	12
	F zone	42	30	20	12
	A zone	58	30	22	14
	B zone	58	30	22	14
RSG14KMCEN	C zone	58	30	22	14
	D zone	42	28	26	24
	E zone	42	28	26	24
	F zone	42	28	26	24

#### 1-2. Heating operation

A sensor (room temperature thermistor) built in indoor unit body will usually perceive difference or variation between setting temperature and present room temperature, and controls operation rotation number of compressor.

- If the room temperature is 6.0°C lower than a set temperature, the operation rotation number of compressor will attain to maximum performance.
- If the room temperature is 1.0°C higher than a set temperature, the compressor will be stopped.
- When the room temperature is within the range of +1.0°C to -6.0°C of the setting temperature, the rotation number of compressor is controlled within the range shown below.
- Rotation number range of compressor

Unit: rps

Model name	Minimum rotation number	Maximum rotation number	
RSG09KMCEN	9	120	
RSG12KMCEN	8	120	
RSG14KMCEN	10	130	

Limit of maximum speed based on outdoor temperature
 In heating operation, maximum rotation number is defined by outdoor temperature and fan mode.



Unit: rps

Model name	Outdoor	Indoor unit fan mode			
	temperature zone	HIGH	MED	LOW	QUIET
	A zone	120	94	68	54
RSG09KMCEN	B zone	120	80	54	50
	C zone	120	74	54	46
	A zone	120	94	74	54
RSG12KMCEN	B zone	120	87	54	39
	C zone	120	80	54	36
RSG14KMCEN	A zone	130	87	63	39
	B zone	130	87	63	39
	C zone	130	87	63	39

**DL AND** 

### 1-3. Dry operation

The rotation number of compressor shall change according to the temperature, set temperature, and room temperature variation which the room temperature sensor of the indoor unit has detected as shown in the table below.

Zone is defined by set temperature and room temperature.

#### Rotation number range of compressor

Unit: rps

Model name	Outdoor temperature zone	Operating frequency
	X zone	18
RSG09KMCEN	J zone	14
	Y zone	0
	X zone	16
RSG12KMCEN	J zone	12
	Y zone	0
	X zone	14
RSG14KMCEN	J zone	12
	Y zone	0

#### Compressor control based on room temperature



## 1-4. Rotation number of compressor at normal start-up

# Models: ROG09KMCEN and ROG12KMCEN

Rotation number of compressor soon after starting is controlled as below.



Rotation number	I	II		IV	V
(rps)	40	56	77	90	99
Time (sec)	1	2	3	4	5
(sec)	60	240	280	360	400

#### Model: ROG14KMCEN

Rotation number of compressor soon after starting is controlled as below.



Rotation	I	II		IV	V	VI
number (rps)	35	52	64	71	89	97
Time (sec)	1	2	3	4	5	6
Time (Sec)	60	140	170	200	350	410

# 1-5. Limitation of compressor rotation number by outdoor temperature

The minimum rotation number of compressor is limited by outdoor temperature as below.

Cooling/Dry mode



Model name	Outdoor temperature zone	Limitation of compressor rotation number
	A zone	38
	B zone	38
ROCOOKMOEN	C zone	36
ROGOSKMCEN	D zone	31
	E zone	1
	F zone	30
	A zone	34
	B zone	34
BOC12KMCEN	C zone	34
ROGIZRWICEN	D zone	34
	E zone	12
	F zone	18
	A zone	32
	B zone	32
	C zone	32
RUG14KMCEN	D zone	32
	E zone	14
	F zone	22

Heating mode



Unit: rps

Model name	Outdoor temperature zone	Limitation of compressor rotation number
	A zone	45
	B zone	25
POCOOKMOEN	C zone	17
ROGOSRMCEN	D zone	10
	E zone	1
	F zone	1
	A zone	43
	B zone	25
	C zone	17
RUGIZKMCEN	D zone	10
	E zone	1
	F zone	1
	A zone	36
	B zone	31
	C zone	20
KUG 14KMCEN	D zone	14
	E zone	1
	F zone	1

#### 2. Auto changeover operation

When the air conditioner is set to AUTO mode by remote controller, operation starts in the optimum mode from among heating, cooling, dry and monitoring modes. During operation, the optimum mode is automatically switched in accordance with temperature changes. The temperature can be set between 18°C and 30°C in 1.0°C steps.

• When operation starts, indoor fan and outdoor fan are operated for around 1 minute. Room temperature and outdoor temperature are sensed, and the operation mode is selected in accordance with the table below.

Room temperature	Operation mode
Tr > Ts + 2°C	Cooling
Ts + 2°C ≥ Tr ≥ Ts - 2°C	Middle zone
Tr < Ts - 2°C	Heating

Tr: Room temperature

**COL AND** 

Ts: Setting temperature

**NOTE:** When the operation mode is middle zone, indoor unit operation mode is selected as below.

- Same operation mode is selected as outdoor unit. If outdoor unit is operating in cooling and heating mode, indoor unit will be operated by the same operation mode.
- Selected by outdoor temperature.
  If outdoor unit is operating in other than cooling and heating mode, indoor unit will be operated according to the outdoor temperature as below.

Outdoor temp.	Operation mode
25°C or more	Cooling
Less than 25°C	Heating

- When the compressor was stopped for 6 consecutive minutes by temperature control function after the cooling or heating mode was selected as above, operation is switched to monitoring mode and the operation mode selection is done again.
- When the middle zone is selected on the predetermining of the operation mode, the operation mode before the changing to the monitoring mode is selected.

2. Auto changeover operation

NTROL AND NCTIONS

#### **Operation flow chart**



#### 3. Fan control

Tr: Room temperature Ts: Setting temperature

## 3-1. Indoor fan control

#### Fan speed

OL AND

Indoor fan speed is defined as below.

Operation mode	Ean mode	Speed (rpm)			
Operation mode	Fairmoue	RSG09KMCEN	RSG12KMCEN	RSG14KMCEN	
	POWERFUL	1,310	1,340	1,400	
	HIGH	1,240	1,270	1,330	
	MED+	1,120	1,130	1,160	
Heating	MED	1,050	1,070	1,100	
rieating	LOW	900	910	910	
	QUIET	610	610	670	
	Cool air prevention	580	580	580	
	S-LOW	470	470	470	
	POWERFUL	1,200	1,220	1,320	
	HIGH	1,130	1,150	1,250	
	MED	940	970	1,020	
Cooling/Fan	LOW	780	810	810	
	QUIET	580	580	580	
	Soft quiet	510* <sup>1</sup>	510* <sup>1</sup>	510* <sup>1</sup>	
	S-LOW	470* <sup>2</sup>	470* <sup>2</sup>	470* <sup>2</sup>	
Dny		X zone: 580	X zone: 580	X zone: 580	
Сту		J zone: 580	J zone: 580	J zone: 580	

\*1: Fan mode only

\*2: Cooling mode only

#### Fan operation

Airflow can be switched in 5 steps such as AUTO, QUIET, LOW, MED, HIGH while indoor unit fan only runs.

When fan mode is set at AUTO, it operates on MED fan speed.

#### Cooling operation

Switch the airflow AUTO, and indoor fan motor will run according to room temperature, as below. On the other hand, if switched in HIGH—QUIET, indoor motor will run at a constant airflow of COOL operation modes QUIET, LOW, MED, HIGH as shown in "Fan speed" above.

Airflow change over (Cooling: Auto)



# Dry operation

During dry operation, fan speed setting can not be changed as shown in "Fan speed" above.

#### Heating operation

Switch the airflow AUTO, and the indoor fan motor will run according to a room temperature, as below.

On the other hand, if switched in HIGH—QUIET, the indoor motor will run at a constant airflow of HEAT operation modes QUIET, LOW, MED, HIGH as shown in "Fan speed" above.

Airflow change over (Heating: Auto)



## Cool air prevention control (heating mode)

The maximum value of the indoor fan speed is set as shown below, based on the detected temperature by the indoor heat exchanger sensor on heating mode.

Normal operation



7 minutes later:



#### Powerful operation





Switch the airflow AUTO at cooling mode, and the indoor fan motor will run as shown below.



3-1. Indoor fan control

## **3-2. Outdoor fan control**

Outdoor fan motor

This outdoor unit has a DC fan motor. (Control method is different between AC and DC motors.)

#### Fan speed

#### Model: ROG09KMCEN

Fan speed is defined by outdoor temperature and compressor frequency.

Outside air temperature zone selection



Fan step	Cooling	Heating	Dry	Cooling or dry at low outdoor temp.		
	Y zone		Y zone	Z zone	F zone	G zone
S-HIGH2		1,120				
S-HIGH1	990	1,120	—			
HIGH	990	870	—			—
10		870	—			—
9	990	870	990	630	300	280
8	920	870	920	630	300	280
7	920	870	920	630	270	220
6	920	710	920	630	270	220
5	920	660	920	610	270	210
4	810	660	810	450	240	210
3	670	500	670	310	220	200
2	570	500	570	200	220	200
1	520	500	520	200	200	200

**NOTE:** After defrost control on the heating mode, the fan speed is kept higher regardless of the compressor frequency.

Fan speed after defrost control: 1,120 rpm

#### Model: ROG12KMCEN

Fan speed is defined by outdoor temperature and compressor frequency.

Outside air temperature zone selection



Unit: rpm

Fan step	Cooling	Heating	Dry	Cooling or dry at low outdoor temp.		
	Y zone		Y zone	Z zone	F zone	G zone
S-HIGH2		1,100				
S-HIGH1	1,050	1,100				
HIGH	1,050	870				
10		870				—
9	1,050	870	1,050	850	320	270
8	1,050	850	1,050	850	320	270
7	940	680	940	770	270	270
6	890	570	890	630	230	210
5	770	500	770	440	200	180
4	630	470	630	320	200	180
3	510	420	510	320	200	180
2	400	420	400	320	200	180
1	400	420	400	320	200	180

**NOTE:** After defrost control on the heating mode, the fan speed is kept higher regardless of the compressor frequency.

Fan speed after defrost control: 1,100 rpm

#### Model: ROG14KMCEN

Fan speed is defined by outdoor temperature and compressor frequency.

Outside air temperature zone selection



Unit: rpm

Fan step	Cooling	Heating	Dry	Cooling or dry at low outdoor temp.		
	Y zone		Y zone	Z zone	F zone	G zone
S-HIGH2		1,200				
S-HIGH1	1,180	1,200				
HIGH	1,180	1,200				
10		1,170				
9	1,180	1,170	1,180	1,180	1,180	1,180
8	1,140	1,000	1,140	600	310	220
7	900	860	900	600	310	220
6	800	750	800	450	260	200
5	690	700	690	320	230	180
4	610	610	610	320	230	180
3	550	570	550	320	230	180
2	450	510	450	320	230	180
1	400	470	400	320	230	180

**NOTE:** After defrost control on the heating mode, the fan speed is kept higher regardless of the compressor frequency.

Fan speed after defrost control: 1,200 rpm

#### 4. Louver control

#### 4-1. Horizontal louver control

Each time the button is pressed, the airflow direction range will change as below:



- · Remote controller display is not changed.
- Up/down airflow direction is set automatically as shown, in accordance with the type of operation selected.

Cooling / Dry mode : Horizontal flow 1

Heating mode : Downward flow 6

OL AND

- During AUTO operation, for the first a few minutes after beginning operation, airflow will be horizontal 1; the air direction cannot be adjusted during this period. The airflow direction setting will temporarily become 1 when the temperature of the airflow is low at the start of the Heating mode.
- After beginning of AUTO/HEAT mode operated and automatic defrosting operation, the airflow will be horizontal 1. However, the airflow direction cannot be adjusted at beginning AUTO operation mode.

#### 4-2. Adjust the horizontal louver

Move the horizontal louvers to adjust airflow direction you prefer.


### 4-3. Swing operation

- To select up/down airflow swing operation When the swing signal is received, the horizontal louver starts to swing.
  - Swinging range
    - Cooling mode/dry mode/fan mode (1 to 3):  $1 \leftrightarrow 4$
    - Heating mode/fan mode (4 to 6):  $3 \leftrightarrow 6$
  - When the indoor fan is S-LOW or stop mode, the swing operation is interrupted and it stops at either upper end or bottom end.
- To select left/right airflow swing operation No function

**OL AND** 

# 5-1. Wireless remote control

On/Off timer	Program timer	Sleep timer	Weekly timer
0	0	0	0

#### On/Off timer

**Program timer** 

• Off timer: When the clock reaches the set timer, the air conditioner will be turned off.



• On timer: When the clock reaches the set timer, the air conditioner will be turned on.



• The program timer allows the off timer and the on timer to be used in combination one time.



- Operation will start from the timer setting (either off timer and on timer) whichever is closest to the clock current timer setting. The order of operations is indicated by the allow in the remote controller screen.
- Sleep timer operation cannot be combined with on timer operation.

### Sleep timer

If the sleep timer is set, the room temperature is monitored and the operation is stopped automatically. If the operation mode or the set temperature is change after the sleep timer is set, the operation is continued according to the changed setting of the sleep timer from that time on.

· In the cooling operation mode

When the sleep timer is set, the setting temperature is increased 1°C. It increases the setting temperature another 1°C after 1 hour. After that, the setting temperature is not changed and the operation is stopped at the setting time.



Ts: Set temperature

• In the heating operation mode

When the sleep timer is set, the setting temperature is decreased 1°C. It decreases the setting temperature another 1°C every 30 minutes. Upon lowering 4°C, the setting temperature is not changed and the operation is stopped at the setting time.



#### Weekly timer

On and off timer can be combined, and up to 4 reservations per day and 28 reservations per week. Before setting the program, set the week and time of the air conditioner at first. If the week and time are not set, the weekly timer will not operate correctly at the setting time.

### 5-2. Wired remote control

On/Off timer	Program timer	Sleep timer	Weekly timer	Temperature Setback Timer
0	0	0	0	0

#### On/Off timer

• Off timer: When the clock reaches the set timer, the air conditioner will be turned off.



• On timer: When the clock reaches the set timer, the air conditioner will be turned on.



### Program timer

**COL AND** 

• The program timer allows the off timer and the on timer to be used in combination one time.



- Operation will start from the timer setting (either off timer and on timer) whichever is closest to the clock current timer setting. The order of operations is indicated by the allow in the remote controller screen.
- Sleep timer operation cannot be combined with on timer operation.

### Sleep timer

If the sleep timer is set, the room temperature is monitored and the operation is stopped automatically. If the operation mode or the set temperature is change after the sleep timer is set, the operation is continued according to the changed setting of the sleep timer from that time on.

· In the cooling operation mode

When the sleep timer is set, the setting temperature is increased 1°C. It increases the setting temperature another 1°C after 1 hour. After that, the setting temperature is not changed and the operation is stopped at the setting time.



Ts: Set temperature

- In 1
  - In the heating operation mode

When the sleep timer is set, the setting temperature is decreased 1°C. It decreases the setting temperature another 1°C every 30 minutes. Upon lowering 4°C, the setting temperature is not changed and the operation is stopped at the setting time.



#### Weekly timer

On and off timer can be combined, and up to 4 reservations per day and 28 reservations per week. Before setting the program, set the week and time of the air conditioner at first. If the week and time are not set, the weekly timer will not operate correctly at the setting time.

### **Temperature Setback Timer**

- The temperature setback timer only changes the set temperature for 7 days, it cannot be used to start or stop air conditioner operation.
- The temperature setback timer can be set to operate up to two times per day but only one temperature setting can be used.
- During COOLING/DRY mode, the air conditioner will operate at a minimum of 18°C even if the • SET BACK temperature is set to 17°C or lower.

Case of Temperature Setback Timer on the Cooling operation. (Setting temperature :22°C, SET BACK temperature :26°C)



the setting temperature is changed.

Chenge the setting temperature: 22°C → 24°C

### 6. Defrost operation control

Tn: Outdoor unit heat exchanger temperature

Ta: Outdoor temperature

Tn10: Temperature at 10 minutes after compressor start

Tnb: Temperature before 5 minutes

#### Triggering condition

The defrost operation starts when outdoor unit heat exchanger temperature sensor detects the temperature lower than the values shown below.

#### - 1st time defrosting after starting operation

Compressor integrating operation time	Less than 17 min.	17 to 57 min.	More than 57 min.
Condition	Does not operate	Tn ≤ -9°C and Tn-Ta ≥ 5 deg	Tn ≤ -5°C

#### - 2nd time and after

**ROL AND** 

	Compressor integrating operation time	Less than 40 min.	More than 40 min.
			Tn-Tn10 < -5 deg (Tn ≤ -6°C)
	O an aliti an		Tn-Tnb < -2 deg (Tn ≤ -6°C)
Condition Does not operate	Does not operate	Tn ≤ -17°C (Ta ≥ -10 °C)	
	Tn ≤ Ta -7°C or Tn ≤ -30°C (Ta < -10 °C)		

#### - Integrating defrost (Constant monitoring)

Compressor integrating operation time	More than 240 min. (For long continuous operation)	More than 213 min. (For long continuous operation	Less than 10 min.* (For intermittent operation)
Condition	Tn ≤ -3°C	Tn ≤ -5°C	Count of the compressor off: 40 times

\*: If the compressor continuous operation time is less than 10 minutes, the number of the compressor off is counted. If any defrost operated, the compressor off count is cleared.

#### Release condition

The defrost operation is released when either one of the conditions below is satisfied.

Outdoor unit heat exchanger temperature (after 1 minute or later since compressor start)	16°C or more
Compressor operation time	15 minutes

# 6-1. Defrost operation in heating operation stopped

If the outdoor unit is frosted when stopping the heating operation, it stops after performing the automatic defrosting operation.

In this time, if the indoor unit operation lamp flashes slowly (6 sec on/2 sec off), the outdoor unit allow the heat exchanger to defrost, and then stop.

#### Triggering condition

When all of the following conditions are satisfied in heating operation

- Compressor operation integrating time: 30 minutes or more
- Compressor continuous operation time: 10 minutes or more
- Outdoor unit heat exchanger temperature: -4°C or less

#### Release condition

The defrost operation is released when either one of the conditions below is satisfied.

Outdoor unit heat exchanger temperature (after 1 minute or later since compressor start)	16°C or more
Compressor operation time	15 minutes

### 7. Various control

## 7-1. Auto restart

NCTIONS

When the power was interrupted by a power failure etc. during operation, the operation contents at that time are memorized and when the power is recovered, operation is automatically started with the memorized operation contents.

Operation contents memorized when the power is interrupted		
Operation mode		
Setting temperature		
Fan mode setting		
Timer mode and set time (set by wireless remote controller)		
Airflow direction setting		
Swing		
ECONOMY operation		
10 °C HEAT operation		
Outdoor low noise operation		
Remote control setting		
WLAN indicator lamp setting		

# 7-2. MANUAL AUTO operation

When the wireless remote controller is lost or battery power dissipated, this function will work without the remote controller.

When MANUAL AUTO button is pressed more than 3 seconds and less than 10 seconds, MANUAL AUTO operation starts as shown in the table below. To stop operation, press the MANUAL AUTO button for 3 seconds.

Operation mode	Auto changeover	
Fan mode	AUTO	
Timer mode	Continuous (no timer setting available)	
Setting temperature	24°C	
Horizontal louver setting	Standard	
SWING	Off	
ECONOMY	Off	

### 7-3. Forced cooling operation

The outdoor unit may not operate depending on the room temperature.

When FORCED COOLING OPERATION button is pressed more than 10 seconds, forced cooling operation starts as shown in the table below.

Operation mode	Cooling	
Fan mode	HIGH	
Timer mode	Continuous (no timer setting available)	
Setting temperature	24°C	
Horizontal louver setting	Standard	
Vertical louver setting	According to memory position	
SWING	Off	
ECONOMY	Off	
Human sensor	Off	

- During the forced cooling operation, it operates regardless of room temperature sensor.
- The operation indicator lamp and the timer indicator lamp blink simultaneously during the forced cooling operation.

They blink for 1 second ON and 1 second OFF on both the operation indicator lamp and the timer indicator lamp (same as test operation).

- By performing one of the following action, test operation will be canceled:
- Pressing the remote controller START/STOP button
- Pressing FORCED COOLING OPERATION button for 3 seconds
- · 60 minutes passed after starting forced cooling operation

### 7-4. 10 °C HEAT operation

**TROL AND** 

10 °C HEAT operation performs as below setting when pressing 10 °C HEAT button.

Operation mode	Heating
Setting temperature	10°C
Fan mode	AUTO
LED display	Economy
Defrost operation	Operate as normal

## 7-5. ECONOMY operation

The ECONOMY operation starts by pressing ECONOMY button on the remote controller. The ECONOMY operation is almost the same operation as below settings.

Mode	Cooling/Dry	Heating
Target temperature	Setting temperature +1°C	Setting temperature -1°C

**NOTE:** When HEAT operation is selected on the remote controller during forced cooling operation, heating test run will begin in about 3 minutes.

### 7-6. POWERFUL operation

The POWERFUL operation starts by pressing POWERFUL button on the remote controller.

The indoor unit and outdoor unit operate at maximum power as shown in the table below.

Rotation number of compressor		Maximum	
Fan mode		POWERFUL	
Vertical airflow direction louver setting	Cooling	3	
	Dry	5	
	Heating	6	

#### **Release condition:**

Cooling/Dry

Room temperature ≤ Setting temperature -0.5°C or Operation time has passed 20 minutes. Heating

Room temperature  $\geq$  Setting temperature +0.5°C or Operation time has passed 20 minutes.

### 7-7. Fresh air control

The fan motor for Fresh Air is operated in synchronization with the indoor fan operation as below.



### 7-8. Compressor preheating

By preheating the compressor, warm airflow is quickly discharged when the operation is started.

#### Triggering condition

- 30 minutes after compressor stopped.
- Outdoor unit heat exchanger temperature (Tn)



When the jumper wire (JM2) is disconnected:



#### 7-9. Electronic expansion valve control

The most proper opening of the electronic expansion valve is calculated and controlled under the present operating condition based on the table below.

Operation mode	Pulse range	
Cooling/dry mode	Between 52 and 480 nulses	
Heating mode	Detween 52 and 400 pulses	

**NOTE:** At the time of supplying the power to the outdoor unit, the initialization of the electronic expansion valve is operated (528 pulses are input to the closing direction).

### 7-10. Prevention to restart for 3 minutes (3 minutes st)

When the compressor fails to start for the number of times below, it does not enter operation status for 3 minutes.

Retry number	50
Retry set number	3

When the compressor fails to start in the retry set number above, the compressor is stopped.

## 7-11. 4-way valve control

NTROL AND NCTIONS

- If heating mode is selected at the compressor start, 4-way valve is energized for heating.
- When the air conditioner is switched between cooling and heating mode, compressor is stopped, and the 4-way valve is switched when the 140 seconds passes and the compressor is started.

### 7-12. Outdoor unit low noise operation

The outdoor unit low noise operation functions by OUTDOOR UNIT LOW NOISE button on the remote controller.

This operation stops the PFC control, and changes the current value.

Operation mode	Current	
Operation mode	Trigger condition	Release condition
Cooling/Dry mode	35 /	30 /
Heating mode		5.0 A

## 8. Various protections

### 8-1. Discharge gas temperature over-rise prevention control

The discharge gas temperature sensor (discharge thermistor: outdoor unit side) detects the discharge gas temperature.

- When the discharge temperature becomes higher than the trigger condition, the rotation number of compressor is decreased as the table below, and it continues to decrease until the discharge temperature becomes lower than the trigger condition.
- When the discharge temperature becomes lower than the release condition, control of compressor rotation number is released.
- When the discharge temperature becomes higher than the compressor protection temperature, the compressor is stopped and the indoor unit indicator lamp starts blinking.

Trigger condition	104°C
Rotation number of compressor	-20 rps/120 seconds
Release condition	101°C
Compressor protection temperature	110°C

# 8-2. Anti-freezing control (cooling and dry mode)

The rotation number of compressor is decrease in cooling and dry mode when the indoor unit heat exchanger temperature sensor detects the temperature lower than the trigger condition. When the indoor unit heat exchanger temperature reaches release condition, the anti-freezing control is stopped.

Trigger condition		4°C
Release condition	Outdoor temp. $\geq 10^{\circ}C^{*1}$	7°C
	Outdoor temp. $\geq 12^{\circ}C^{*2}$	7.0
	Outdoor temp. < 10°C* <sup>1</sup>	13°C
	Outdoor temp. < 12°C* <sup>2</sup>	13 0

\*1: During the outdoor temperature dropping

\*2: During the outdoor temperature rising

### 8-3. Current release control

The rotation number of compressor is controlled so that the outdoor unit input current does not exceeds current limit value set according to the outdoor temperature.

The rotation number of compressor returns according to the operation mode, when the current becomes lower than the release value.

### Model: ROG09KMCEN

Operation mode	Outdoor temp. (Ta)	Trigger condition	Release condition
	50°C ≤ Ta	4.5 A	4.0 A
	46°C ≤ Ta < 50°C	4.5 A	4.0 A
Cooling	40°C ≤ Ta < 46°C	6.0 A	5.5 A
Cooning	12°C ≤ Ta < 40°C	6.0 A	5.5 A
	2°C ≤ Ta < 12°C	6.0 A	5.5 A
	Ta < 2°C	6.0 A	5.5 A
	17°C ≤ Ta	7.0 A	6.5 A
Heating	12°C ≤ Ta < 17°C	9.0 A	8.5 A
	5°C ≤ Ta < 12°C	9.5 A	9.0 A
	Ta < 5°C	9.5 A	9.0 A

# Model: ROG12KMCEN

Operation mode	Outdoor temp. (Ta)	Trigger condition	Release condition
	50°C ≤ Ta	4.5 A	4.0 A
	46°C ≤ Ta < 50°C	4.5 A	4.0 A
Cooling	40°C ≤ Ta < 46°C	6.0 A	5.5 A
Cooning	12°C ≤ Ta < 40°C	6.5 A	6.0 A
	2°C ≤ Ta < 12°C	6.5 A	6.0 A
	Ta < 2°C	6.5 A	6.0 A
	17°C ≤ Ta	7.0 A	6.5 A
Heating	12°C ≤ Ta < 17°C	9.0 A	8.5 A
	5°C ≤ Ta < 12°C	11.0 A	10.5 A
	Ta < 5°C	11.0 A	10.5 A

### Model: ROG14KMCEN

Operation mode	Outdoor temp. (Ta)	Trigger condition	Release condition
	50°C ≤ Ta	7.0 A	6.5 A
	46°C ≤ Ta < 50°C	7.0 A	6.5 A
Cooling	40°C ≤ Ta < 46°C	8.0 A	7.5 A
Cooling	12°C ≤ Ta < 40°C	8.0 A	7.5 A
	2°C ≤ Ta < 12°C	8.0 A	7.5 A
	Ta < 2°C	8.0 A	7.5 A
	17°C ≤ Ta	10.5 A	10.0 A
Heating	12°C ≤ Ta < 17°C	13.0 A	12.5 A
	5°C ≤ Ta < 12°C	15.0 A	14.5 A
	Ta < 5°C	15.5 A	15.0 A

## 8-4. Cooling pressure over-rise protection

When the outdoor unit heat exchanger temperature reaches trigger condition below, the compressor is stopped and trouble display is performed.

Trigger condition

65°C

# 8-5. Compressor temperature protection

When the compressor temperature sensor detects higher than the trigger condition below, the compressor is stopped. When the compressor temperature sensor detects the release condition, the protection is released.

Trigger condition	108°C
Poloaso condition	80°C
Release condition	(3 minutes after compressor stop)

## 8-6. High pressure protection

Tringer condition	Pressure switch: Off (Open: Higher than 4.2 MPa)
	Compressor stop
	Pressure switch: On (Close: Lower than 3.2 MPa)
Release condition	(3 minutes after compressor stop)
	Compressor restart

### 8-7. Low outdoor temperature protection

When the outdoor temperature sensor detects lower than the trigger condition below, the compressor is stopped.

Operation mode	Cooling/Dry
Trigger condition	-15°C
Release condition	-10°C

8-4. Cooling pressure over-rise protection

# 8-8. High temperature and high pressure release control

The compressor is controlled as follows.

# Models: ROG09KMCEN, ROG12KMCEN, and ROG14KMCEN



Zone	Operation			
Zone A	Compressor is stopped.			
Zone B	The rotation number of compressor is decreased	-25 rps/120 sec.		
Zone C	The rotation number of compressor is decreased.	-3 rps/60 sec.		
Zone D	The protection is released and the operation is returned to norma	I mode		
Zone E	The protection is released and the operation is returned to normal mode.			



# **5. FILED WORKING**

2022.12.19 SR\_CH05\_AS085EJ\_01

# CONTENTS

# **5. FILED WORKING**

1. Function settings	05-1
1-1. Function settings by using remote controller	05-1
1-2. Custom code setting for wireless remote controller	05-8

#### 1. Function settings

To adjust the functions of this product according to the installation environment, various types of function settings are available.

**NOTE:** Incorrect settings can cause a product malfunction.

### **1-1. Function settings by using remote controller**

Some function settings can be changed on the remote controller. After confirming the setting procedure and the content of each function setting, select appropriate functions for your installation environment.

### Setting procedure by using wireless remote controller

The function number and the associated setting value are displayed on the LCD of the remote controller. Follow the instructions written in the local setup procedure supplied with the remote controller, and select appropriate setting according to the installation environment.

#### Before connecting the power supply of the indoor unit, reconfirm following items:

- Cover for the electrical enclosure on the outdoor unit is in place.
- There is no wiring mistake.
- Piping air tightness test and vacuuming have been performed firmly.
- All the necessary wiring work for outdoor unit has been finished.

After reconfirming the items listed above, connect the power supply of the indoor unit.

#### NOTES:

- Settings will not be changed if invalid numbers or setting values are selected.
- When optional wired remote controller is used, refer to the installation manual enclosed with the remote controller.

#### Entering function setting mode:

While pressing the POWERFUL button and TEMP. ( $\land$ ) button simultaneously, press the RESET button to enter the function setting mode.

#### Selecting the function number and setting value:

- Press the TEMP. (∧) (∨) buttons to select the function number. To switch between the left and right digits, press the 10 °C HEAT button.
- 2. Press the POWERFUL button to proceed to value setting. To return the function number selection, press the POWERFUL button again.
- Press the TEMP. (∧) (∨) buttons to select the setting value. To switch between the left and right digits, press the 10 °C HEAT button.
- 4. Press the MODE button once. Confirm that you hear the beep sound.
- 5. Press the START/STOP button to fix the function setting. Confirm that you hear the beep sound.
- 6. Press the RESET button to end the function setting mode.
- 7. After completing the function setting, be sure to disconnect the power supply and then reconnect it.

#### 

After disconnecting the power supply, wait 30 seconds or more before reconnecting it. The function setting will not become active unless the power supply is disconnected and then reconnected.

Function number Setting value



#### NOTES:

- The air conditioner custom code is set to  ${\it R}$  prior to shipment.
- If you do not know the air conditioner custom code setting, try each of the custom codes (¬→□ →□ →□) until you find the code that operates the air conditioner.

# Contents of function setting

Each function setting listed in this section is adjustable in accordance with the installation environment.

**NOTE:** Setting will not be changed if invalid numbers or setting values are selected.

### • Function setting list

	Function no.	Functions
1)	00	Remote controller address setting
2)	11	Filter sign
3)	30/31	Room temperature control for indoor unit sensor
4)	35/36	Room temperature control for wired remote controller sensor
5)	40	Auto restart
6)	42	Room temperature sensor switching
7)	43	Cold air prevention
8)	44	Remote controller custom code
9)	46	External input control
10)	48	Room temperature sensor switching (Aux.)
11)	49	Indoor unit fan control for energy saving for cooling

#### 1) Remote controller address setting

**NOTE:** This setting is configurable only by wireless remote controller, but not configurable by Polar 3-wired remote controller.

Multiple indoor units can be operated by using one wired remote controller.

Set the unit number of each indoor unit.

Function number	Setting value	Setting description	Factory setting
	00	Unit no. 0	•
	01	Unit no. 1	
	02	Unit no. 2	
	03	Unit no. 3	
	04	Unit no. 4	
	05	Unit no. 5	
	06	Unit no. 6	
00	07	Unit no. 7	
00	08	Unit no. 8	
	09	Unit no. 9	
	10	Unit no. 10	
	11	Unit no. 11	
	12	Unit no. 12	
	13	Unit no. 13	
	14	Unit no. 14	
	15	Unit no. 15	

**NOTE:** When different type of indoor units (such as wall mounted type and cassette type, cassette type and duct type, or other combinations) are connected using group control system, some functions may no longer be available.

#### 2) Filter sign

Select appropriate intervals for displaying the filter sign on the indoor unit according to the estimated amount of dust in the air of the room.

If the indication is not required, select "No indication" (03).

Function number	Setting value	Setting description	Factory setting
11	00	Standard (400 hours)	
	01	Long interval (1,000 hours)	
	02	Short interval (200 hours)	
	03	No indication	•

#### 3) Room temperature control for indoor unit sensor

Depending on the installed environment, correction of the room temperature sensor may be required. Select the appropriate control setting according to the installed environment. The temperature of the room temperature sensor is corrected as follows:

Corrected temp. = Temp. of the room temp. sensor - Correction temp. value

Example of correction:

When the temperature of the room temp. sensor is  $26^{\circ}$ C and the setting value is "03" (-1.0°C), corrected temp. will be  $27^{\circ}$ C ( $26^{\circ}$ C - [-1.0°C]).

The temperature correction values show the difference from the Standard setting "00" (manufacturer's recommended value).

Function	number	Setting value	Setting des	cription	Factory setting
		00	Standard s	setting	•
		01	No correctio	n 0.0 °C	
		02	-0.5 °C		
		03	-1.0 °C		
		04	-1.5 °C		
		05	-2.0 °C	More cooling	
		06	-2.5 °C	Less heating	
		07	-3.0 °C		
30	31	08	-3.5 °C		
(For cooling)	(For heating)	09	-4.0 °C		
		10	+0.5 °C		
		11	+1.0 °C		
		12	+1.5 °C		
		13	+2.0 °C	Less cooling	
		14	+2.5 °C	More heating	
		15	+3.0 °C		
		16	+3.5 °C		
		17	+4.0 °C		

#### 4) Room temperature control for wired remote controller sensor

Depending on the installed environment, correction of the wire remote temperature sensor may be required. Select the appropriate control setting according to the installed environment.

To change this setting, set Function 42 to Both "01".

Ensure that the Thermo Sensor icon is displayed on the remote controller screen.

Functior	n number	Setting value	Setting des	cription	Factory setting
		00	Standard	setting	•
		01	No correction	on 0.0°C	
		02	-0.5 °C		
		03	-1.0 °C		
		04	-1.5 °C		
		05	-2.0 °C	More cooling	
		06	-2.5 °C	Less heating	
		07	-3.0 °C		
35	36	08	-3.5 °C	1	
(For cooling)	(For heating)	09	-4.0 °C	1	
		10	+0.5 °C		
		11	+1.0 °C	1	
		12	+1.5 °C		
		13	+2.0 °C	Less cooling	
		14	+2.5 °C	More heating	
		15	+3.0 °C	1	
		16	+3.5 °C	1	
		17	+4.0 °C	1	

#### 5) Auto restart

Enables or disables automatic restart after a power interruption.

Function number	Setting value	Setting description	Factory setting
40	00	Enable	<b>*</b>
	01	Disable	

**NOTE:** Auto restart is an emergency function such as for power outage etc. Do not attempt to use this function in normal operation. Be sure to operate the unit by remote controller or external device.

#### 6) Room temperature sensor switching

(Only for wired remote controller)

When using the wired remote controller temperature sensor, change the setting to "Both" (01).

Function number	Setting value	Setting description	Factory setting
42	00	Indoor unit	•
	01	Both	

00: Sensor on the indoor unit is active.

01: Sensors on both indoor unit and wired remote controller are active.

**NOTE:** Remote controller sensor must be turned on by using the remote controller.

#### 7) Cold air prevention

This setting is to disable the cold air prevention function during heating operation. When disabled, the fan setting will always follow the setting on the remote controller. (Excluding defrost mode)

Function number	Setting value	Setting description	Factory setting
13	00	Enable	•
40	01	Disable	

**NOTE:** The customer may feel the cold air at the time heating operation starts, and at the time outdoor unit recovers from defrosting operation if the "Cold air prevention control" is disabled by the local function setting.

#### 8) Remote controller custom code

(Only for wireless remote controller)

The indoor unit custom code can be changed. Select the appropriate custom code.

Function number	Setting value	Setting description	Factory setting
44	00	A	<b>♦</b>
	01	В	
	02	С	
	03	D	

#### 9) External input control

"Operation/Stop" mode or "Forced stop" mode can be selected.

Function number	Setting value	Setting description	Factory setting
46	00	Operation/Stop mode 1	•
	01	(Setting prohibited)	
	02	Forced stop mode	
	03	Operation/Stop mode 2	

**NOTE:** If this function is necessary, the rotary switch on the External input and output PCB should be set to 1.

#### 10) Room temperature sensor switching (Aux.)

To use the temperature sensor on the wired remote controller only, change the setting to "Wired remote controller" (01).

This function will only work if the function setting 42 is set at "Both" (01).

When the setting value is set to "Both" (00), more suitable control of the room temperature is possible by setting function setting 30 and 31 too.

Function number	Setting value	Setting description	Factory setting
18	00	Both	<b>♦</b>
40	01	Both Wired remote controller	

#### 11) Indoor unit fan control for energy saving for cooling

Enables or disables the power-saving function by controlling the indoor unit fan rotation when the outdoor unit is stopped during cooling operation.

Function number	Setting value	Setting description	Factory setting
49	00	Disable	
	01	Enable	
	02	Remote controller	•

00: When the outdoor unit is stopped, the indoor unit fan operates continuously following the setting on the remote controller.

01: When the outdoor unit is stopped, the indoor unit fan operates intermittently at a very low speed. 02: Enable or disable this function by remote controller setting.

**NOTE:** Set to "00" or "01" when connecting a remote controller that cannot set the Fan control for energy saving function or connecting a network converter. To confirm if the remote controller has this setting, refer to the operating manual of each remote controller.

### 1-2. Custom code setting for wireless remote controller

To interconnect the air conditioner and the wireless remote controller, assignment of the custom code for the wireless remote controller is required.

**NOTE:** Air conditioner cannot receive a signal if the air conditioner has not been set for the custom code.

When 2 or more air conditioners are installed in a room, and the remote controller is operating an air conditioner other than the one you wish to set, change the custom code of the remote controller to operate only the air conditioner you wish to set. (4 selections possible.)

Confirm the setting of the remote controller custom code and the function setting. If these do not match, the remote controller cannot be used to operate for the air conditioner.

- 1. Press the START/STOP button until only the clock is displayed on the remote controller display.
- 2. Press the MODE button for at least 5 seconds to display the current custom code. (Initially set to  $\frac{1}{2}$ .)
- Press the TEMP. (∧) (∨) buttons to change the custom code between H→b→c→c. Match the code on the display to the air conditioner custom code. (Initially set to H.)
- 4. Press the MODE button again to return to the clock display. The custom code will be changed.



#### NOTES:

- If no button is pressed within 30 seconds after the custom code is displayed, the system returns to the original clock indicator. In this case, start again from step 1.
- The air conditioner custom code is set to 🛱 prior to shipment. To change the custom code, contact your retailer.
- If you do not know the assigned code for the air conditioner, try each of the custom code ( $\overrightarrow{H} \rightarrow \overrightarrow{a}$  $\rightarrow \underline{c} \rightarrow \underline{c}$ ) until you find the code which operates the air conditioner.