

## Assembly sliding system "MIRROR"

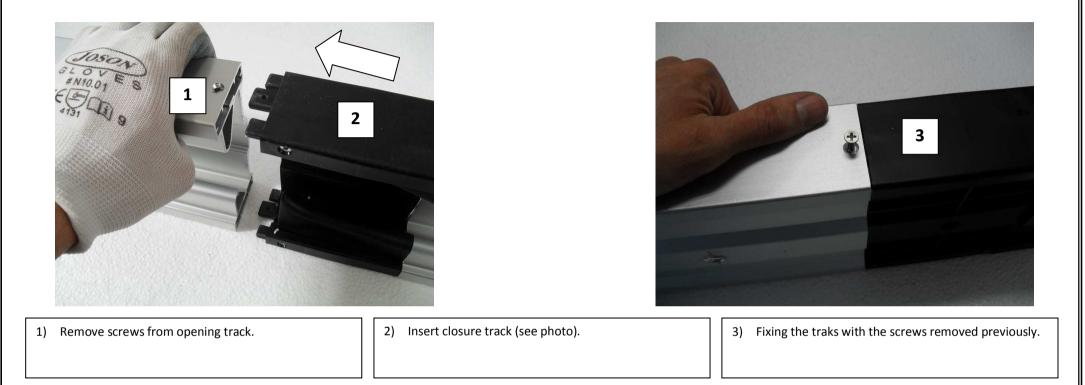

## **OPTIONAL** Only for door with cover track

1) Remove the cover before installing the track.	2) Assembly and install the track.	3) Reassemble the cover where previously mounted.


## Sliding doors hookup diagram

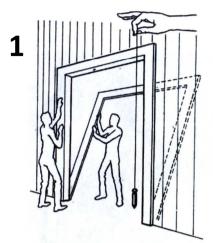

APPLICARE IL TELAIO DELLA PORTA PERFETTAMENTE VERTICALE SULLA PARETE E BLOCCARE AVVITANDO LA "CPR".

APPLIQUER LE BATI DE LA PORTE PARFAITEMENT VERTICALE SUR LA PAROI ET BLOQUER EN VISSANT LA "CPR".


MOUNT THE DOOR FRAME ON THE WALL IN A PERFECTLY VERTICAL POSITION AND FIX FIRMLY, TIGHTENING THE "CPR".

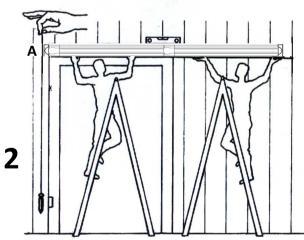


APPLICARE SUL TELAIO E CONTRO LA PARETE IL TRAVERSONE CON IL BINARIO PERFETTAMENTE ORIZZONTALE.

APPLIQUER SUR LE BATI ET CONTRE LA PAROI LA TRAVERSE AVEC LE RAIL PARFAITEMENT HORIZONTAL.

APPLY THE RAIL ON THE FRAME AND AGAINST THE WALL WITH THE RUNNER IN A PERFECTLY HORIZONTAL POSITION.

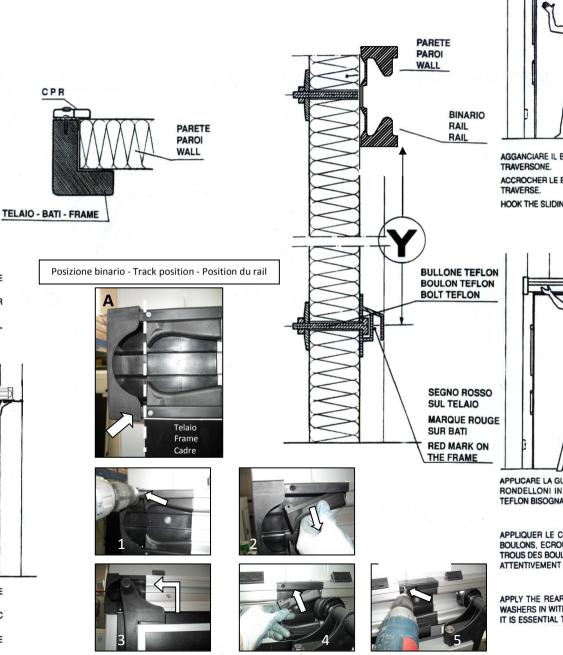

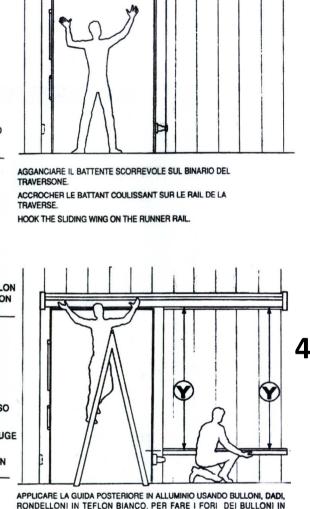

3

TEFLON BISOGNA OSSERVARE SCRUPOLOSAMENTE LA QUOTA "Y" . APPLI-APPLIQUER LE COULISSEAU POSTERIEUR EN ALUMINIUM EN UTILISANT

BOULONS, ECROUS ET RONDELLES EN TEFLON BLANC. POUR FAIRE LES TROUS DES BOULONS EN TEFLON. IL EST NECESSARIE D'OBSERVER TRES ATTENTIVEMENT LA MESURE "Y". APPLIQUER LE CAISSON CACHE-RAILS

APPLY THE REAR GUIDE IN ALUMINIUM USING BOLTS, NUTS AND LARGE WASHERS IN WITHE TEFLON. WHEN MAKING HOLES IN THE TEFLON BOLIS IT IS ESSENTIAL TO SCRUPULOUSLY RESPECT THE "Y" DIMENSION. APPLY