Haier SERVICE MANUAL

Model 1U50S2SJ2FA-1



This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or Repair the product or products dealt with in this service information by anyone else could result in serious injury or death

2020(Qingdao Haier Air Conditioner General corp. , Ltd) All rights reserved. Unauthorized copying and distribution is a violation of law

Haier Group

Version: V1


Date: 2020-01-08

Contents

1. Introduction	.1
2. Specifications	.7
3. Sensors list	.8
4. Piping diagrams	.9
5. Operation range	10
6. Printed circuit board connector wiring diagram	.11
7. Functions and control	.15
8. Dimensional drawings	29
9. Center of gravity	29
10. Service diagnosis	30
11. Performance and curves diagrams	52
12. Circuit diagrams	60
13.Removal Procedure	.63

1. Introduction

1.1 Model name explanation

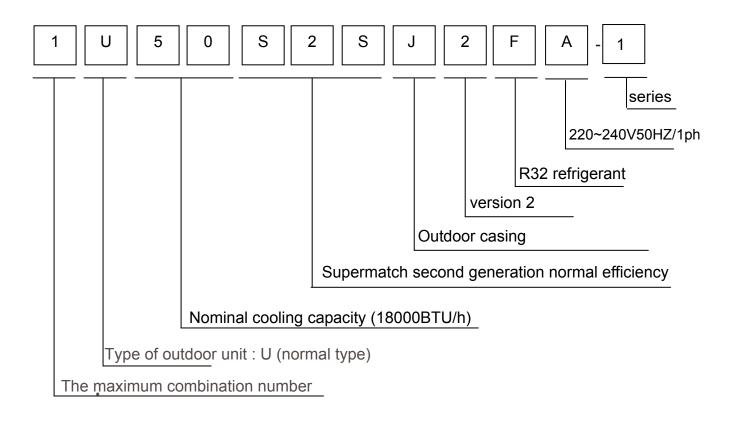

1.2 Safety Cautions

Be sure to read the following safety cautions before conducting repair work.

The caution items are classified into "Warning" and "Caution". The "Warning" items are especially important since they can lead to death or serious injury if they are not followed closely. The "Caution" items can also lead

to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety

caution items described below.

About the pictograms

- riangle This symbol indicates an item for which caution must be exercised.
 - The pictogram shows the item to which attention must be paid.
- \circ This symbol indicates a prohibited action.
 - The prohibited item or action is shown inside or near the symbol.
- This symbol indicates an action that must be taken, or an instruction.

The instruction is shown inside or near the symbol.

After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates Normally, and explain the cautions for operating the product to the customer.

1.2.1 Caution in Repair

Warning	
Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for	
a repair.	
Working on the equipment that is connected to a power supply can cause an electrical shook.	
If it is necessary to supply power to the equipment to conduct the repair or inspecting the circuits, do not	
touch any electrically charged sections of the equipment.	
If the refrigerant gas discharges during the repair work, do not touch the discharging refrigerant gas .The refrigerant gas can cause frostbite.	\bigcirc
When disconnecting the suction or discharge pipe of the compressor at the welded section, release the	
refrigerant gas completely at a well-ventilated place first.	
If there is a gas remaining inside the compressor , the refrigerant gas or cooling machine oil discharges	
when the pipe is disconnected, and it can cause injury.	
If the refrigerant gas leaks during the repair work, ventilate the area. The refrigerant gas can generate toxic gases when it contacts flames.	0
The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit.	
Be sure to discharge the capacitor completely before conducting repair work . A charged capacitor can	
cause an electrical shock.	
Do not start or stop the air conditioner operation by plugging or unplugging the power cable plug.	
Plugging or unplugging the power cable plug to operate the equipment can cause an electrical shock or	(\mathbf{N})
fire.	

Warning

Do not repair the electrical components with wet hands . Working on the equipment with wet hands can cause an electrical shock

Do not clean the air conditioner by splashing water. Washing the unit with water can cause an electrical shock.

Be sure to provide the grounding when repairing the equipment in a humid or wet place, to avoid electrical

shock.

Be sure to turn off the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and cause injury.

Do not tilt the unit when removing it. The water inside the unit can spill and wet the furniture and floor.

Be sure to check that the cooling cycle section has cooled down sufficiently before conducting repair work. Working on the unit when the cooling cycle section is hot can cause burns.

Use the welder in a well-ventilated place. Using the welder in an enclosed room can cause oxygen deficiency.

1.2.2 Cautions Regarding Products after Repair

Warning	
Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to	
conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools can	
cause an electrical shock, excessive heat generation or fire.	
When relocating the equipment, make sure that the new installation site has sufficient strength to	
withstand the weight of the equipment.	
If the installation site does not have sufficient strength and if the installation work is not conducted	
securely, the equipment can fall and cause injury.	
Be sure to install the product correctly by using the provided standard installation frame.	For
Incorrect use of the installation frame and improper installation can cause the equipment to fall, resulting	integral
in injury.	units only
	For
Be sure to install the product securely in the installation frame mounted on a window frame.	integral
If the unit is not securely mounted, it can fall and cause injury.	units only

Warning	
Be sure to use an exclusive power circuit for the equipment, and follow the technical standards related to the electrical equipment, the internal wiring regulations and the instruction manual for installation when conducting electrical work. Insufficient power circuit capacity and improper electrical work can cause an electrical shock or fire.	
Be sure to use the specified cable to connect between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals. Improper connections can cause excessive heat generation or fire.	
When connecting the cable between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable. If the cover is not mounted properly, the terminal connection section can cause an electrical shock, excessive heat generation or fire. Do not damage or modify the power cable. Damaged or modified power cable can cause an electrical shock or fire. Placing heavy items on the power cable, and heating or pulling the power cable can damage the cable.	\bigcirc
Do not mix air or gas other than the specified refrigerant (R-410A / R22) in the refrigerant system. If air enters the cooling system, an excessively high pressure results, causing equipment damage and injury.	
If the refrigerant gas leaks, be sure to locate the leak and repair it before charging the refrigerant. After charging refrigerant, make sure that there is no refrigerant leak. If the leak cannot be located and the repair work must be stopped, be sure to perform pump-down and close the service valve, to prevent the refrigerant gas from leaking into the room. The refrigerant gas itself is harmless, but it can generate toxic gases when it contacts flames, such as fan and other heaters, stoves and ranges.	0
When replacing the coin battery in the remote controller, be sure to disposed of the old battery to prevent children from swallowing it. If a child swallows the coin battery, see a doctor immediately.	

Caution	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	
Do not install the equipment in a place where there is a possibility of combustible gas leaks. If a combustible gas leaks and remains around the unit, it can cause a fire.	\bigcirc
Be sure to install the packing and seal on the installation frame properly. If the packing and seal are not installed properly, water can enter the room and wet the furniture and floor.	

1.2.3 Inspection after Repair

Warning

Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet all the way.

If the plug has dust or loose connection, it can cause an electrical shock or fire.

If the power cable and lead wires have scratches or deteriorated, be sure to replace them. Damaged cable and wires can cause an electrical shock, excessive heat generation or fire.

Warning

Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances since it can cause an electrical shock, excessive heat generation or fire.



Caution	
Check to see if the parts and wires are mounted and connected properly, and if the connections at the	
soldered or crimped terminals are secure. Improper installation and connections can cause excessive	
heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. Corroded installation platform or frame can	
cause the unit to fall, resulting in injury.	
Check the grounding, and repair it if the equipment is not properly grounded. Improper grounding can cause an electrical shock.	9
Be sure to measure the insulation resistance after the repair, and make sure that the resistance is 1 M	
ohm or higher.	
Faulty insulation can cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair.	
Faulty drainage can cause the water to enter the room and wet the furniture and floor.	

1.2.4 Using Icons

Icons are used to attract the attention of the reader to specific information. The meaning of each icon is described in the table below:

1.2.5 Using Icons List

Icon	Type of Information	Description
1 _{Note}	Note	A "note" provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
	Caution	A "caution" is used when there is danger that the reader, through incorrect manipulation, may damage equipment, loose data, get an unexpected result or has to restart (part of) a procedure.
	Warning	A "warning" is used when there is danger of personal injury.
5	Reference	A "reference" guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.

2 .Specifications

NOMINAL DISTRIBUTION SYSTEM VOLTAGE			
Phase	/	1	
Frequency	Hz	50	
Voltage	V	230	

NOMINAL CAPACITY and NOMINAL INPUT				
		cooling	heating	
Capacity rated	KW	5.2(1.3-6.8)	6.0 (1.4-6.9)	
Capacity rated	Btu/h	17740(4430-23200)	20470(4770-23540)	
Power Consumption(Rated)	KW	1.4	1.5	
SEER/SCOP	W/W	6.2	6.7	
Annual energy consumption	KWh	253	1401	
Moisture Removal	m³/h	2.0*10 ⁻³		

TECHNICAL SPECIFICATIONS-UNIT				
Dimensions	H*W*D	mm	820X338X614	
Packaged	H*W*D			
Dimensions		mm	963X413X685	
Weight	1	KG	37.8	
Gross weight	1	KG	41.5	
Sound level	Sound peessure	dB(A)	57	57
	Sound power	dB(A)	63	63

ELECTRICAL SPECIFICATIONS				
		cooling	heating	
Nominal running current	А	7.0	5.0	
Maximum running current	А	9.8	10.2	
Starting current	А	1.0	1.0	

TECHNICAL SPECIFICATIONS-PARTS						
				heating		
	Туре	Туре		ompressor		
	Model		SVB140F	CAMC		
Compressor	Motor output	W		975		
	Oil type		FW68S		FW68S	
	Oil charge volume	L	0.35			
	Туре		Axial fan			
Fan	Motor output W 50		0			
Fall	Air flow rate(high)	m³/h	25	500		
	Speed(high/low)	rpm	800/300			
Heat	Туре		ML fin- ϕ 7HI-HX tube			
exchanger	Row*stage*fitch		2*13*1.35			

				-
TECHNICAL SPECIFICATIONS-OTHERS				
	Refrigerant type		R32	
	Refrigerant charge		KG	0.95
Refrigerant	Maximum allowable d	istance		25
circuit	between indoor an ou	tdoor	m	25
	Maximum allowable level difference Refrigerant control		m	15
			EEV	EEV
Piping connections (external diameter)		liquid	mm	Ф6.35
		gas	mm	Ф12.7
		drain	mm	Ф16
Heat insulation type			Both liquid and Gas pipes	
Max. piping Length		m	25	
Max. vertical Difference		m	15	
Chargeless		m	7	
Amount of Additional Charge of Refrigerant		g/m	20	
International Protection degree		IP X4		
		IP X4		

Note: the data are based on the conditions shown in the table below

cooling	heating	Piping length
Indoor: 27°CDB/19°CWB	Indoor:20°CDB	Em
Outdoor: 35°CDB/24°CWB	Outdoor: 7℃DB/6℃WB	5m


Conversation formulae	
Kcal/h= KW×860	
Btu/h= KW×3414	
cfm=m³/min×35.3	

3. Sensors list


type	Description	Qty
Ambient sensor	Its used for detecting temperature of outdoor side	
Defrosting sensor	Its used for controlling outdoor defrosting at heating mode	1
Descharging sensor	Its used for compressor in case of over-heat	
Suction sensor	Its used for detecting suction pipe temperature of compressor to adjust gas flowing	1

4. Piping diagrams


Cooling mode

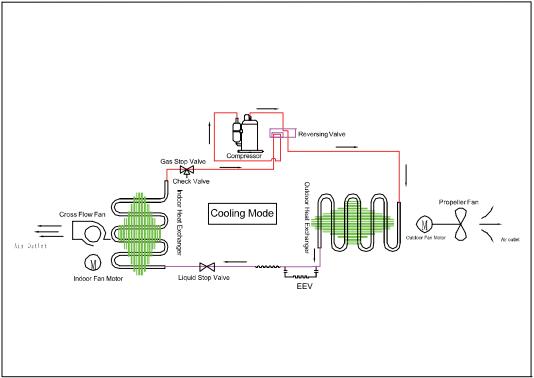

Heating mode

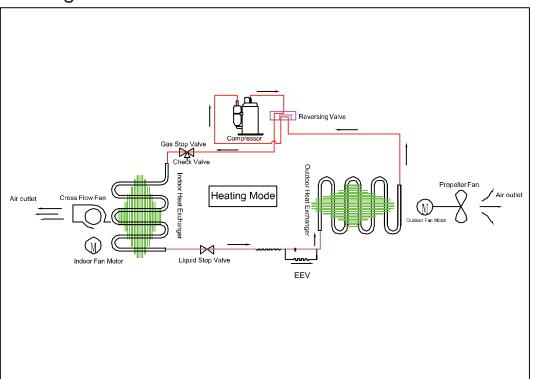

5.Operation range

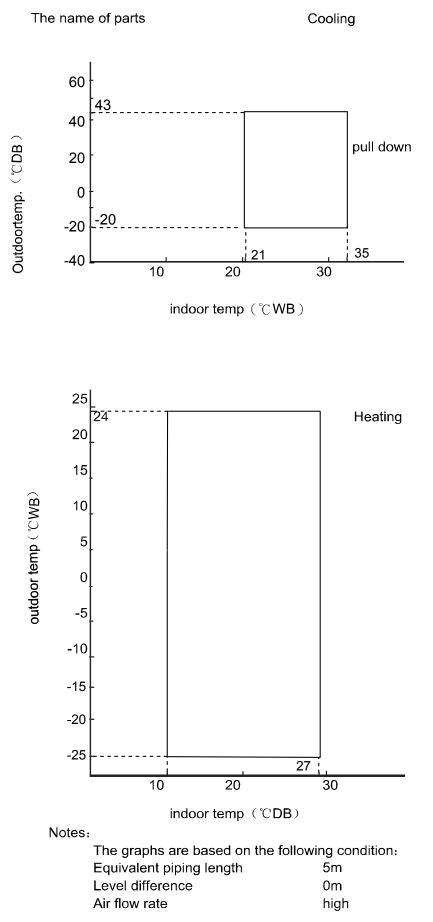



6. Printed circuit board connector wiring diagram

Connectors

PCB (1) (Control PCB) For 1U18JEFFRA/1U24REFFRA/1U24REBFRA

1) CN1, CN2 Connector for power N and L

- 2) CN3 Connector for ground
- 3) CN23 Connector for DC POWER 15V and 5V to the module board
- 4) CN9, CN10 Connector for CN2, CN1 on the module board

5) CN22 Connector for fan motor

6) CN11 Connector for four way valve coil

7) CN17, CN47 Connector for thermistors

8) CN24 Connector for communicate between the control board and the module board

9) CN25, CN28 Connector to N and P of the module board

10) CN36 Connector for communicate between indoor and outdoor unit

11) CN15 Connector for electric expansion valves

PCB (2) (Module PCB) For 1U18JEFFRA/1U24REFFRA/1U24REBFRA

CN10 Connector for the DC power 5V and 15V form the control PCB

CN11 Connector for communicating between the control board and the module board

P (CN8), N (CN9) Connector for capacitance board

LI (CN3), LO (CN4) Connector for reactor

CN5, CN6, CN7 Connector for the U, V, W wire of the compressor

Notes: Other Designations

PCB (1) (Control PCB)


1) FUSE 1, (25A, 250VAC); FUSE 2(3.15A, 250VAC)

2) LED 1 Keep light representative normal, if keep flash interval representative trouble Alarm

3) RV1, RV2, RV3 Varistor






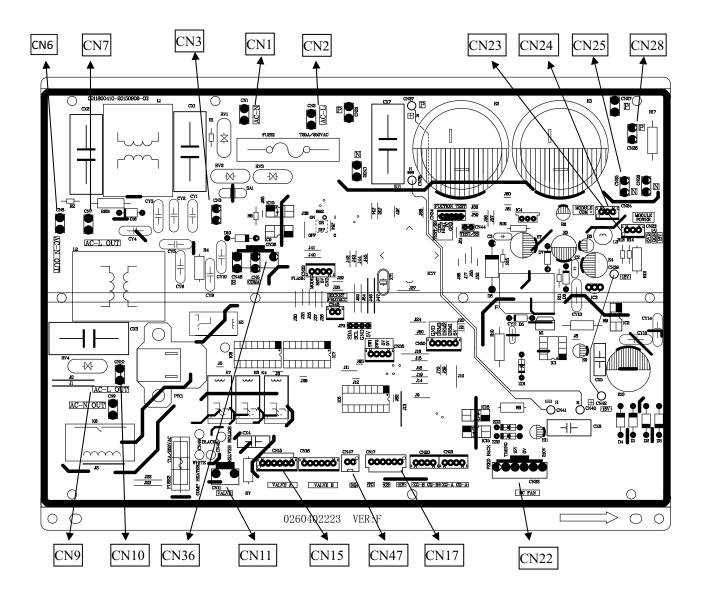






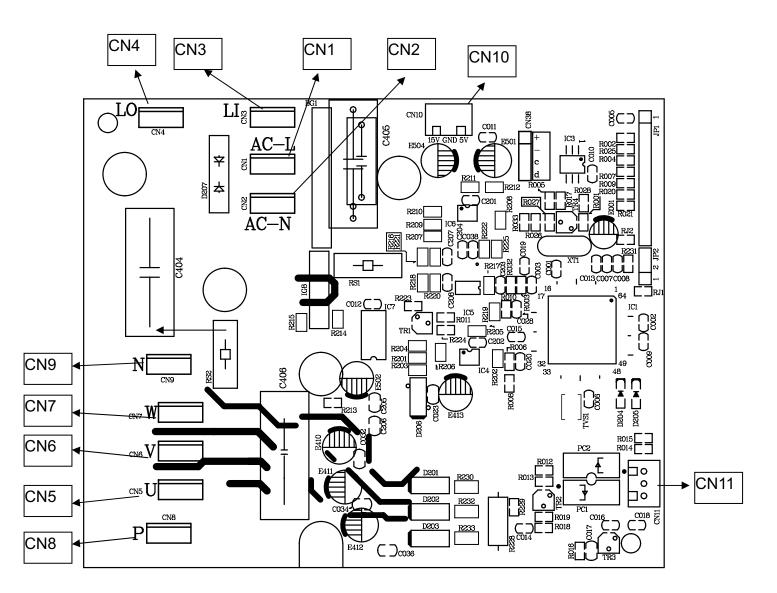



Wiring diagrams

INDOOR UNIT

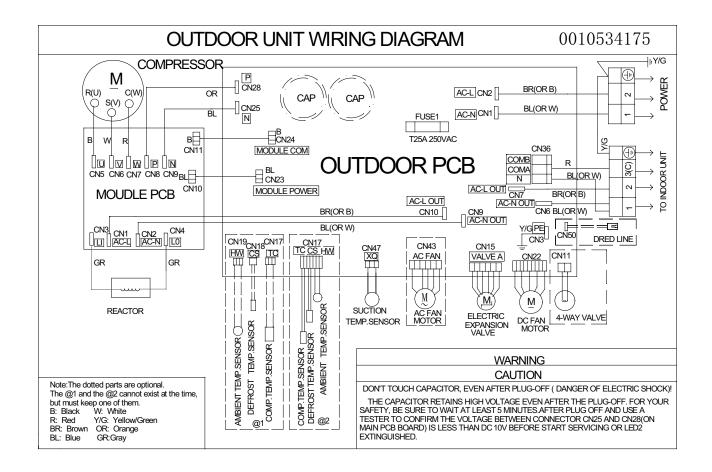

7. Functions and control

7.1 Main functions and control specification

7.1.1 The operation frequency of outdoor unit and its control

7.1.1.1 The operation frequency control of compressor

The operation frequency scope of compressor:

Mode	Minimum operation frequency	Maximum operation frequency
Heating (18K/24K)	24 Hz /20Hz	103 Hz /100Hz
Refrigeration (18K/24K)	20 Hz /20Hz	85 Hz /85Hz

7.1.1.2 The starting of compressor

When the compressor is started for the first time, it must be kept under the conditions of 38Hz,58Hz,88Hz for 30second,one minute, one minute (the overheating protection of the outdoor unit air-blowing temperature, immediately decrease the frequency when the compressor is overflowing and releasing the pressure), then it can be operated towards the target frequency. When the machine runs normally, there's no such process. After starting the compressor for operation, the compressor should run according to the calculated frequency, and every determined frequency for protection should be prior to the calculated frequency.

7.1.1.3 The speeds of increasing or decreasing the frequency of the compressor The speed of increasing or decreasing the frequency rapidly 1 ------1HZ/second The speed of increasing or decreasing the frequency slowly 2 ------1HZ/10seconds

7.1.1.4 The calculation of the compressor's frequency

Refrigeration/dehumidification mode:

Pn=(Nh_c- S_c)*10≥50	outdoor environment control
Pn=(Nh_c- S_c) *10<50	PID control

Heating mode:

(Nh_c=indoor environment temperature S_c=setting temperature)

1) The minimum/maximum frequency limitation

A. While refrigerating: F-MAX-r is the maximum operation frequency of the compressor; F-MIN-r is the minimum operation frequency of the compressor.

B. While heating: F-MAX-d is the maximum operation frequency of the compressor; F-MIN-d is the minimum operation frequency of the compressor.

2) The frequency limitation which is affected by the environment temperature.

(Wh_c= environment temperature)

Heating mode:

Serial No.	Temperature scope Frequency limitation (18K/24K)	
1	Wh_c<-12	Max_hz1
2	Wh_c<-8	Max_hz2



Functions and control

3	Wh_c<-2	Max_hz3	103HZ/87 HZ
4	Wh_c<5	Max_hz4	90HZ/76 HZ
5	Wh_c<10	Max_hz5	78HZ/67 HZ
6	Wh_c<17	Max_hz6	67HZ/62 HZ
7	Wh_c<20	Max_hz7	56HZ/44 HZ
8	Wh_c>=20	Max_hz8	52HZ/39 HZ

Remarks: The above are the maximum frequency limitations of the complete appliance which are affected by the environment, and they have nothing to do with the ability of the indoor unit. Refrigeration/dehumidification mode:

Serial No.	Temperature scope	Frequency limitation (18K/24K)	
1	Wh_c<16	Max_hz1 33HZ/30HZ	
2	Wh_c<22	Max_hz2 43HZ/35 HZ	
3	Wh_c<29	Max_hz3 55HZ/51 HZ	
4	Wh_c<32	Max_hz4 63HZ/62 HZ	
5	Wh_c<40	Max_hz5 75HZ/75 HZ	
6	Wh_c<48	Max_hz6 63HZ/66 HZ	
7	Wh_c>=48	Max_hz7 53HZ/49 HZ	

Remarks: the above are not only the maximum frequency limitations of the complete appliance which are affected by the environment, but also the maximum ability limitation of the system. When the starting ability is not the maximum, its maximum frequency limitation is calculated by the following equations:

The frequency limitation which is affected by the temperature and under the condition of actual ability=the actual running system ability*the maximum frequency which is limited by the temperature and under the condition of maximum ability/the maximum designing ability of the system

Refrigeration/dehumidification mode:

The indoor setting airflow speed	Low	Medium	Quiet
The percentage of the			
rated frequency K	70%/700%	85%/85%	42%/60%
(18K/24K)			

Heating mode:

The indoor setting airflow speed	Low	Medium	Quiet
The percentage of the			
rated frequency K	80%/80%	90%/90%	51%/60%
(18K/24K)			

The calculation of the actual output frequency:

F= F-ED-*(rated frequency) \times K

F-ED-*(rated frequency)= The frequency which is limited by the outdoor environment temperature Notes:



When refrigerating, it is needed to satisfy

F-MIN-d(compressor's Min_hz)< F<F-MAX-d(compressor's Max_hz)

When heating, it is needed to satisfy

F-MIN-r (compressor's Min_hz)< F<F-MAX-r (compressor's Max_hz)

PID control :

The innital frequency Sn is determined by Pn . We can calculate Hzoutf according to the value of Kp ,Ki ,Kd, Out_gain,Pn.Then , Fn = Sn + Hzoutf. The value of Fn is calculated in each sample time (60 seconds),and Fn is adujusted according to previous frequency of Sn and filtered output of Hzoutf.

7.1.2 The outdoor fan control (Exchange fan)

When the fan is changed among every airflow speed (including stop blowing), in order to avoid the airflow speed from skipping frequently, it must be kept under each mode for over 30 seconds, and then it can be changed to another mode (when refrigerating, the time is changed to 15 seconds).

7.1.2.1 The outdoor fan control

Within three minutes of compressor starting, the compressor is controled according to the ambient temperature.

Tao (°C)	Tao <22 ℃	22℃< Tao <28℃	Tao≥29 ℃
Refrigeration/dehumidification	2nd level /2nd level	3rd level /4th level	5th level /6th level
(18K/24K)			
Tao (°C)	Tao <<10℃	10℃< Tao <17℃	Tao≷17℃
Heating	5th level /6th level	3th level /5th level	3rd level /2nd level

After 3 minutes, the compressor is controled according to the ambient temperature and the frequency of the compressor.

		<40 Hz	40 Hz-60 Hz	≥60 Hz		
Refrigeration/dehumidification						
frequency (Hz) 18K (24K)						
	≤22	2nd level	3rd level	5 th level(6 th)		
T == (°O)						
Tao (℃)	22-28	3rd level	5 th level	7 th level(6 th)		
	≥28	7 th level				

Heating frequency (Hz) (18K/24K)		<51 Hz	51-70 Hz	≥70 Hz
Tag (°C)	≤10	5nd level(3rd)	6rd level	7 th level
Tao (℃)	10-17	3rd level(2nd)	4 th level	5 th level(6 th)
	≥17		2nd level	

7.1.3 The control of the outdoor Electronic expansion valve (EEV)

In cooling mode, the EEV opening range is 90~480 steps. The EEV opening is 90 steps when unit is off.

In heating mode, the EEV opening range is 60~480 steps. The EEV opening is 60 steps when unit is off.

After outdoor unit is off, the EEV opening keep the current on for 5 s, then open the EEV completely for 2 minutes, then become 90 steps (cooling) or 60 steps (heating).



The EEV opening will increase if SH (superheat degree) >0 while decrease if SH<0. Adjust frequency: If |SH|=0, 60s/ 1 step If $|SH|\ge3$,and $\triangle SH=0$, 10s/ 1 step. If $3\ge|SH|\ge0$, 30s/ 1 step. $\triangle SH=$ current SH- last SH SH= Ts (suction temp)-Tc1 (indoor coil temp)-Tsh (fixed data, depend on different models, -1~2)

7.1.4 Four way control

For the details of defrosting four-way valve control, see the defrosting process.

Four way working in other ways:


Under the mode of heating, open the four-way valve, when the compressor is not started or changed to non-heating mode, make sure the compressor is stoped for 2 minutes, and then close the four-way valve.

7.1.5 Protection function

7.1.5.1 TTC high temperature-preventing protection

Once the machine is started, it can run TTC(air-blowing temp) overheating protection of air-blowing, but air-blowing sensor malfunction must alarm after 4 minutes during which the compressor is started (during the course of self-detection, there's no such limitation)

Sensor detection methods: 100 times (one cycle of procedure run is one time, and about 5ms, detection method for each time: continuously sampling for 8 times, then order them and take the mean value of the middle 2 values), take the mean value.

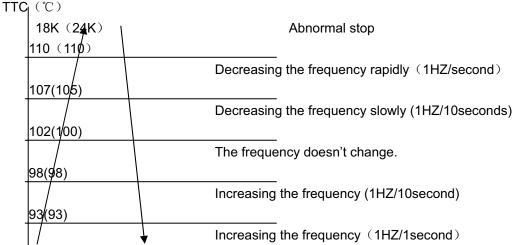


TTC>=110 $^{\circ}$ C lasts for 20 seconds. Overheating protection of air-blowing, alarm malfunction to the indoor, others don't last.

7.1.5.2 TC high temperature-preventing control of the indoor heating unit:

Tpg_indoor is the highest value of the effective indoor unit (start it and it is in accord with the running state). TC=indoor coil temp.

The indoor heat exchanger sensor tests the temperature of the indoor heat exchanger. If the temperature is higher than 63° C, decrease the rotate speed of the compressor and do the high temperature-preventing protection of the indoor heat exchanger; if the temperature of the indoor heat exchanger is lower than 45° C, recover to the normal control.



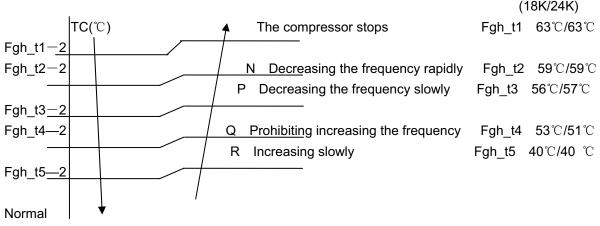

N: Decreasing at the speed of 1HZ/1 second

- P: Decreasing at the speed of 1Hz/10 seconds
- Q: Continue to keep the last-time instruction cycle
- R: Increasing at the speed of 1Hz/10seconds
- Remarks: the outdoor unit

7.1.5.3 The control of preventing the over current of the compressor:

• During the starting process of the compressor, if the current of the compressor is greater than 15.5A /17A(18K/24K)for 3 seconds, stop the compressor and alarm, after 3 minutes, start it again, if such state appears 3 times in 20 minutes, stop the compressor and alarm, and confirm the malfunction. Then continue to run it only after the power is off.

• During the starting process of the compressor, if the AC current is greater than 14.5A/15A(18K/24K), the frequency of the compressor decreases at the speed of 1HZ/second.

• During the starting process of the compressor, if the AC current is greater than 13.5A/14A(18K/24K), the frequency of the compressor decreases at the speed of 0.1HZ/second.

• During the starting process of the compressor, if the AC current is greater than 13A/13A(18K/24K), the frequency of the compressor increases at the prohibited speed.

• During the starting process of the compressor, if the AC current is greater than 11.5A/12A(18K/24K) the frequency of the compressor increases at the speed of no faster than 0.1HZ/second.

7.1.5.4 The protection function of AC current:

During the starting process of the compressor, if the AC current is greater than 15.5A/17.5A(18K/24K) for 3 seconds, stop the compressor and alarm, after 3 minutes, start it again, if such state appears 3 times in 20 minutes, stop the compressor and alarm, and confirm the malfunction. Then continue to run it only after the the power is off.

During the starting process of the compressor, if the AC current is greater than 14.5A 15A(18K/24K), the frequency of the compressor decreases at the speed of 1HZ/second.





During the starting process of the compressor, if the AC current is greater than 13.5/14A(18K/24K), the frequency of the compressor decreases at the speed of 0.1HZ/second.

During the starting process of the compressor, if the AC current is greater than 13A/13A(18K/24K), the frequency of the compressor increases at the prohibited speed.

During the starting process of the compressor, if the AC current is greater than 11.5A/12A(18K/24K), the frequency of the compressor increases at the speed of no faster than 0.1HZ/second.

Remarks: when the outdoor temperature is high, there's compensation for AC current protection.


(1) When the outdoor environment temperature is higher than 40 $^\circ\!C$, AC current protection value decreases by 2.5A/1A(18K/24K).

(2) When the outdoor environment temperature is higher than 50 $^\circ\!C$, AC current protection value decreases by 3.5A/2A(18K/24K).

7.1.5.5 Anti-freezing protection of the indoor heat exchanger

When refrigerating/heating, prevent freezing.

Tpg_indoor is the minimum value of the effective indoor unit (start it and it is in accord with the running state).

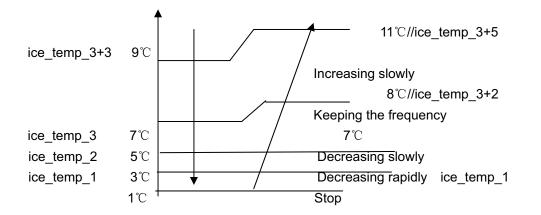

When Tpg_indoor \langle ice_temp_1, the frequency of the compressor decreases at the speed of 1HZ/1second.

When Tpg_indoor \langle ice_temp_2, the frequency of the compressor decreases at the speed of 1HZ/10seconds.

When Tpg_indoor begins to rise again, and ice_temp_2 \leq Tpg_indoor \leq ice_temp_3, the frequency of the compressor doesn't change.

When ice_temp_3 $\langle Tpg_indoor \ (ice_temp_3+3^{\circ}C, the frequency of the compressor increases at the speed of 1HZ/10seconds.$

For example, Tpg_indoor $\leq 0^{\circ}$ C, last for 2 minutes, and then the outdoor unit will stop, and report underload malfunction, but don't send malfunction report to the indoor.

The compressor stops for more than 3 minutes, Tpg_indoor> ice_temp_3+2 $^{\circ}$ C, the compressor recovers.

7.1.5.6 The frequency limitation of modification rate

In the field which is controlled by high frequency, if the modification rate is not high enough, the



control-driven chip will enter into weak magnetic control, this will help to relieve the problem of modification rate. If during the course of weak magnetic control, the modification rate is still not high enough, enter into the control of decreasing frequency until the alarm of modification rate is relieved.

7.1.5.7 Temperature protection of the outdoor refrigerating coil

When the frequency are higher than 40Hz,and the defrosting sensor's temperature are higher than $68\,^{\circ}$ C, the frequency of the compressor decreases 1hz/10seconds. Keep the frequency until it decreases to the lowest frequency. When the temperatures are lower than $68\,^{\circ}$ C and higher than $62\,^{\circ}$ C, keep the frequency of the compressor. When the temperatures are lower than $62\,^{\circ}$ C, relieve the defrosting temperature protection.

7.2 Value of Thermistor

Ambient Sensor, Defrosting Sensor, Pipe sensor

$25 \text{ C}=10 \text{K} \Omega \pm 3\%$	B25 C/50 C=3700	IK±3%			
Temp.(℃)	Max.(KΩ)	Normal(KΩ)	Min.(KΩ)	Tolerar	າce(℃)
-30	165.2170	147.9497	132.3678	-1.94	1.75
-29	155.5754	139.5600	125.0806	-1.93	1.74
-28	146.5609	131.7022	118.2434	-1.91	1.73
-27	138.1285	124.3392	111.8256	-1.89	1.71
-26	130.2371	117.4366	105.7989	-1.87	1.70
-25	122.8484	110.9627	100.1367	-1.85	1.69
-24	115.9272	104.8882	94.8149	-1.83	1.67
-23	109.4410	99.1858	89.8106	-1.81	1.66
-22	103.3598	93.8305	85.1031	-1.80	1.64
-21	97.6556	88.7989	80.6728	-1.78	1.63
-20	92.3028	84.0695	76.5017	-1.76	1.62
-19	87.2775	79.6222	72.5729	-1.74	1.60
-18	82.5577	75.4384	68.8710	-1.72	1.59
-17	78.1230	71.5010	65.3815	-1.70	1.57
-16	73.9543	67.7939	62.0907	-1.68	1.55
-15	70.0342	64.3023	58.9863	-1.66	1.54
-14	66.3463	61.0123	56.0565	-1.64	1.52
-13	62.8755	57.9110	53.2905	-1.62	1.51
-12	59.6076	54.9866	50.6781	-1.60	1.49
-11	56.5296	52.2278	48.2099	-1.58	1.47
-10	53.6294	49.6244	45.8771	-1.56	1.46
-9	50.8956	47.1666	43.6714	-1.54	1.44
-8	48.3178	44.8454	41.5851	-1.51	1.42
-7	45.8860	42.6525	39.6112	-1.49	1.40
-6	43.5912	40.5800	37.7429	-1.47	1.39
-5	41.4249	38.6207	35.9739	-1.45	1.37
-4	39.3792	36.7676	34.2983	-1.43	1.35
-3	37.4465	35.0144	32.7108	-1.41	1.33

R25°C=10K Ω ±3% B25°C/50°C=3700K±3%



				FUNCTION	s and control
-2	35.6202	33.3552	31.2062	-1.38	1.31
-1	33.8936	31.7844	29.7796	-1.36	1.29
0	32.2608	30.2968	28.4267	-1.34	1.28
1	30.7162	28.8875	27.1431	-1.32	1.26
2	29.2545	27.5519	25.9250	-1.29	1.24
3	27.8708	26.2858	24.7686	-1.27	1.22
4	26.5605	25.0851	23.6704	-1.25	1.20
5	25.3193	23.9462	22.6273	-1.23	1.18
6	24.1432	22.8656	21.6361	-1.20	1.16
7	23.0284	21.8398	20.6939	-1.18	1.14
8	21.9714	20.8659	19.7982	-1.15	1.12
9	20.9688	19.9409	18.9463	-1.13	1.09
10	20.0176	19.0621	18.1358	-1.11	1.07
11	19.1149	18.2270	17.3646	-1.08	1.05
12	18.2580	17.4331	16.6305	-1.06	1.03
13	17.4442	16.6782	15.9315	-1.03	1.01
14	16.6711	15.9601	15.2657	-1.01	0.99
15	15.9366	15.2770	14.6315	-0.98	0.96
16	15.2385	14.6268	14.0271	-0.96	0.94
17	14.5748	14.0079	13.4510	-0.93	0.92
18	13.9436	13.4185	12.9017	-0.91	0.90
19	13.3431	12.8572	12.3778	-0.88	0.87
20	12.7718	12.3223	11.8780	-0.86	0.85
21	12.2280	11.8126	11.4011	-0.83	0.83
22	11.7102	11.3267	10.9459	-0.81	0.80
23	11.2172	10.8634	10.5114	-0.78	0.78
24	10.7475	10.4216	10.0964	-0.75	0.75
25	10.3000	10.0000	9.7000	-0.75	0.75
26	9.8975	9.5974	9.2980	-0.76	0.76
27	9.5129	9.2132	8.9148	-0.80	0.80
28	9.1454	8.8465	8.5496	-0.84	0.83
29	8.7942	8.4964	8.2013	-0.87	0.86
30	8.4583	8.1621	7.8691	-0.91	0.90
31	8.1371	7.8428	7.5522	-0.95	0.93
32	7.8299	7.5377	7.2498	-0.98	0.97
33	7.5359	7.2461	6.9611	-1.02	1.00
34	7.2546	6.9673	6.6854	-1.06	1.04
35	6.9852	6.7008	6.4222	-1.10	1.07
36	6.7273	6.4459	6.1707	-1.13	1.11
37	6.4803	6.2021	5.9304	-1.17	1.14
38	6.2437	5.9687	5.7007	-1.21	1.18
39	6.0170	5.7454	5.4812	-1.25	1.22
40	5.7997	5.5316	5.2712	-1.29	1.25



				FUNCTION	s and control
41	5.5914	5.3269	5.0704	-1.33	1.29
42	5.3916	5.1308	4.8783	-1.37	1.33
43	5.2001	4.9430	4.6944	-1.41	1.36
44	5.0163	4.7630	4.5185	-1.45	1.40
45	4.8400	4.5905	4.3500	-1.49	1.44
46	4.6708	4.4252	4.1887	-1.53	1.47
47	4.5083	4.2666	4.0342	-1.57	1.51
48	4.3524	4.1145	3.8862	-1.61	1.55
49	4.2026	3.9686	3.7443	-1.65	1.59
50	4.0588	3.8287	3.6084	-1.70	1.62
51	3.9206	3.6943	3.4780	-1.74	1.66
52	3.7878	3.5654	3.3531	-1.78	1.70
53	3.6601	3.4416	3.2332	-1.82	1.74
54	3.5374	3.3227	3.1183	-1.87	1.78
55	3.4195	3.2085	3.0079	-1.91	1.82
56	3.3060	3.0989	2.9021	-1.95	1.85
57	3.1969	2.9935	2.8005	-2.00	1.89
58	3.0919	2.8922	2.7029	-2.04	1.93
59	2.9909	2.7948	2.6092	-2.08	1.97
60	2.8936	2.7012	2.5193	-2.13	2.01
61	2.8000	2.6112	2.4328	-2.17	2.05
62	2.7099	2.5246	2.3498	-2.22	2.09
63	2.6232	2.4413	2.2700	-2.26	2.13
64	2.5396	2.3611	2.1932	-2.31	2.17
65	2.4591	2.2840	2.1195	-2.36	2.21
66	2.3815	2.2098	2.0486	-2.40	2.25
67	2.3068	2.1383	1.9803	-2.45	2.29
68	2.2347	2.0695	1.9147	-2.49	2.34
69	2.1652	2.0032	1.8516	-2.54	2.38
70	2.0983	1.9393	1.7908	-2.59	2.42
71	2.0337	1.8778	1.7324	-2.63	2.46
72	1.9714	1.8186	1.6761	-2.68	2.50
73	1.9113	1.7614	1.6219	-2.73	2.54
74	1.8533	1.7064	1.5697	-2.78	2.58
75	1.7974	1.6533	1.5194	-2.83	2.63
76	1.7434	1.6021	1.4710	-2.88	2.67
77	1.6913	1.5528	1.4243	-2.92	2.71
78	1.6409	1.5051	1.3794	-2.97	2.75
79	1.5923	1.4592	1.3360	-3.02	2.80
80	1.5454	1.4149	1.2942	-3.07	2.84
81	1.5000	1.3721	1.2540	-3.12	2.88
82	1.4562	1.3308	1.2151	-3.17	2.93
83	1.4139	1.2910	1.1776	-3.22	2.97



Functions and control

				T UNCLOIN	
84	1.3730	1.2525	1.1415	-3.27	3.01
85	1.3335	1.2153	1.1066	-3.32	3.06
86	1.2953	1.1794	1.0730	-3.38	3.10
87	1.2583	1.1448	1.0405	-3.43	3.15
88	1.2226	1.1113	1.0092	-3.48	3.19
89	1.1880	1.0789	0.9789	-3.53	3.24
90	1.1546	1.0476	0.9497	-3.58	3.28
91	1.1223	1.0174	0.9215	-3.64	3.33
92	1.0910	0.9882	0.8942	-3.69	3.37
93	1.0607	0.9599	0.8679	-3.74	3.42
94	1.0314	0.9326	0.8424	-3.80	3.46
95	1.0030	0.9061	0.8179	-3.85	3.51
96	0.9756	0.8806	0.7941	-3.90	3.55
97	0.9490	0.8558	0.7711	-3.96	3.60
98	0.9232	0.8319	0.7489	-4.01	3.64
99	0.8983	0.8088	0.7275	-4.07	3.69
100	0.8741	0.7863	0.7067	-4.12	3.74
101	0.8507	0.7646	0.6867	-4.18	3.78
102	0.8281	0.7436	0.6672	-4.23	3.83
103	0.8061	0.7233	0.6484	-4.29	3.88
104	0.7848	0.7036	0.6303	-4.34	3.92
105	0.7641	0.6845	0.6127	-4.40	3.97
106	0.7441	0.6661	0.5957	-4.46	4.02
107	0.7247	0.6482	0.5792	-4.51	4.07
108	0.7059	0.6308	0.5632	-4.57	4.12
109	0.6877	0.6140	0.5478	-4.63	4.16
110	0.6700	0.5977	0.5328	-4.69	4.21
111	0.6528	0.5820	0.5183	-4.74	4.26
112	0.6361	0.5667	0.5043	-4.80	4.31
113	0.6200	0.5518	0.4907	-4.86	4.36
114	0.6043	0.5374	0.4775	-4.92	4.41
115	0.5891	0.5235	0.4648	-4.98	4.45
116	0.5743	0.5100	0.4524	-5.04	4.50
117	0.5600	0.4968	0.4404	-5.10	4.55
118	0.5460	0.4841	0.4288	-5.16	4.60
119	0.5325	0.4717	0.4175	-5.22	4.65
120	0.5194	0.4597	0.4066	-5.28	4.70

Discharging Sensor

R80°C**=50K**Ω ±3%

B25/80℃=4450K±3%

Temp.((℃))	Max.(KΩ)	Normal(KΩ)	Min.(KΩ)	Tolerance(℃)	
-30	14646.0505	12061.7438	9924.4999	-2.96	2.45



Domestic air conditioner

				Functions	s and control
-29	13654.1707	11267.8730	9290.2526	-2.95	2.44
-28	12735.8378	10531.3695	8700.6388	-2.93	2.44
-27	11885.1336	9847.7240	8152.2338	-2.92	2.43
-26	11096.6531	9212.8101	7641.8972	-2.91	2.42
-25	10365.4565	8622.8491	7166.7474	-2.90	2.42
-24	9687.0270	8074.3787	6724.1389	-2.88	2.41
-23	9057.2314	7564.2244	6311.6413	-2.87	2.41
-22	8472.2852	7089.4741	5927.0206	-2.86	2.40
-21	7928.7217	6647.4547	5568.2222	-2.84	2.39
-20	7423.3626	6235.7109	5233.3554	-2.83	2.39
-19	6953.2930	5851.9864	4920.6791	-2.82	2.38
-18	6515.8375	5494.2064	4628.5894	-2.80	2.37
-17	6108.5393	5160.4621	4355.6078	-2.79	2.37
-16	5729.1413	4848.9963	4100.3708	-2.77	2.36
-15	5375.5683	4558.1906	3861.6201	-2.76	2.35
-14	5045.9114	4286.5535	3638.1938	-2.75	2.34
-13	4738.4141	4032.7098	3429.0191	-2.73	2.34
-12	4451.4586	3795.3910	3233.1039	-2.72	2.33
-11	4183.5548	3573.4260	3049.5312	-2.70	2.32
-10	3933.3289	3365.7336	2877.4527	-2.69	2.31
-9	3699.5139	3171.3148	2716.0828	-2.67	2.30
-8	3480.9407	2989.2460	2564.6945	-2.66	2.29
-7	3276.5302	2818.6731	2422.6139	-2.64	2.28
-6	3085.2854	2658.8058	2289.2164	-2.63	2.28
-5	2906.2851	2508.9126	2163.9230	-2.61	2.27
-4	2738.6777	2368.3158	2046.1961	-2.60	2.26
-3	2581.6752	2236.3876	1935.5371	-2.58	2.25
-2	2434.5487	2112.5459	1831.4826	-2.56	2.24
-1	2296.6230	1996.2509	1733.6024	-2.55	2.23
0	2167.2730	1887.0018	1641.4966	-2.53	2.22
1	2045.9191	1784.3336	1554.7931	-2.52	2.21
2	1932.0242	1687.8144	1473.1460	-2.50	2.20
3	1825.0899	1597.0431	1396.2333	-2.48	2.19
4	1724.6540	1511.6468	1323.7551	-2.47	2.17
5	1630.2870	1431.2787	1255.4324	-2.45	2.16
6	1541.5904	1355.6163	1191.0048	-2.43	2.15
7	1458.1938	1284.3593	1130.2298	-2.41	2.14
8	1379.7528	1217.2282	1072.8813	-2.40	2.13
9	1305.9472	1153.9626	1018.7481	-2.38	2.12
10	1236.4792	1094.3200	967.6334	-2.36	2.11
11	1171.0715	1038.0743	919.3533	-2.35	2.09
12	1109.4661	985.0146	873.7359	-2.33	2.08
13	1051.4226	934.9440	830.6210	-2.31	2.07



				Functions	s and control
14	996.7169	887.6792	789.8583	-2.29	2.06
15	945.1404	843.0486	751.3077	-2.27	2.04
16	896.4981	800.8922	714.8380	-2.26	2.03
17	850.6086	761.0603	680.3265	-2.24	2.02
18	807.3024	723.4134	647.6580	-2.22	2.00
19	766.4212	687.8205	616.7252	-2.20	1.99
20	727.8172	654.1596	587.4271	-2.18	1.98
21	691.3524	622.3161	559.6694	-2.16	1.96
22	656.8979	592.1831	533.3634	-2.14	1.95
23	624.3328	563.6604	508.4261	-2.12	1.93
24	593.5446	536.6540	484.7796	-2.10	1.92
25	564.4275	511.0760	462.3510	-2.09	1.90
26	536.9865	486.9352	441.1516	-2.07	1.89
27	511.0105	464.0500	421.0258	-2.05	1.87
28	486.4151	442.3499	401.9146	-2.03	1.86
29	463.1208	421.7683	383.7626	-2.01	1.84
30	441.0535	402.2430	366.5175	-1.99	1.83
31	420.1431	383.7151	350.1301	-1.97	1.81
32	400.3242	366.1295	334.5542	-1.95	1.80
33	381.5350	349.4341	319.7460	-1.93	1.78
34	363.7176	333.5801	305.6645	-1.90	1.76
35	346.8176	318.5216	292.2709	-1.88	1.75
36	330.7839	304.2151	279.5286	-1.86	1.73
37	315.5682	290.6199	267.4031	-1.84	1.71
38	301.1254	277.6976	255.8620	-1.82	1.70
39	287.4128	265.4119	244.8745	-1.80	1.68
40	274.3905	253.7288	234.4118	-1.78	1.66
41	262.0206	242.6161	224.4465	-1.76	1.64
42	250.2676	232.0436	214.9529	-1.74	1.63
43	239.0983	221.9825	205.9065	-1.71	1.61
44	228.4809	212.4060	197.2844	-1.69	1.59
45	218.3860	203.2887	189.0648	-1.67	1.57
46	208.7855	194.6066	181.2273	-1.65	1.55
47	199.6531	186.3369	173.7524	-1.63	1.54
48	190.9639	178.4584	166.6217	-1.60	1.52
49	182.6945	170.9508	159.8181	-1.58	1.50
50	174.8228	163.7951	153.3249	-1.56	1.48
51	167.3280	156.9733	147.1268	-1.53	1.46
52	160.1904	150.4683	141.2090	-1.51	1.44
53	153.3914	144.2641	135.5577	-1.49	1.42
54	146.9136	138.3454	130.1598	-1.47	1.40
55	140.7403	132.6980	125.0027	-1.44	1.38
56	134.8559	127.3081	120.0746	-1.42	1.36




				FUNCTION	s and control
57	129.2457	122.1630	115.3645	-1.40	1.34
58	123.8956	117.2504	110.8618	-1.37	1.32
59	118.7926	112.5589	106.5564	-1.35	1.30
60	113.9241	108.0776	102.4388	-1.32	1.28
61	109.2784	103.7961	98.5000	-1.30	1.26
62	104.8443	99.7046	94.7315	-1.28	1.23
63	100.6112	95.7939	91.1253	-1.25	1.21
64	96.5692	92.0553	87.6735	-1.23	1.19
65	92.7088	88.4805	84.3690	-1.20	1.17
66	89.0211	85.0614	81.2048	-1.18	1.15
67	85.4976	81.7908	78.1744	-1.15	1.12
68	82.1303	78.6615	75.2715	-1.13	1.10
69	78.9116	75.6668	72.4902	-1.10	1.08
70	75.8343	72.8004	69.8249	-1.08	1.06
71	72.8916	70.0561	67.2703	-1.05	1.03
72	70.0770	67.4283	64.8213	-1.03	1.01
73	67.3844	64.9115	62.4731	-1.00	0.99
74	64.8080	62.5006	60.2211	-0.98	0.96
75	62.3423	60.1906	58.0609	-0.95	0.94
76	59.9821	57.9770	55.9885	-0.92	0.92
77	57.7223	55.8552	53.9998	-0.90	0.89
78	55.5583	53.8210	52.0912	-0.87	0.87
79	53.4856	51.8706	50.2591	-0.85	0.84
80	51.5000	50.0000	48.5000	-0.85	0.84
81	49.7063	48.2057	46.7083	-0.85	0.85
82	47.9835	46.4842	44.9911	-0.89	0.89
83	46.3286	44.8323	43.3452	-0.93	0.92
84	44.7385	43.2468	41.7672	-0.96	0.95
85	43.2105	41.7248	40.2540	-1.00	0.99
86	41.7386	40.2604	38.7996	-1.03	1.02
87	40.3241	38.8545	37.4048	-1.07	1.06
88	38.9643	37.5045	36.0668	-1.11	1.09
89	37.6569	36.2078	34.7831	-1.14	1.13
90	36.3996	34.9622	33.5513	-1.18	1.16
91	35.1903	33.7653	32.3689	-1.22	1.19
92	34.0269	32.6151	31.2338	-1.26	1.23
93	32.9075	31.5096	30.1438	-1.30	1.27
94	31.8302	30.4467	29.0970	-1.33	1.30
95	30.7933	29.4246	28.0915	-1.37	1.34
96	29.7950	28.4417	27.1254	-1.41	1.37
97	28.8337	27.4961	26.1970	-1.45	1.41
98	27.9078	26.5864	25.3048	-1.49	1.44
99	27.0160	25.7110	24.4470	-1.53	1.48




				FUNCTION	
100	26.1569	24.8685	23.6222	-1.57	1.52
101	25.3290	24.0574	22.8291	-1.61	1.55
102	24.5311	23.2765	22.0662	-1.65	1.59
103	23.7620	22.5245	21.3323	-1.69	1.63
104	23.0205	21.8002	20.6261	-1.73	1.66
105	22.3055	21.1025	19.9465	-1.77	1.70
106	21.6159	20.4303	19.2924	-1.81	1.74
107	20.9508	19.7825	18.6626	-1.85	1.77
108	20.3091	19.1582	18.0563	-1.89	1.81
109	19.6899	18.5564	17.4723	-1.93	1.85
110	19.0924	17.9761	16.9098	-1.98	1.89
111	18.5157	17.4166	16.3680	-2.02	1.93
112	17.9590	16.8769	15.8458	-2.06	1.96
113	17.4214	16.3564	15.3427	-2.10	2.00
114	16.9023	15.8542	14.8577	-2.15	2.04
115	16.4010	15.3696	14.3902	-2.19	2.08
116	15.9167	14.9020	13.9394	-2.23	2.12
117	15.4489	14.4506	13.5047	-2.27	2.16
118	14.9968	14.0149	13.0855	-2.32	2.19
119	14.5599	13.5942	12.6811	-2.36	2.23
120	14.1376	13.1879	12.2909	-2.41	2.27
121	13.7294	12.7955	11.9144	-2.45	2.31
122	13.3347	12.4165	11.5510	-2.50	2.35
123	12.9531	12.0503	11.2003	-2.54	2.39
124	12.5840	11.6965	10.8617	-2.58	2.43
125	12.2270	11.3545	10.5348	-2.63	2.47
126	11.8817	11.0240	10.2191	-2.68	2.51
127	11.5475	10.7046	9.9142	-2.72	2.55
128	11.2242	10.3957	9.6197	-2.77	2.59
129	10.9112	10.0970	9.3352	-2.81	2.63
130	10.6084	9.8082	9.0602	-2.86	2.67
131	10.3151	9.5288	8.7945	-2.91	2.71
132	10.0312	9.2586	8.5378	-2.95	2.75
133	9.7563	8.9971	8.2895	-3.00	2.80
134	9.4901	8.7441	8.0495	-3.05	2.84
135	9.2322	8.4993	7.8175	-3.09	2.88
136	8.9824	8.2623	7.5931	-3.14	2.92
137	8.7404	8.0329	7.3760	-3.19	2.96
138	8.5059	7.8108	7.1660	-3.24	3.00
139	8.2787	7.5958	6.9629	-3.29	3.04
140	8.0584	7.3875	6.7664	-3.33	3.09



8. Dimensional drawings

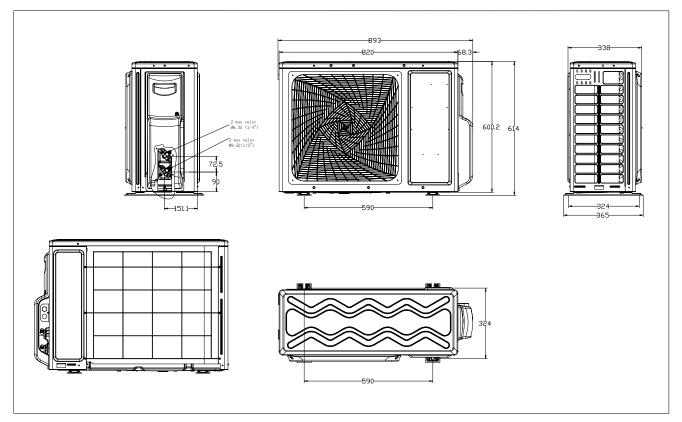

9.Center of gravity

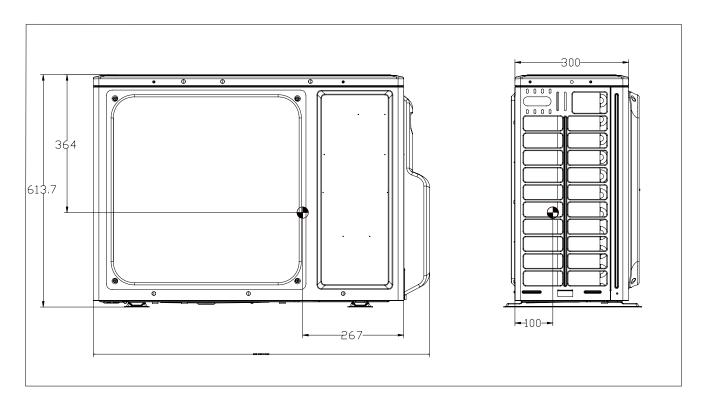

10 Service Diagnosis

10.1 Caution for Diagnosis

The operation lamp flashes when any of the following errors is detected.

1. When a protection device of the indoor or outdoor unit is activated or when the thermistor malfunctions, disabling equipment operation.

2.When a signal transmission error occurs between the indoor and outdoor units.In either case, conduct the diagnostic procedure described in the following pages.

10.2 Problem Symptoms and Measures

Symptom	Check Item	Details of Measure	
None of the units operates	Check the power supply.	Check to make sure that the rated voltage is supplied.	
	Check the indoor PCB	Check to make sure that the indoor PCB is broken	
Operation sometimes stops. Check the power supply. A power failure of 2 to 10 cycles can stop air cond operation.		A power failure of 2 to 10 cycles can stop air conditioner operation.	
Equipment operates but does not cool, or does not heat (only for heat	Check for faulty operation of the electronic expansion valve.	of the electronic connection section among rooms to check the opening and	
pump)	Diagnosis by service port pressure and operating current.	Check for insufficient gas.	
Large operating noise and vibrations	Check the installation condition.	Check to make sure that the required spaces for installation (specified in the Technical Guide, etc.) are provided.	

10.3 Parameter of primary electronic appliance


NO	Name	Parameter	Picture
1	fan mot	Rated voltage: 310VV Rated current:0.25A	

10.4 Error Codes and Description indoor display

	Split board: LED1 light of outdoor PCB flash; All-in-one board: LED2 light of outdoor	loor PCB flash
--	---	----------------


ERROR COL	DE	OUTDOOR (LED FLASH TIMES)	FAULT DESCRIPTION	SPARE PART
				Indoor PCB
Indoor and	F 7	15	Communication fault between indoor	Outdoor PCB
Outdoor	E7	15	and outdoor units	Power module
				Communication wiring
	= 1	1	Indoor temperature sensor failure	Room temperature sensor
	E1			Indoor PCB
	50			pipe temperature sensor
	E2	/	pipe temperature sensor failure	Indoor PCB
	E4	1	Indoor EEPROM failure	Indoor PCB
				pipe temperature sensor
Indoor	E5	22	Indoor anti-frosting protection	Indoor PCB
Malfunction				Indoor motor
				pipe temperature sensor
	E9	21	Indoor unit overload in heating mode	Indoor PCB
				Indoor motor
				Indoor motor
	E14	/	Indoor fan motor malfunction	Indoor PCB
		•		Power module
	F1	2	IPM protection	Refrigerant
		24		Power module
	F2		Instantaneous over-current protection of the compressor	Refrigerant
				compressor
	50	4	Communication error between Power module and main PCB board.	Power module
	F3			Outdoor PCB
	F 4	0	Compressor discharging temperature protection	Outdoor PCB
	F4	8		discharge sensor
	F6	12	outdoor ambient sensor failure	outdoor ambient sensor
Outdoor		F7 11		Suction temperature sensor
Malfunction	F7		Suction temperature sensor failure	outdoor PCB
	F 2	<u>^</u>	DC fan motor malfunction	outdoor PCB
	F8	9		outdoor motor
	F9 26			Power module
		Module reset	Outdoor PCB	
				compressor
				The wiring of compressor
	F11	18	Loss of synchronism detection	compressor
				Power module
	F12	1	EEPROM failure	Outdoor PCB

ERROR COD	E	OUTDOOR (LED FLASH TIMES)	FAULT DESCRIPTION	SPARE PART
	F13	16	Lack of refrigerant	Refrigerant
	F14	17	4-way valve reverse failure	4-way valve
1	F19	6	Power over/under voltage protection	Power module
	F20	5	High pressure protection	Outdoor pipe temperature sensor
				Outdoor PCB
	F21	10	Outdoor coil temperature sensor	Defrost temperature sensor
		3		Power module
	F22		Outdoor Alternating current over	Refrigerant
			current protection	compressor
			Compressor U-phase overcurrent	Power module
	F23	25	Compressor V-phase overcurrent	Refrigerant
			Compressor W-phase overcurrent	compressor
Outdoor	F24	27	CT detection current abnormal	Power module
Malfunction			protection	Compressor
	F25	13	Abnormal of compressor discharge	discharge sensor
			sensor	Outdoor PCB
	F27	7	Compressor current sampling circuit fault	Power module
				Outdoor PCB
				compressor
	F28 19	19	Compressor position detection circuit fault	Power module
				Outdoor PCB
				compressor
	F35 38			Power module
		Compressor driver board failure	Outdoor PCB	
				Compressor
	F43	46	Model matching abnormality	1
Fixed frequency AC	FE	/	Refrigerant leaking detection malfunction	Refrigerant

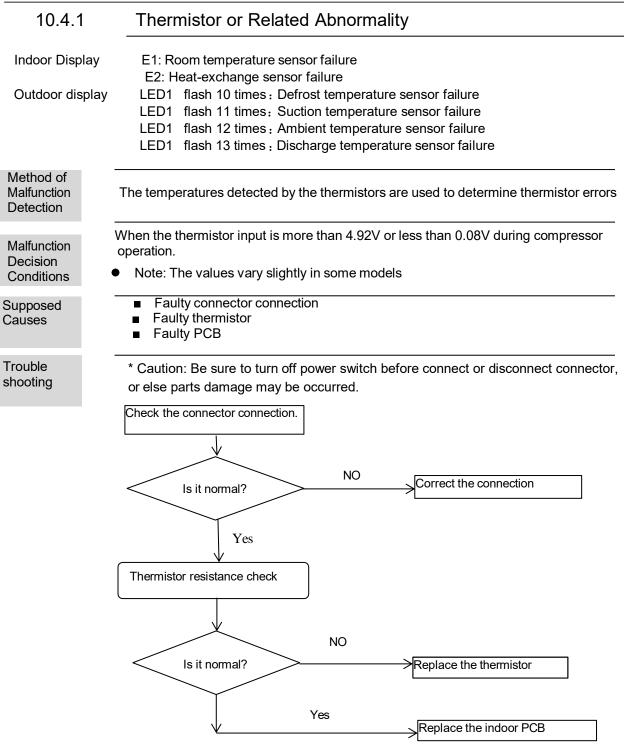


Thermistor resistance inspection method:


Remove the connector of the thermistor on the PCB, and measure the resistance of thermistor using tester. The relationship between normal temperature and resistance is shown in the value of indoor thermistor.



10.4.2	EEPROM abnormal
Indoor Display Indoor display	E4: Indoor EEPROM error F12: Outdoor EEPROM error; Outdoor LED1 flash 1 times
Method of Malfunction Detection	The Data detected by the EEPROM are used to determine MCU
Malfunction Decision Conditions	When the data of EEPROM is error or the EEPROM is damaged
Supposed Causes	 Faulty EEPROM data Faulty EEPROM Faulty PCB
Trouble shooting	* Caution: Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.

Replace the indoor or outdoor mainboard.

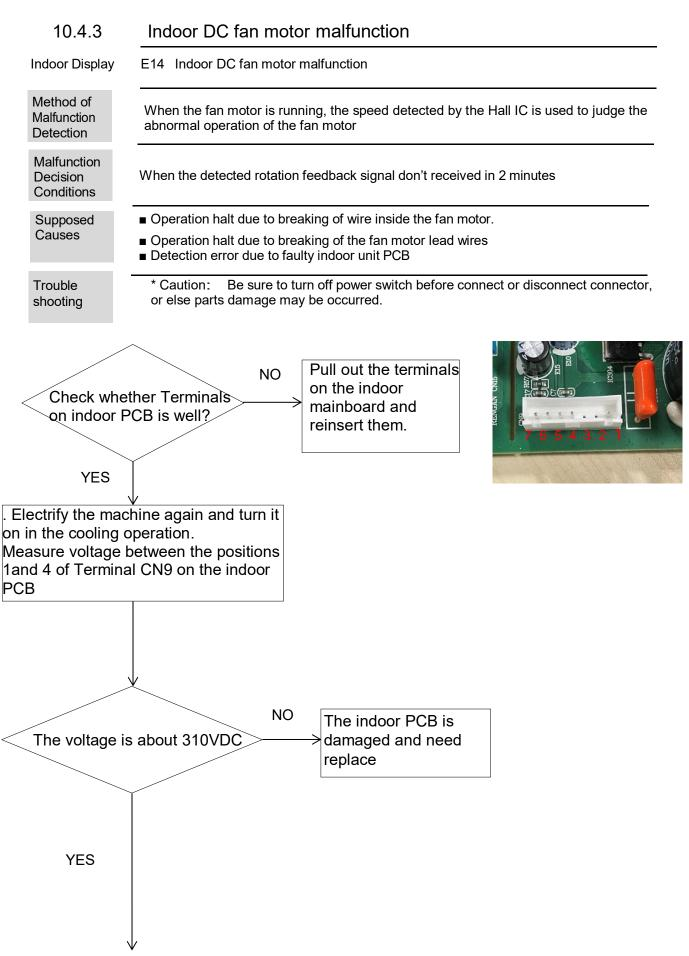

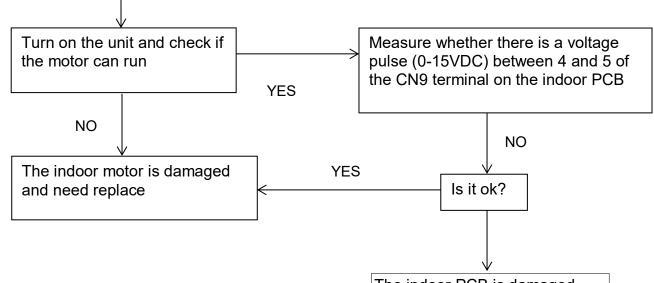


The indoor PCB is damaged and need replace


	Color	Signal	Voltage
1	Red	VDC	310V
2			
3			
4	Black	GND	٥v
5	White	VCC	15v
6	Blue	FG	15V
7	Yellow	Vsp	0-6.5V





Outdoor DC fan motor fault 10.4.4 Outdoor display F8 LED1 flash 9 times Method of DC fan motor is detected by checking the fan running condition and so on Malfunction Detection Malfunction When the detected rotation feedback signal don't received in2 minutes Decision Conditions DC fan motor protection dues to the DC fan motor faulty Supposed DC fan motor protection dues to faulty PCB Causes Trouble * Caution: Be sure to turn off power switch before connect or disconnect connector, shooting or else parts damage may be occurred. Check whether terminal on the outdoor mainboard is well inserted. NO It is normal Reinsert the terminal YES Electrify the machine again and YES The motor and outdoor PCB turn it on in the cooling state with are well the remote control. Check whether the motor could run. NO Remove fan motor after switch off the power. Measure the resistances between black line and red line, between black line and white line of the fan motor

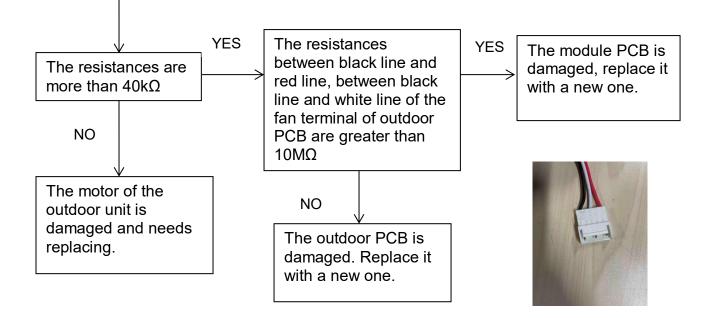

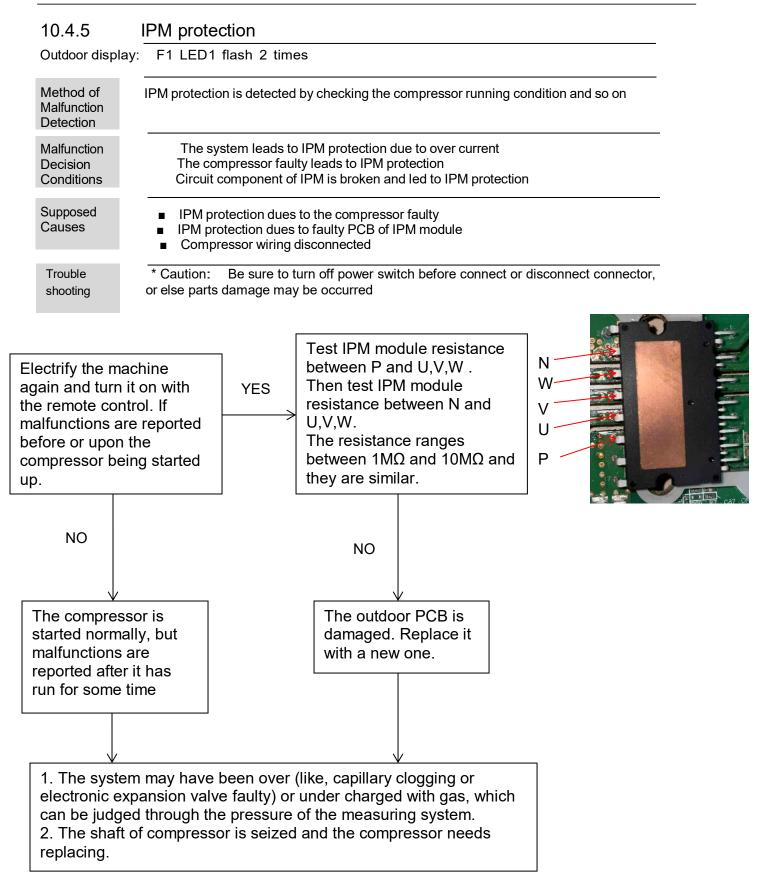




10.4.6 Over-current of the compressor

Outdoor Display	F22, F2, F23 LED1 flash 3 or 24 or 25 times
Method of Malfunction Detection	The current of the compressor is too high
Malfunction Decision Conditions	When the IPM Module is damaged or the compressor is damaged. Power supply voltage is too low or too high
Supposed Causes	 Faulty IPM Module Faulty compressor Faulty power supply
Trouble shooting	* Caution: Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.
v a c Ti m fo	Electrify the machine again and turn it on with the remote control. If malfunctions are reported before or upon the compressor being started up,
	NO
ur ju	he system may have been over or nder charged with gas, which can be dged through the pressure of the easuring system.

10.4.7	The communication fault be	tween IPM and outdoor PCB
Outdoor displa	ay: F3 LED1 flash 4 times	
Method of Malfunction Detection	Communication is detected by checking	g the IPM module and the outdoor PCB
Malfunction Decision Conditions	 The outdoor PCB broken leads to co The IPM module broken leads to co 	
Supposed Causes	 The outdoor PCB is broken The IPM module is broken Communication wiring disconnect 	ted
Trouble shooting	* Caution: Be sure to turn off power or else parts damage may be occurr	er switch before connect or disconnect connector, ed.
terminals CN10 and module a Check wh	hether the CN23 and CN24 of the outdoor PCB and the d CN11 terminals of the IPM re tightly connected. hether the connection between r module and the outdoor P&N ht	
<	Are they good? NO	Pull out and reinsert the terminals. Replace connected wire Malfunction unsolved
Check wh of Termina Check wh	ne machine again and turn it on. ether the voltage between 1 and 2 al CN23 is about DC5V. ether the voltage between2 and 3	YES Replace the outdoor IPM module with a new one.
	NO ve the outdoor PCB with a new	NODE CN24 CN24 MODULE POWER L3RIS RI4

10.4.8 Power Supply Over or under voltage fault

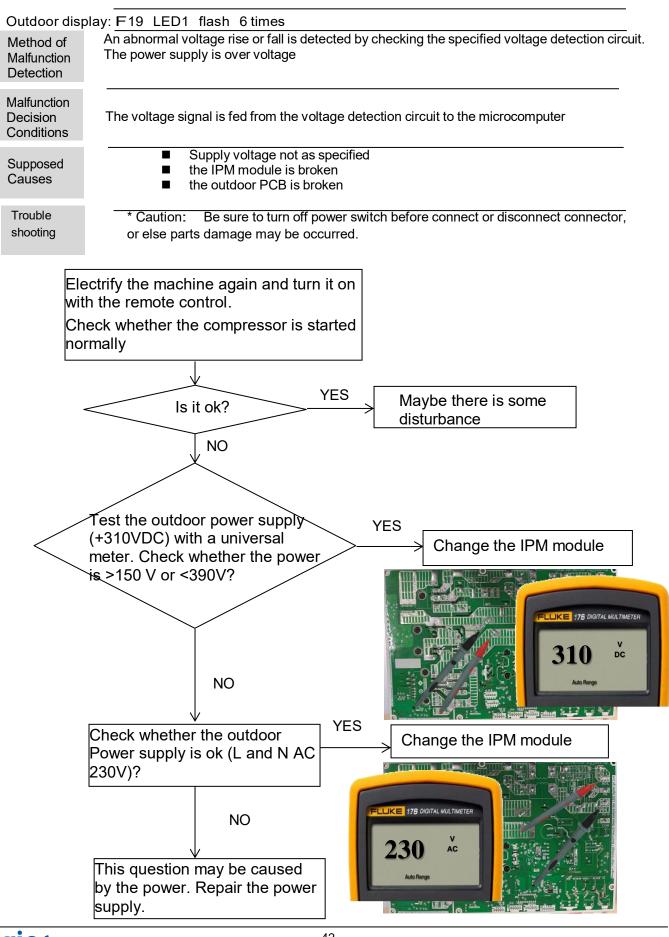


10.4.9 Overheat Protection for Discharge Temperature

Outdoor display: F4 LED1 flash 8 times


Method of Malfunction Detection	Malfunction discharge pipe thermistor								
Malfunction Decision Conditions	When the compressor discharge temperature is abo	ove 110℃							
Supposed Causes	 Electronic expansion valve defective Faulty thermistor Faulty PCB 								
Trouble shooting	* Caution: Be sure to turn off power switch be or else parts damage may be occurred.	fore connect or disconnect connector							
the re temper	y the machine again and turn it on with emote control, then measure the ature at the exhaust temperature of the compressor on the outdoor unit								
<	The temperature exceeds YES 110 ℃ shortly after the machine starts up?	The cryogen may have been leaked during installation, or there may be leakage in the piping system. There may be other causes to make the exhaust temperature too high.							
som tem exh resi acc	NO functions occur after running for ne time even though the measured perature is below 110°C. Pull out the aust sensor and measure its stance at standard temperatures ording to the resistance- perature table								
<	The results YES deviate much?	The sensor is damaged. Replace the sensor with a new one.							
	e outdoor mainboard is damaged d needs be replaced								


10.4.10 The communication fault between indoor and outdoor

Split board Indoor display E7 outdoor display LED1 flash 15 times

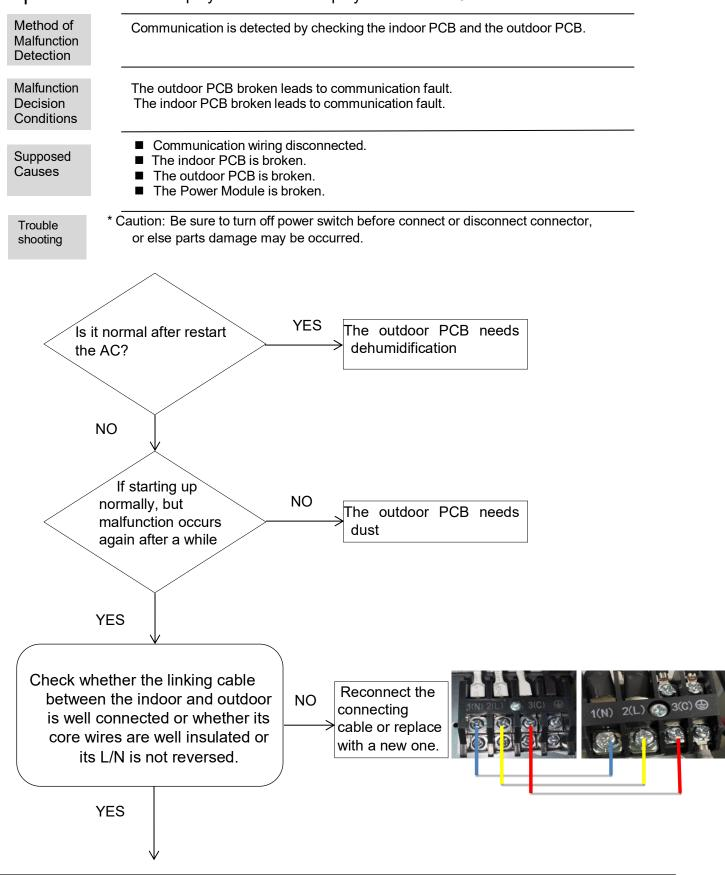



Service Diagnosis

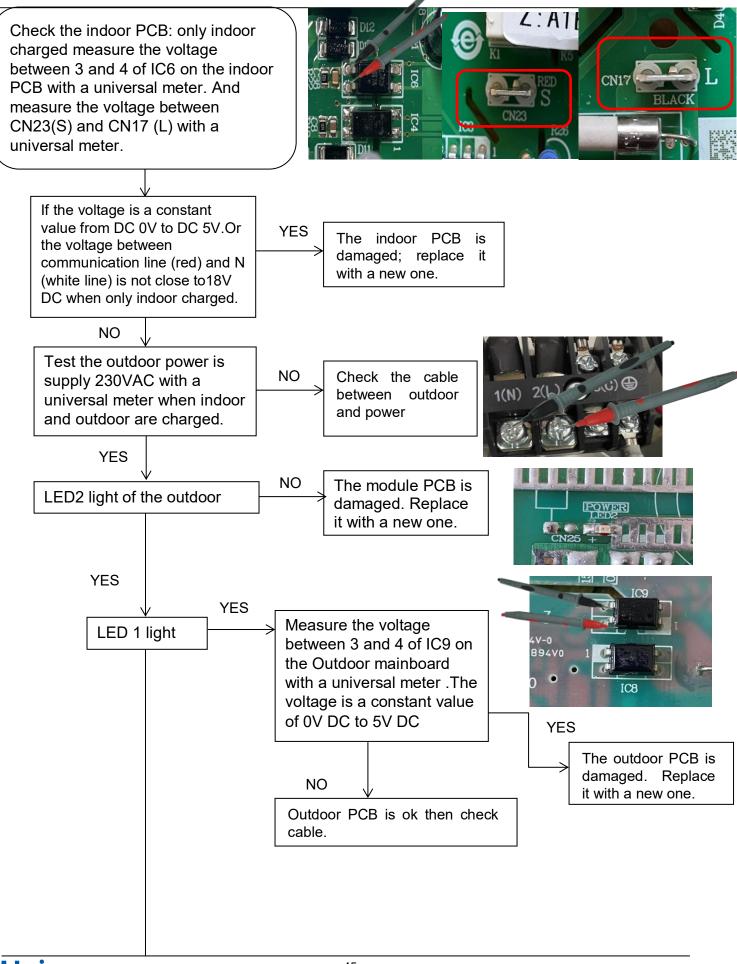


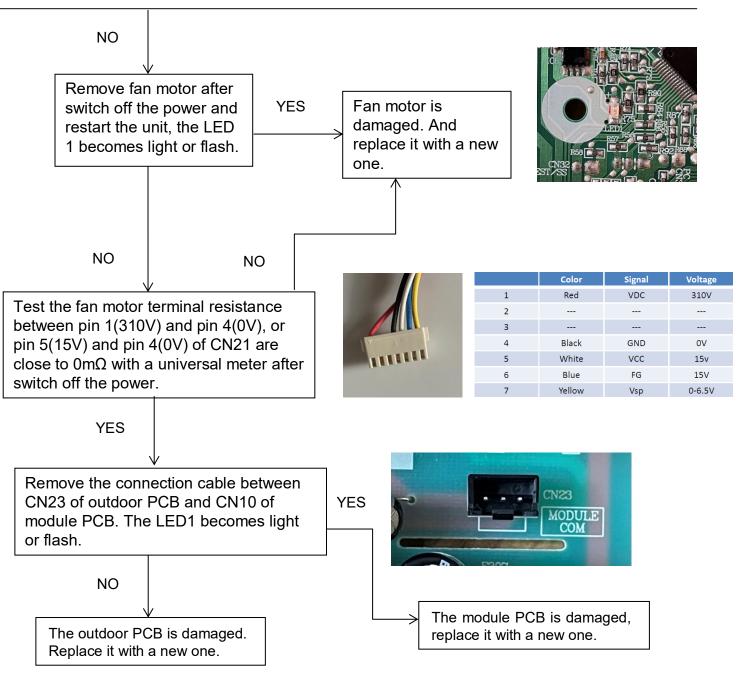

All-in-one board Indoor display E7 outdoor display LED2 flash 15 times

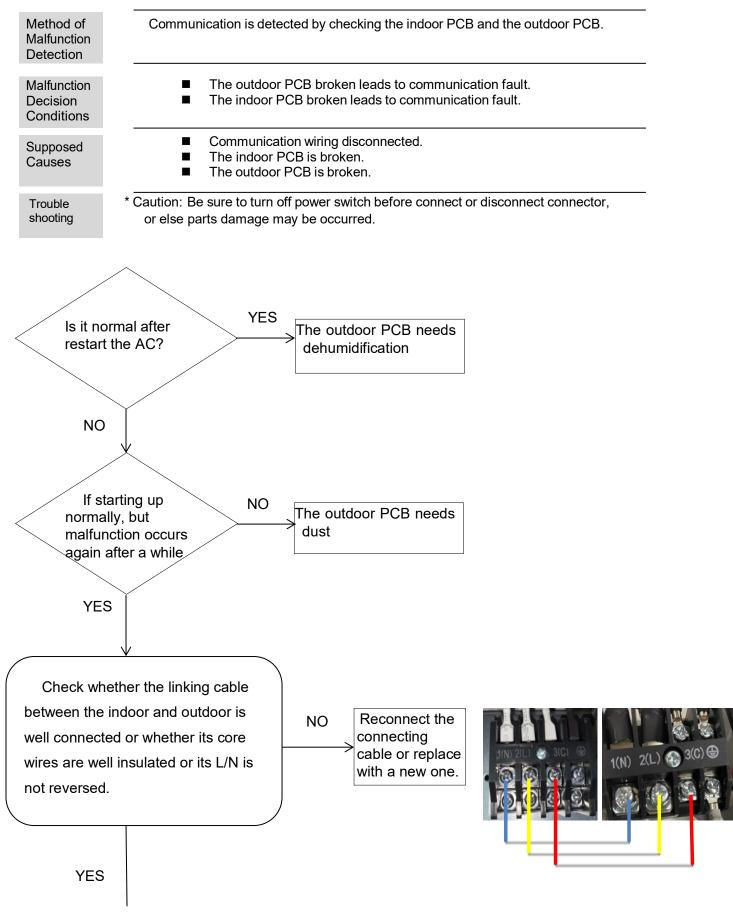

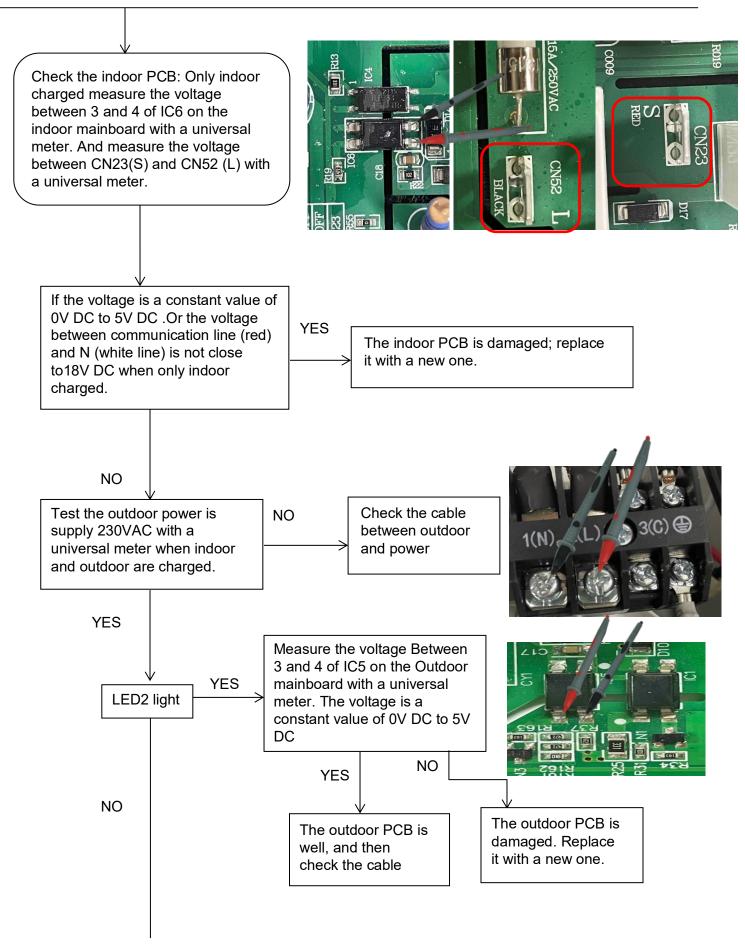

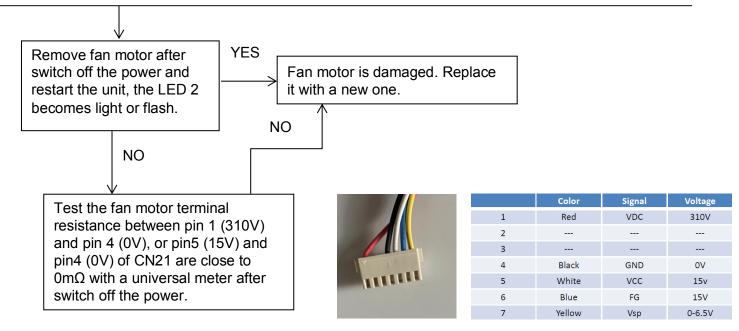

10.4.11 Loss of synchronism detection (Compressor position detection circuit fault)

Outdoor Display	F11 LED1 flash 18 times
	F28 LED1 flash 19 times
Method of Malfunction Detection	The position of the compressor rotor can't detected normally
Malfunction Decision Conditions	When the wiring of compressor is wrong or the connection is poor; Or the compressor is damaged
Supposed Causes	 Faulty The wiring of compressor Faulty compressor Faulty PCB
Trouble shooting	* Caution: Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.
s	Within 3 minutes after the machine is supplied with power and turned on with the remote control, check whether the compressor can start up
	YES
t	At first, the compressor start up, soon the compressor stopped with the LED1 on the outdoor PCB blinks (1Hz) 19/18 times
	Malfunction unsolved

↓ Malfunctions exist also, the compressor is damaged replace a new one


Maybe there is some disturbance

	10.4.12	High work-intense protection
	Outdoor display	E9 LED1 flash 21 times
	Method of Malfunction Detection	High work-intense control is activated in the heating mode if the temperature being sensed by the heat exchanger thermistor exceeds the limit.
	Malfunction Decision Conditions	Activated when the temperature being sensed by the heat exchanger rises above 65°C twice in 30 minutes
ŝ		 Faulty electronic expansion valve
	Supposed	 Dirty heat exchanger
	Causes	 Faulty heat-exchange sensor
ŝ	-	Insufficient gas
	Trouble shooting	* Caution: Be sure to turn off power switch before connect or disconnect connector, or parts damage may be occurred.
	on wit wheth 65℃	ify the machine again and turn it th the remote control, check her the wind temperature is below The malfunction is reported after the machine has run for some time? NO
	Use som	The indoor unit blows poorly due to blocked filters or poor condition of the fan? NO e tools to measure the pressure of system

11.Performence and curves diagrams


11.1 Cooling capacity-temperature curves

	performance curves												
					coolin	g value-te	merature t	able					
indoor temp.													
DB/WB	-20°C	- 15 ℃	- 10° ℃	0°C	8°C	15℃	20° ℃	25°℃	30° ℃	35 ℃	38° ℃	40° ℃	43 ℃
21/15℃	2360	2767	3122	3158	3278	3325	3453	3522	3855	4148	4126	3884	3641
24/16°C	2471	2847	3289	3384	3500	3510	3723	3707	4053	4326	4270	4093	3826
27/19°C	2805	3191	3619	3805	3813	3960	4086	4131	4492	4841	4837	4656	4357
30/22°C	2925	3375	3825	3960	4050	4140	4320	4410	4725	5175	5040	4860	4545
32/23°C	3145	3631	4096	4222	4266	4414	4628	4726	4943	5403	5333	5130	4760
35/24°C	3222	3675	4152	4302	4480	4563	4737	4839	5169	5656	5510	5434	4995

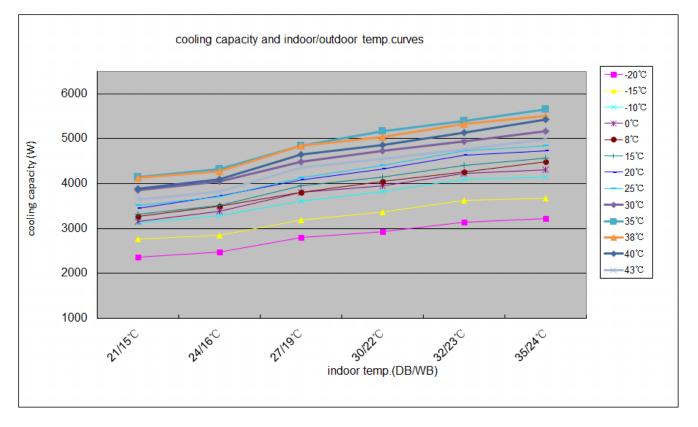


11.2 Cooling power consumption value- temperature curves

	performance curves												
				pov	ver consu	mption va	lue-temp.	table					
indoor temp.													
DB/WB	- 20 ℃	-15℃	-10℃	0°C	3°C	15°C	20°C	25°C	30°C	35°C	38 ℃	40 ℃	43 ℃
21/15℃	492	644	800	902	1057	1073	1114	1136	1244	1338	1331	1253	1174
24/16°℃	515	662	843	967	1094	1097	1163	1196	1308	1395	1377	1320	1234
27/19°C	584	742	928	1087	1155	1200	1238	1332	1449	1562	1560	1502	1405
30/22°C	609	785	981	1131	1191	1218	1271	1423	1524	1669	1626	1568	1466
32/23°C	655	844	1050	1206	1219	1261	1322	1524	1594	1743	1720	1655	1536
35/24°C	671	855	1065	1229	1245	1268	1316	1561	1667	1824	1777	1753	1611

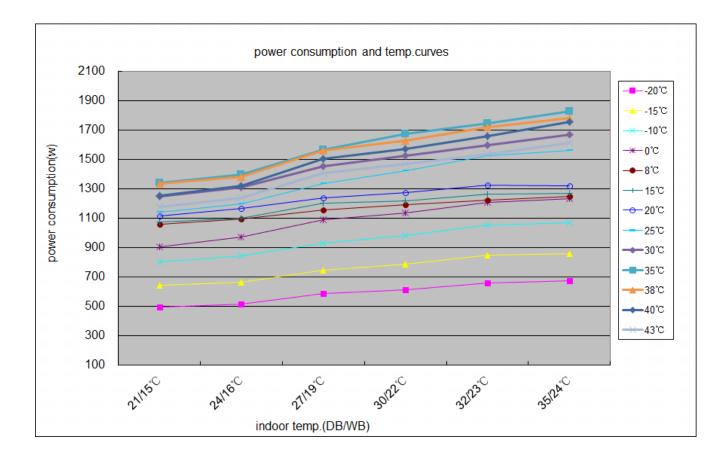


11.3 Cooling discharge pressure curves

	performance curves							
	cooling discharge pressure.table							
outdoor temp. (humidity 46%) indoor temp.								
DB/WB	<mark>21/15</mark> ℃	27/19°C	35/24°C					
-20°C	1145	1210	1271					
-15°C	1275	1315	1385					
-10°C	1341	1420	1508					
3°0	1514	1578	1678					
3°C	1664	1710	1814					
15℃	1775	1841	1915					
20°C	1969	2025	2142					
25°C	2040	2157	2271					
30°C	2231	2341	2492					
35°C	2396	2499	2656					
38°C	2534	2683	2824					
40°C	2882	3025	3216					
43°C	3237	3419	3601					

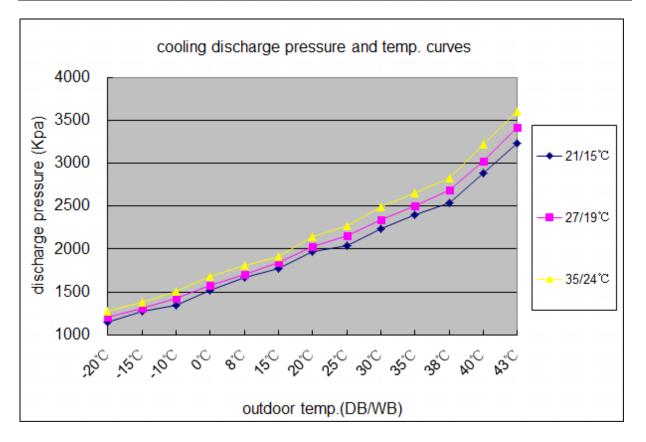


11.4 Cooling suction pressure curves

performance curves cooling suction pressure.table							
outdoor temp. (humidity 46%)							
DB/WB	21/15℃	27/19°C	35/24°C				
-20°C	602	741	853				
- 1 5℃	627	772	888				
- 10 ℃	653	805	925				
0°C	680	838	964				
8°C	701	864	994				
15°C	716	882	1014				
20°C	723	891	1024				
25℃	761	900	1045				
30°C	801	947	1056				
35°C	843	956	1111				
38°C	887	986	1134				
40 ℃	976	1085	1247				
43 ℃	1074	1171	1360				

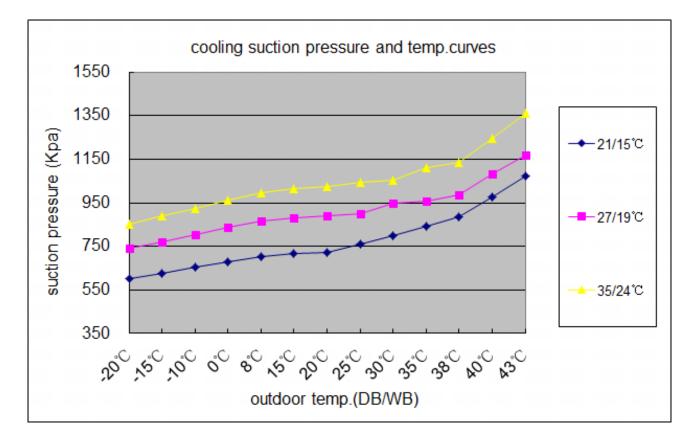


11.5 Heating capacity-temperature curves

	performance curves					
	heating capacity a	nd indoor/outdoor temp.tabl	e			
outdoor temp.	print mant mant mant ma	indoor temp.(humidity 46%)	non non non non non			
DB/WB	10°C	20℃	27℃			
-25°C	3043	2921	2556			
-20°℃	3286	3032	2629			
-15℃	3998	3724	3286			
-10°C	4546	4156	3834			
-7/-8°C	5586	5065	4707			
2/1℃	5972	5270	4779			
7/6° ℃	5812	5368	4776			
<mark>12/11</mark> ℃	5676	5113	4179			
18/16 [°] C	5203	4958	3911			
24/20°℃	4879	4486	3519			

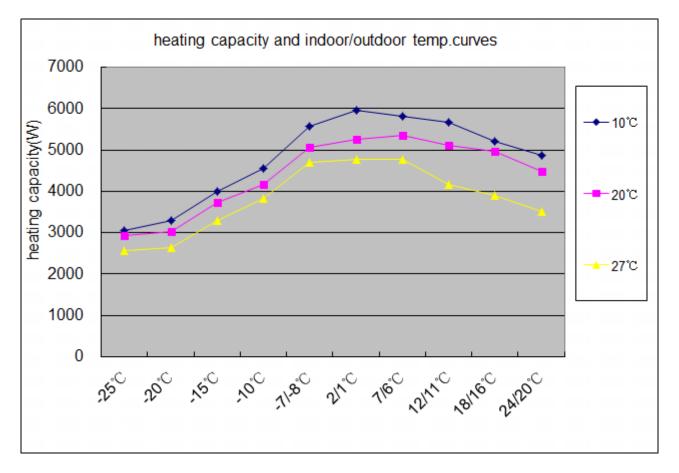


11.6 Heating power consumption value- temperature curves

	performance curves						
	power con	sumption value-temp.table					
outdoor temp.		indoor temp.(humidity 46%)					
DB/WB	10°C	20°C	27°C				
-25°C	1533	1803	1911				
-20°C	1596	1877	1990				
-15°C	1688	1940	2056				
-10°C	1781	1979	2078				
-7/-8°C	1861	2067	2171				
2/1°C	1987	2091	2196				
7/6℃	1908	1988	2087				
12/11°C	1556	1673	1841				
18/16°C	1162	1291	1420				
24/20°C	1030	1144	1259				

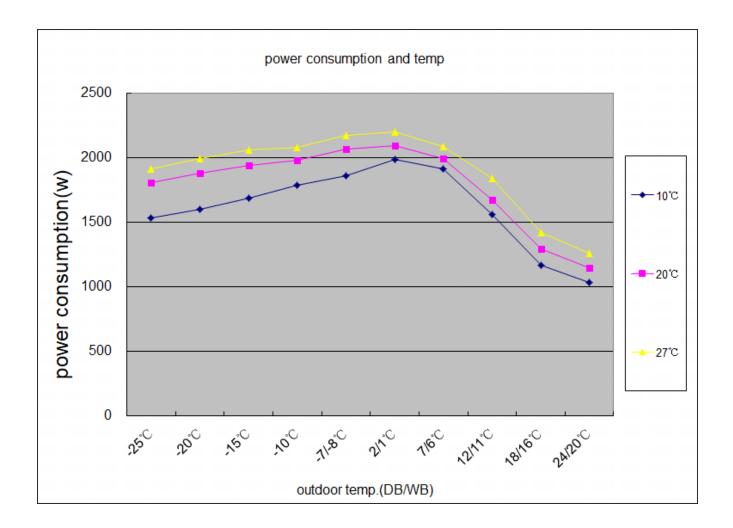


11.7 Heating discharge pressure curves

	performance curves heating discharge pressure.table			
	neating disci	large pressure.table		
outdoor temp	an nan nan nan nan	indoor temp.		
DB/WB	10°C	20°C	27°C	
-25°C	2027	2112	2187	
-20°℃	2359	2464	2538	
- 1 5℃	2565	2658	2724	
-10°C	2924	3062	3201	
-7/-8°℃	3200	3344	3427	
2/1°C	3426	3626	3739	
7/6℃	3382	3520	3655	
12/11℃	3184	3344	3534	
1 8/16℃	2974	3143	3237	
24/20°C	2518	2672	2806	

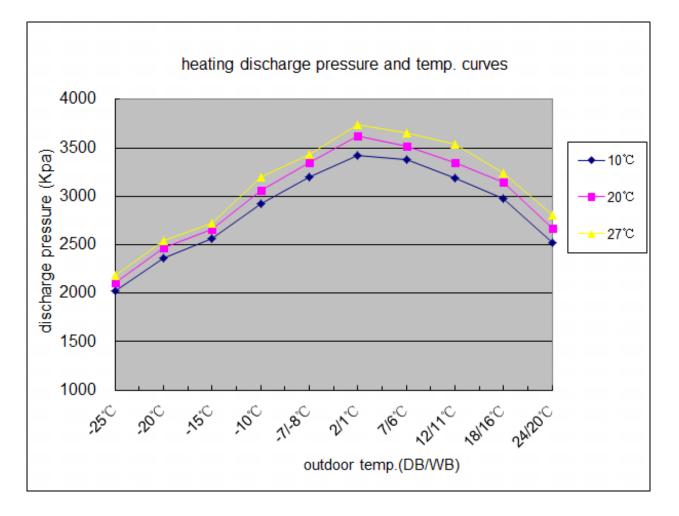


11.8 Heating suction pressure curves


performance curves					
	heating suction pressure.table				
outdoor temp		indoor temp.			
DB/WB	10°C	20°C	27°C		
-25°C	247	282	300		
-20°C	277	312	330		
-15°C	361	396	414		
-10°C	418	444	462		
-7/-8°C	513	548	566		
2/1°C	632	667	685		
7/6°C	765	800	818		
12/11°C	871	906	924		
18/16°C	1038	1073	1091		
24/20°C	1224	1259	1277		

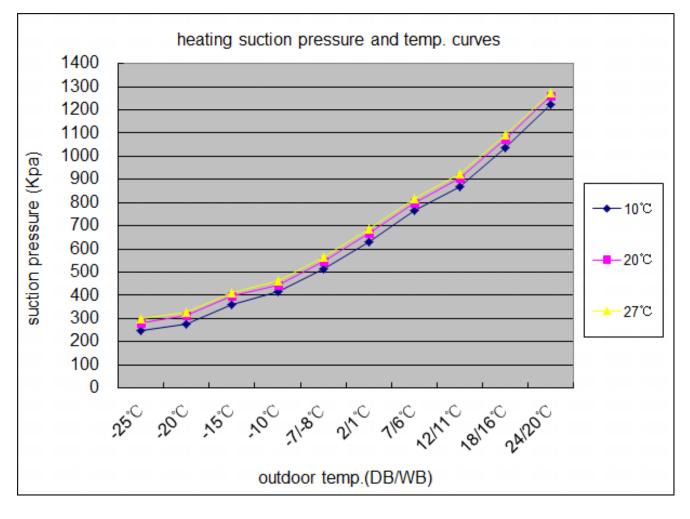


12. Circuit diagrams

12.1 Outdoor unit control board circuit diagrams

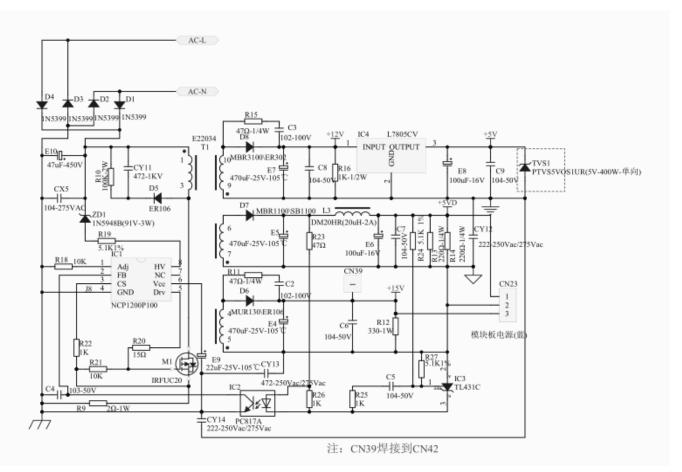

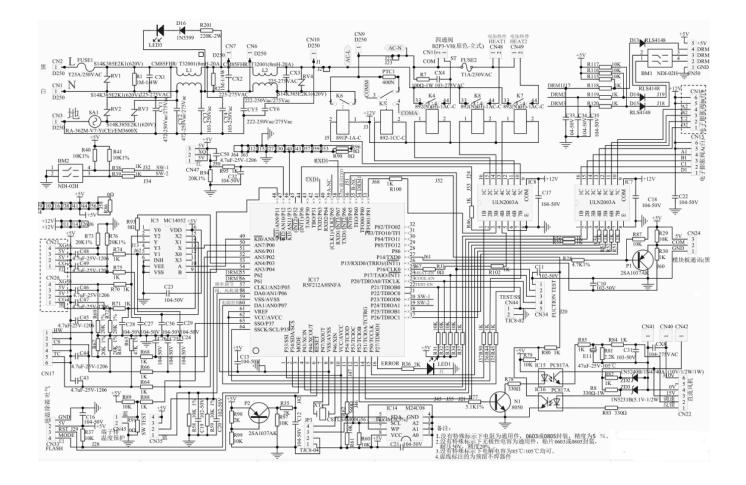



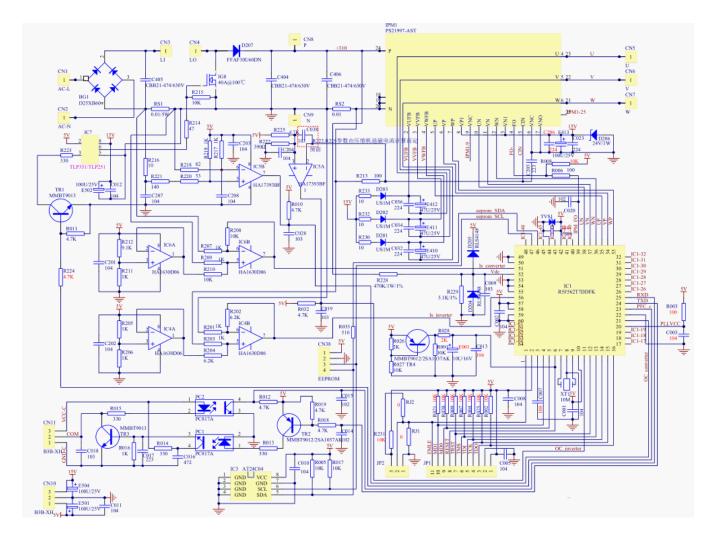

12.2 Module board circuit diagram

13. Removal Procedure


Remove of front panel

Outdoor unit

Step		Procedure	Points
1.Featu	res		
1	Loosen the service cover screw and remove the service cover.		Be careful not to cut your finger by the fins of the heat exchanger



Ste	p Procedure Points	Step Procedure Points	Step Procedure Points
2. Remo	ve the panels.		
1	Loosen the 7 screws and lift the top panel		
2.	Loosen the screws of the panel.		
3	Pull and remove the front panel.		

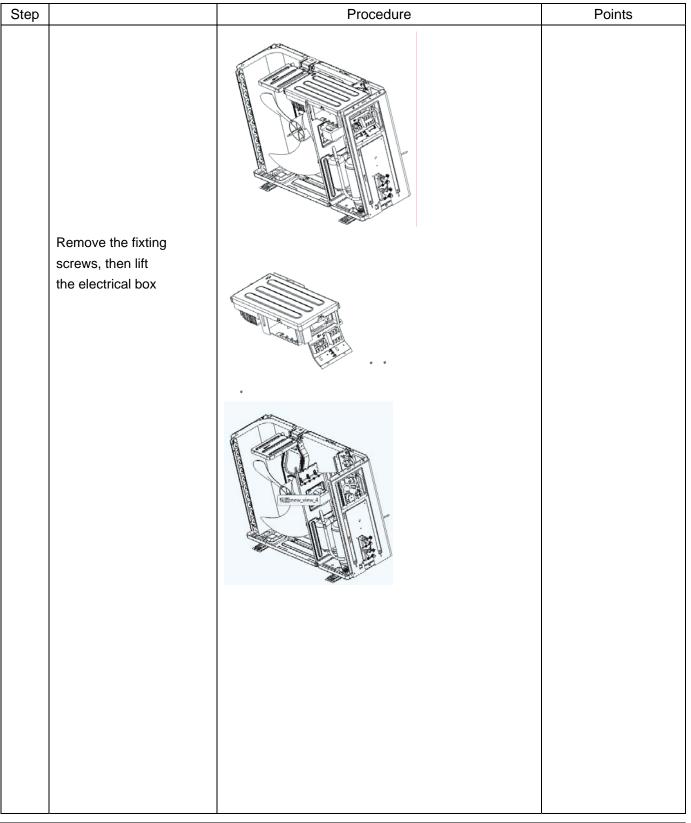

Remove the air filters and horizontal flap

Step	e the air litters and horizon	Procedure	Points
1	Loosen the fixting screws and remove		
2	The back protect net .		
1	Loosen the fixting screws and remove the side panel.		



Remove the casing

Step	ve the casing	Procedure	Points
1	Loosen the fixting screws and remove the side panel.		
	Loosen the fixting screws and remove the cross beam.		
2			

Step		Procedure	Points
3	Loosen the fixting screws remove the fan		
	Loosen the fixting screws and lift the fan motor.		



Release stepping motor (2type)

Step	e stepping m	Procedure	Points
1	Remove the fixing screws,then lift the fan motor bracket		
2	Cut down the and pull out the compressor and remove the		



Removal of Heat Exchanger

	Procedure	Points
Loosen the marked fixing screws		
Loosen the fixting hook and remove the heat exchanger		
	marked fixing screws	Loosen the marked fixing screws



Step		Procedure	Points
	Remove the fixing screws,then lift the heating pipe		
	Remove the fixing screws,then lift the valves	· · ·	

Step		Procedure	Points
	Remove the fixing screw,then lift the valve set		



Generalny Dystrybutor Systemów Klimatyzacji i Pomp Ciepła w Polsce:

REFSYSTEM Sp. z o. o.

ul. Metalowców 5 86-300 Grudziądz +48 723 737 378 www.haier-ac.pl

Producent:

Qingdao Haier Air Conditioner Electric Co., Ltd.

Haier Industrial Park, Qianwangang Road, Eco-Tech Development Zone, Qingdao 266555, Shandong, R.P.C. +86 532 88936943 www.haier.com

Haier zastrzega sobie prawo do wprowadzania zmian bez wcześniejszego powiadomienia.